

SCH-r610 Series

**P O R T A B L E T R I - M O D E
M O B I L E P H O N E**

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein St.
Richardson, TX 75082	Plano, TX 75074
	Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2007 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungwireless.com/support

GH68-15744A

Licensed by Qualcomm Incorporated under one or more of the following patents:
U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in Korea.

Openwave® is a registered Trademark of Openwave, Inc.

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	4
Understanding this User Manual	4
Activating Your Phone	5
Charging the Battery	7
Setting Up Your Voicemail	8
Section 2: Understanding Your Phone	9
Features of Your Phone	9
Closed View of Your Phone	10
Open View (Front) of Your Phone	11
Open View (Back) of Your Phone	13
Command Keys	14
Right Soft Key	14
Understanding the Display Screen	16
Your Phone's Modes	17
Section 3: Call Functions	21
Making a Call — Number Entry Dialing	21
Making a Call — Speed Dialing	23
Making a Call — Quick Search Dialing	24
Making a Call — Voice Dialing	25
Answering a Call	27
Ignoring a Call	28
Adjusting the Call Volume	28
Calls Log	28
Roaming	34
Section 4: Menu Navigation	36
Menu Navigation	36
Menu Shortcuts	37
Navigation Key Shortcuts	37
Navigate Using a Shortcut	37
Menu Shortcuts Outline	37
Section 5: Entering Text	44
Changing the Text Entry Mode	44
Using T9® Mode	45
Using Abc Mode	46
Entering Symbols	46
Entering Numbers	47
Section 6: Understanding Your Contacts	48
Your Contacts List	48
Adding a New Contacts Entry	49
Finding a Contacts Entry	52
Editing an Existing Contact Entry	55

Assigning Speed Dial Numbers	57
Renaming a Contacts Group	62
Deleting a Contacts Entry	63
Memory Info	63
Section 7: Messaging	64
Types of Messages	64
Create and Send Text Messages	65
Send Picture Messages in Camera Mode	66
Send Picture Messages in Standby Mode	68
Receive Messages	70
Message Folders	71
Erase Messages	76
Message Settings	77
Section 8: easyedgeSM	80
easyedge SM Features	80
Accessing easyedge SM	80
Section 9: Display	84
Display Settings	84
Menu Style	85
Wallpaper	85
Clock Format	85
Theme	86
Dialing Font	86
Banner	87
Backlight	87
Section 10: Sounds	88
Volume	88
Ringer Type	89
Alerts	89
Key Tone	90
Section 11: Camera-Camcorder	91
Taking Pictures and Videos	91
Screen Layouts	94
Saving Pictures and Videos	97
Camera Options	97
Camcorder Options	105
Zoom	111
Brightness	111
My Images	111
Point, Click, and Send Pictures and Videos	112
Section 12: Multimedia	114
Accessing Multimedia	114
My Images	115
My Videos	116

My Ringtones	116
My Sounds	117
Music Library	120
Section 13: Tools	125
Tools Menu	125
Voice Service	126
Bluetooth	131
Calendar	133
Memo Pad	134
Alarm Clock	135
World Time	136
Calculator	137
Stop Watch	138
Converter	138
Tip Calculator	140
Section 14: Changing Your Settings	142
Accessing Your Settings	142
Location	143
Call Settings	143
Phone Settings	146
Memory Info	153
Phone Info	154
Section 15: Health and Safety Information	155
Health and Safety Information	155
Samsung Mobile Products and Recycling	157
UL Certified Travel Adapter	157
Consumer Information on Wireless Phones	157
Road Safety	164
Responsible Listening	165
Operating Environment	167
Using Your Phone Near Other Electronic Devices	167
Potentially Explosive Environments	169
Emergency Calls	170
FCC Notice and Cautions	171
Other Important Safety Information	171
Product Performance	172
Availability of Various Features/Ring Tones	173
Battery Standby and Talk Time	173
Battery Precautions	173
Care and Maintenance	175
Section 16: Warranty Information	176
Standard Limited Warranty	176
Index	181

Section 1: Getting Started

Topics Covered

- Understanding this User Manual
 - Activating Your Phone
 - Charging the Battery
 - Setting Up Your Voicemail
-

This section explains how to start using your phone by activating your service, setting up your voicemail, or getting an understanding of how this manual is put together.

Understanding this User Manual

The chapters of this guide generally follow the same order as the menus and sub-menus in your phone. A robust index for quick reference to most features begins on page 181.

Also included is important safety information that you should know before using your phone. Most of this information is near the back of the guide, beginning on page 155.

Notes and tips

Throughout this guide are icons and text that are set apart from the rest. These are intended to point out important information, quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes** — Explain alternative options within the current feature, menu, or sub menu.
- **Tips** — Provide quick or innovative methods for performing functions related to the subject at hand.
- **Important** — Points out important information about the current feature that could affect performance, or even damage your phone.

Activating Your Phone

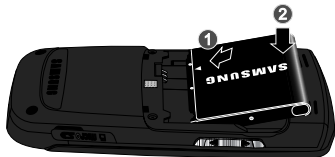 
Contact U.S. Cellular and follow their instructions for obtaining service, if necessary. We suggest that you read this guide to fully understand the services your phone supports.

Install the Battery

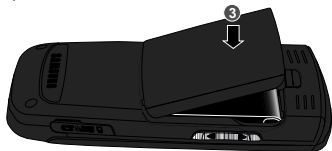 
Note: Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter.

Important! You must fully charge the battery the first time you use your phone, otherwise you could damage the battery.

1. Insert the bottom end of the battery first, matching the gold contacts on the bottom of the battery to those inside the phone.
2. Press lightly on the top end of the battery down into the phone until it slips into place.




3. Place the battery cover over the battery so that the bottom pins enter the holes at the bottom of the battery compartment, then press down on the battery cover until it clicks into place.



Activating Your Phone

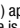
Turn Your Phone On

1. Open your phone by pushing the slide up.
2. Press and hold the  key.
3. The phone begins searching for a network signal.
4. Once the phone finds a signal, the time, date and day appear in the bottom of the display.
5. You're now ready to open the slide on your phone and to place and receive calls.





Tip: Your phone has an internal antenna. Do not touch the phone case over the antenna while using your phone as this can affect call quality and can cause the phone to operate at a higher power level than is necessary.



Note: If you are outside of your carrier's coverage or roaming area, the No Service icon () appears at the top of the phone's display. If you cannot place or receive calls, try later when service is available, or at another location.


Turn Your Phone Off

1. Push the slide up to open your phone.
2. Press and hold the  key for two or more seconds. Your phone powers off.

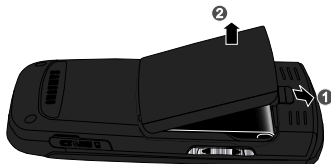 
Note: If your phone is on and you press  for less than one second, the phone will not power off. This prevents your phone from being turned off accidentally.

Remove the Battery

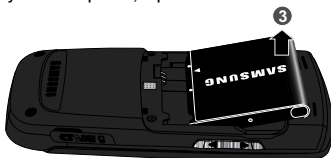 
Important!: You must unplug the Travel Adapter (if it is connected) before removing the battery from the phone during charging to avoid damage.

1. If your phone is on, do the following:
 - Push the slide up to open your phone.
 - Press and hold the  key to turn off the phone.
 - Close the phone.

2. Press the battery cover at point (1) and lift the battery cover (2) away from the phone.



3. Lift the battery (3) up and away from the phone, top end first.



 
Charging the Battery

Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. **Using other accessories may invalidate your warranty and may cause damage.**

Use the Travel Adapter

The travel adapter included with your phone is a convenient, light-weight charger that rapidly charges your phone from any 120/220 VAC outlet.

1. Plug the large end of the Travel Adapter into a standard 120 VAC or 220 VAC wall outlet.



Note: For connection to an electrical supply not located in North America, you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.


Setting Up Your Voicemail




2. Insert the smaller end of the Travel Adapter into the charger/accessory connector at the bottom end of your phone.

Note: With the phone turned OFF, a discharged battery recharges fully in approximately 3 hours.



Low battery indicator


The battery indicator () in the upper-right corner of the display indicates power level. Monitor the battery strength and ensure your battery is adequately charged.

- Three bars () indicate a full charge.
 - An empty battery icon () indicates a near empty battery.
 - A blinking empty battery icon () and a tone sounding indicate you have two to three minutes before the battery is too low to operate the phone.
- If you continue to use your phone without charging its battery, the phone shuts down.



Setting Up Your Voicemail

Voicemail allows callers to leave voice messages, which can be retrieved any time.

Note: Once your voicemail account has been set up, you can use the Voicemail folder (under the Message menu) to view details of voice messages in your voicemail box.

1. In standby mode, press and hold the  key or dial your own mobile number to dial voicemail.
2. Follow the prompts in the new user tutorial to setup your mail box.

Listen to voicemail

1. In standby mode, press and hold the  key or dial your own mobile number to dial voicemail. After connecting, you will hear your voice greeting.
2. Interrupt your greeting by pressing .
3. You are then prompted to enter your password.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - Closed View of Your Phone
 - Open View (Front) of Your Phone
 - Command Keys
 - Understanding the Display Screen
 - Your Phone's Modes
-

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

- Domestic and international voice and text messaging service (available on participating networks).
 - High speed data [Third Generation (3G) CDMA2000 1x EV-DO Technology]
 - Global Positioning (GPS) Technology
 - Personal Information Management (PIM) Functions
 - Picture Messaging
 - Video Messaging
 - Text Messaging
 - Stereo Music Player (MP3 compatible)
 - microSD™ Memory Card Slot
 - VGA (1.3 Mega Pixel) Camera with Flash
 - Advanced Speech Recognition
 - Speakerphone
 - Bluetooth® Wireless Technology**
-

** The SCH-r610 supports the wireless handsfree profile, serial port profile, and dial-up networking profile for Bluetooth® wireless technology. The SCH-r610 does not support all Bluetooth OBEX profiles.

Closed View of Your Phone



Features

1. **Earpiece/Speaker** — Lets you hear the other caller.
2. **Front Display** — Indicates the status of your phone, including numbers dialed, feature and function screens, status icons, message indicators, signal strength, and so on.
3. **Volume Key** — Lets you adjust the ring volume in standby mode, adjust the voice volume during a call, or mute the ringer during an incoming call.
4. **Memory Card Slot** — Lets you insert a microSD™ Memory Card for additional storage of multimedia files.
5. **Power/Accessory Connector** — Used to plug in charging accessories and to connect a headset or any available accessory cables to your phone.
6. **Camera Key** — Launches the Camera feature and/or the Camcorder feature of your phone.

Open View (Front) of Your Phone



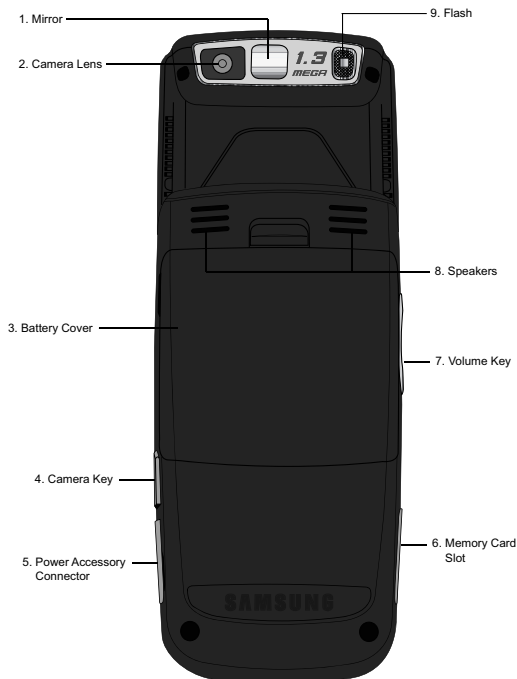 
Features

1. **Earpiece** — Lets you hear the other caller.
2. **Display** — Indicates the status of your phone, including numbers dialed, feature and function screens, status icons, message indicators, signal strength, and so on.
3. **Volume Key** — Lets you adjust the ring volume in standby mode, adjust the voice volume during a call, or mute the ringer during an incoming call.
4. **Navigation Key** — In Menu mode, lets you scroll through the phone menu options. In Standby mode, lets you access preset functions and one user-defined function.

Open View (Front) of Your Phone

5. **Left Soft Key** — Used to navigate through menus and applications and to select the choice indicated at the bottom left corner of the Main LCD.
6. **SEND Key** — Lets you place or receive a call. In standby mode, press the key once to access the recent call log.
7. **CLR Key** — Deletes characters from the display when you are in text entry mode. Press this key to return to the previous menu or screen when navigating features on your phone.
8. **Memory Card Slot** — Lets you insert a microSD™ Memory Card for additional storage of multimedia files.
9. **Special Function Keys** — Enter special characters. Performs various functions.
10. **Microphone** — Lets the other caller hear you clearly when you are speaking to them.
11. **Voice Recognition Key** — In standby mode, pressing and holding this key launches VoiceSignal options.
12. **Power/Accessory Connector** — Used to plug in charging accessories and to connect a headset or any available accessory cables to your phone.
13. **Alpha-numeric Keys** — Use these keys to enter numbers, letters, and characters.
14. **Camera Key** — Launches the Camera feature of your phone.
15. **END Key** — Ends a call. If you press and hold the END key, the power goes On or Off. When you receive an incoming call, press to send the call to voicemail.
16. **OK Key** — Pressing when navigating through a menu accepts the highlighted choice in a menu.
17. **Right Soft Key** — Used to navigate through menus and applications and to select the choice indicated at the bottom right corner of the Main Display.

Open View (Back) of Your Phone





Features

1. **Mirror** — Lets you position the Camera Lens to take self portraits.
2. **Camera Lens** — The lens of your built-in camera.
3. **Battery Cover** — Lets you access your phone's battery.
4. **Camera Key** — Launches the Camera feature and/or the Camcorder feature of your phone.
5. **Power/Accessory Connector** — Used to plug in charging accessories and to connect a headset or any available accessory cables to your phone.

Command Keys





6. **Memory Card Slot** — Lets you insert a microSD™ Memory Card for additional storage of multimedia files.
7. **Volume Key** — Lets you adjust the ring volume in standby mode, adjust the voice volume during a call, or mute the ringer during an incoming call.
8. **Speakers** — Enabled by Speakerphone key or Media Player for handsfree operation or to play music.
9. **Flash** — Lets you take pictures or videos with your phone's Camera-Camcorder feature in low light.

Command Keys

Functions for the soft keys are defined by what appears above each in the display. There are two soft keys, the Left soft key () and the Right soft key (.





Left Soft Key

Some functions of the left soft key are as follows.



- In standby mode, press the **Message** (left) soft key () to open the Messages menu.
- In a Memo or in the Calendar screen, press the **Add** (left) soft key () to add a text Memo or a new Event.
- When the left soft key function is Edit, press the **Edit** (left) soft key () to edit a Contact.
- When the left soft key function is Options, press the **Options** (left) soft key () and a pop-up menu appears.



Right Soft Key

Some functions of the right soft key are as follows.



- In standby mode, press the **Contacts** (right) soft key () to open the Contacts list (**Find** screen).
- When the right soft key function is Back, press the **Back** (right) soft key () to back up one menu level.
- When the right soft key function is Options, press the **Options** (right) soft key () and a pop-up menu appears.
- In a message, press the **Add** (right) soft key () to add a Contact to the Send To list.





OK Key

- In standby mode, press the **MENU** key () to open the main menu.
- In a menu, press the **OK** key () to accept the highlighted selection.





- In camera mode, press the **Take** key () to take a photo or to create a Pic message.
- When the **OK** key function is EDIT, press the **EDIT** (OK) key () to edit a Draft message.

Clear Key


The **CLR** key () is used to erase or clear numbers, text, or symbols from the display. You can also use the  key to return to a previous menu or to return to standby mode from any menu.







1. If you enter an incorrect character, briefly press  to backspace (and delete) the character.
2. To erase the entire sentence, press and hold .
3. To back up one menu level, briefly press .
4. To return to standby mode, press and hold  until you return to standby mode.

End Key


1. In standby mode, press and hold the **END** key () to turn your phone off.
2. Briefly press  once to disconnect a call.
3. Press  to return to standby mode from any menu, or to cancel the last input.
4. When your phone is turned off, press  to turn your phone on.

Send Key

The **Send** key () is used to answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.

1. Press  once to answer calls.
2. Enter a number and briefly press  to make a call.
3. Briefly press  in standby mode to display a list of recent calls to and from your phone.
4. Press  twice in standby mode to call the most recent number.
5. Press  to pick up a waiting call. Press  again to switch back to the other call.

Navigation Key

Use the directional keys on the navigation key () to browse menus, sub-menus, and lists. Each key also acts as a shortcut to launch applications.

Camera Key

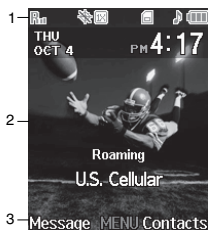 
In standby mode, momentarily press the Camera key to activate the camera built into your phone.

In standby mode, press and hold the Camera key to activate the camcorder built into your phone.

In camera or camcorder mode, momentarily press the Camera key to switch between camera and camcorder modes

Understanding the Display Screen

1. The top line of your phone's main display contains icons that indicate network status, battery power, signal strength, connection type, and more.
2. The center portion of the main display shows information such as call progress information, messages, and photos.
3. The bottom line of the main display shows current soft key functions. The sample screen shows that:
 - Pressing the Left soft key (**⏮**) will show the **Messages** menu.
 - Pressing the **OK** key will show the Main Menu.
 - Pressing the Right soft key (**⏭**) will show the Contacts list, **Find** screen.



Display Screen Icons

Your SCH-r610 phone can show you definitions of the icons that appear on the top lines of the front and main displays. To access the Icon Glossary:

- ▶ In standby mode, press the **MENU** key (**⏮**), then press **9** (for **Settings**), **5** (for **Phone Info**), and **2** (for **Icon Glossary**). A list shows of the icons that can appear on the top line of the display.

Dialogue Boxes

Dialogue boxes prompt for action, inform you of status, or warn of situations such as low memory. Dialogue boxes and their definitions are outlined below.

- **Choice**
 - Example: "Save message?"
- **Reconfirm**
 - Example: "Erase all messages?"
- **Performing**

- Example: "SENDING..." "Connecting..."
- **Completed**
 - Example: "Message saved in drafts"
- **Information**
 - Example: "New Message"
- **Error**
 - Example: "System Error!"
- **Warning**
 - Example: "Battery Low," "Memory Full!"

Backlights

Backlights illuminate the internal and external displays and the keypad. When you press any key or open the phone, the backlights come on. They go off when no keys are pressed within a period of time set in the **Backlight** menu.




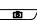


Note: During a phone call, the display backlights dim and turn off after ten seconds to conserve battery power, regardless of the **Backlight** setting.

See "Display" on page 84 for more information.


Your Phone's Modes

Call Answer Mode


You can select how you wish to answer a call.

1. In standby mode, press the **MENU** key () , then press **9** (for **Settings**), **2** (for **Call Settings**), and **1** for **Call Answer**. The following call answer options appear in the display:
 - **Any Key** — Pressing any key except the  key,  key, or  key answers a call.
 - **Send Key** — Only pressing  answers a call.
 - **Slide Up** — Sliding the phone open or pressing  answers a call.


Tip: You can set your phone to answer calls automatically, without any input from you. (See "Auto Answer" on page 144 for more information.)

2. Use the navigation keys to highlight an option.
3. Press the  key to select the method for answering calls.

Input mode

Input mode determines how you enter text, numbers and symbols. While at any text entry screen, press the Left soft key () , then choose the input mode from the

pop-up menu using the navigation keys. Optional input modes are **T9 Word**, **Abc**, **ABC**, **123**, and **Symbols**. (See “*Entering Text*” on page 44 for more information.)


Tip: You can also cycle between **T9 Word**, **Abc**, and **123** by repeatedly pressing and holding the  key.

Lock Mode



When the phone is in Lock mode, restrictions are placed on phone use. You can receive calls and messages, but cannot place outgoing calls (except for emergency numbers) until you unlock the phone. Lock mode also restricts access to menus and the volume key. Unlock your phone by entering the lock code when prompted. (See “*Lock Phone*” on page 147 for more information.)

Standby Mode

Standby mode is the state of the phone once it has found service and is idle. The phone goes into standby mode:

- After you power the phone on.
- When you press  after a call or from within a menu.

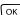
In standby mode, you will see the time, day, and date as well as all phone status icons.

1. While in standby mode, enter a phone number, and press  to place a call.
2. Press  to return to standby mode.


Receive Messages in Standby Mode

You can receive messages in standby mode. An alert tone sounds and a notification message appears in the display when a new message arrives. The following options also appear in the display:

- **View Now**
- **View Later**



Use the navigation keys to highlight the desired option and press the  key.

Talk Mode

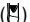
You can place and receive calls only when your phone is on. While in a call your phone is in talk mode. Press the **Options** (right) soft key () to display a list of menu options. See “*The In-Use Options Menu*” on page 27 for more information.


Enter/Exit Silent Mode

Silence the tones your keypad makes when you press a key.


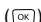
- In standby mode, press and hold . "Entering Silent Mode" briefly appears in the display and your phone returns to standby mode.
- While in Silent mode and standby mode, press and hold . "Exit Silent Mode" briefly appears in the display and your phone returns to standby mode.


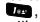
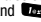
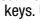
Vibrate Mode


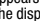
- ▶ In standby mode, repeatedly press and the **Down** volume key () until **Vibrate** appears in the display.

The volume key is on the upper left side of phone, near the Left soft key ().

Adjust the Voice Call Ringer

1. In standby mode, press the volume key () on the left side of the phone up or down. Options are:
 - **Ringer Off**
 - **Vibrate**
 - **Low**
 - **Low/Medium**
 - **Medium**
 - **Medium/High**
 - **High**
 - **Vibrate/High**
2. When you are satisfied with the setting, press the **SET** () key. Your phone returns to standby mode.


Tip: You can also select the **Voice Calls** value by pressing the **MENU** key () , then pressing the , , and  keys. Use the Volume key on the left side of your phone to adjust the ringer volume setting.

Note: The Vibrate icon () appears in the display when the phone is in Vibrate mode. The Vibrate/High icon () appears in the display when the phone is in or Vibrate/High mode.

Camera Mode

Camera mode lets you activate your phone's camera to take pictures. In Camera mode, you can also adjust the resolution and appearance of your pictures.

See “*Camera-Camcorder*” on page 91 for more information.

- **Entering Camera Mode** — In standby mode, press and hold the Camera shortcut (left navigation) key.
- **Exiting Camera Mode** — Press the  key.


Section 3: Call Functions

Topics Covered

- Making a Call — Number Entry Dialing
 - Making a Call — Speed Dialing
 - Making a Call — Quick Search Dialing
 - Making a Call — Voice Dialing
 - Answering a Call
 - Ignoring a Call
 - Adjusting the Call Volume
 - Calls Log
 - Roaming
-


This section explains how to make and answer calls. This section also includes the features and functionality associated with making or answering calls.

Making a Call — Number Entry Dialing

1. With the phone on, enter the number you wish to call using the keypad.
2. Press the  key to place the call.

Dialing Emergency Numbers

To place an emergency call:

1. With the phone on, enter 911 using the keypad.
2. Press the  key to place the call.

You can specify other numbers as emergency numbers using the **Emergency #** settings. (See “*Emergency #*” on page 149 for more information.)

Important: Emergency number 911 is preset into your phone. You can dial this number almost any time, even when the phone is locked or restricted.


If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

Important!: Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

Important!: DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.


Dialing International Numbers


Call Another Country — Manual Method


1. In standby mode, enter **011** (the three-digit exit code for the United States).
2. Enter the country code for the country that you are calling.
3. Enter the number that you wish to call, then press the  key.

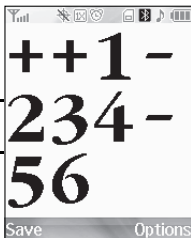 
Note: Puerto Rico and Canada are on the North American dialing plan. Making calls to Puerto Rico and Canada is similar to making calls within the United States, no unique country codes are necessary.

Call Another Country — Shortcut Method


1. In standby mode, press and hold the  key until a plus sign (+) appears in the display.


Note: When you press the  key, your phone automatically replaces this + with 011, the three-digit exit code for the United States.

2. Enter the country code for the country that you are calling, or press and hold the  key until a second plus sign (+) appears in the display.



Tip: If you place most or all of your international calls to numbers in the same country, set-up the **International Dialing** shortcut to dial that country's code for you. (For more information, see "International Dialing" on page 147)


Note: When you press the  key, your phone automatically replaces the second + with the two-digit country code you have selected for the **International Dialing** shortcut.

3. Enter the number that you wish to call, then press the  key.





Manual Pause Calling


When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **2-Sec Pause** — P pause — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.
- **Wait** — W pause — A hard pause stops the calling sequence until you press the  key.

To manually call a number with pause(s) without storing it to your Contacts:

1. Enter the number you wish to call.
2. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **2-Sec Pause** — a two-second pause.
 - **Wait** — a hard pause (awaits input from you).
3. Use the navigation keys to highlight the desired pause option.
4. Press  to enter the highlighted pause into your number sequence.

Note: If you select **2-Sec Pause**, **P** appears in the display. If you select **Wait**, **W** appears in the display.


5. Press  to call the number.

Making a Call — Speed Dialing

You can store phone numbers and contact names in your phone's Contacts list. Speed Dialing lets you quickly and easily dial any contact in your Contacts list by using that contact's location number in the list. You can assign and change location (speed dial) numbers for your contacts. (See *"Assigning Speed Dial Numbers"* on page 61 for more information.)

One-Touch Dialing

Speed Dial numbers 2 through 9 are special One-Touch dialing numbers. You can call the phone numbers stored in your phone's Contacts list and assigned Speed Dial numbers 2 through 9 by pressing and holding a single key.

Example: For Speed Dial number 3, press and hold the  key until the name and number appear in the display and the number is dialed.

Two-Touch Dialing

Memory locations 10 through 99 are special Two-Touch dialing locations.

Example: For location number 13, briefly press the **1** key, then press and hold the **3** key until the name and number appear in the display and the number is dialed.

Three-Touch Dialing

Memory locations 100 through 999 are special Three-Touch dialing locations.

Example: For location number 113, briefly press the **1** key, briefly press the **1** key again, then press and hold the **3** key until the name and number appear in the display and the number is dialed.

Pause Dialing From a Contacts Entry

- If you speed dial a contact that contains (two-second) P pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you speed dial a contact that contains (hard) W pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).

Making a Call — Quick Search Dialing


Use the **Quick Search** feature to dial any number stored in your Contacts list by pressing the number keys that correspond to the first few letters of a Contact name. (For information on enabling **Quick Search**, see “Quick Search” on page 153.)

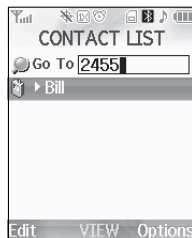 
Quick Search Dialing a Contact

To find and dial a Contact, do the following:

1. In standby mode, press the number keys that correspond to the first few letters of the Contact name, as shown.



2. Press the Up navigation key. The **Contact List** screen appears showing the desired Contact name, as shown.
3. If needed, use the Up and Down navigation keys to highlight the Contact you wish to call.
4. Press  to call the highlighted Contact.



Making a Call — Voice Dialing

Your r610 mobile phone includes state-of-the-art voice recognition software that lets you dial numbers using your voice.

Using Voice Dial


Use the **Voice Dial** command to dial any number stored in your Contacts list by saying the name of the contact (Name Dialing). You can also use Voice Dial to dial any valid telephone number, even numbers not stored in your Contacts list, by speaking the individual digits in the number (Digit Dialing).

Voice Dialing Tips:

- Wait for the beep before speaking.
- Speak clearly at a normal volume, as if you were talking to someone on the phone.
- When saying a name, say the first name then the last name.




Dialing a Name

To dial a name, do the following:

1. In standby mode, press and hold the  key.
“**Say a Command**” appears in the display and is pronounced through the earpiece.
2. Say, “**Call**”.
You are prompted to “**Say the name or #**”.
3. Speak clearly and say the name of a person in your Contacts list, first name followed by last name.
If the name is recognized, Voice Dial repeats the name and dials the number.

Making a Call — Voice Dialing

If Voice Dial is not sure which name you said, it displays a choice list of up to three names and prompts you with **“Did you say?”** followed by the first name on the list.

4. Say **“Yes”** to confirm the name or **“No”** to hear the next name, or use the keypad to select the correct name from the list. (See *“Choice Lists”* on page 128, for more information.)
 - Press the **Repeat** (right) soft key () to say the name again.
 - Press the **Settings** (left) soft key (), then press the **Exit** (right) soft key () to exit Voice Dial without dialing.

If the recognized name has multiple numbers stored for it (that is, Home, Work, Mobile, and so on), Voice Dial displays the possible choices and prompts you with **“Which number?”**

5. Say one of the following number types:
 - **“Home”**
 - **“Work”**
 - **“Mobile”**

Voice Dial dials the specified number.

Dialing a Number

To dial a number using Voice Dial, do the following:

1. In standby mode, press and hold the **On** key.




“Say a Command” appears in the display and is pronounced through the speaker.

2. Say **“Call”**.

VoiceSignal prompts you to **“Say the name or #”**.

3. Speak clearly and say the telephone number of the person you want to call. *For example, say “7 8 1 5 5 5 6 2 0 0.”*

If it recognizes the number, Voice Dial repeats and dials the number. If Voice Dial is not sure it has recognized the number, it displays a choice list of up to three numbers and prompts you with **“Did you say?”** followed by the first number on the list.

4. Say **“Yes”** to confirm the number or **“No”** to hear the next one, or use the keypad to select the correct number from the list. (See *“Choice Lists”* on page 128, for more information.)
 - Press the **Repeat** (right) soft key () to say the name again.
 - Press the **Settings** (left) soft key (), then press the **Exit** (right) soft key () to exit Voice Dial without dialing.

Pause Dialing From a Contacts Entry


- If you voice dial a contact that contains (two-second) T pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you voice dial a contact that contains (hard) P pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).


Answering a Call

Your phone notifies you of a call in the following ways:

- A ring tone sounds and/or your phone vibrates (Your phone provides seven ring volume settings including: **Ringer Off**, **Vibrate**, **Low**, **Low/Medium**, **Medium**, **Medium/High**, **High**, or **Vibrate/High**, and/or different ring types to distinguish callers.)
- A phone number (unless blocked by the caller) and a name appear in the display (If the caller's number and name are stored in your Contacts list).
- If the caller can't be identified, **Call from unavailable#**, **Call from restricted number**, or no number appears in the display.
- Your phone continues to notify you of the call until one of the following events occurs:
 - You answer the call.
 - You ignore the call.
 - The calling party ends the call.
 - The call is sent to voicemail.

Answering an Incoming Call


- ▶ Slide your phone open, if closed, or press the  key. The ring tone and/or vibration stop and the caller's voice can be heard in the earpiece.

Tip: You can set your phone to automatically answer calls or to answer calls when you press any key but the  key or automatically. (See “*Call Settings*” on page 144 for more information.)

The In-Use Options Menu

You can access numerous menus and features while in a call.

Note: If the call is disconnected while you are accessing the In-Use Option, the In-Use Option disappears from the display and the phone eventually returns to standby mode.


1. While in a call, press the **Options** (right) soft key (). The following menu items appear in the display:

Ignoring a Call

- **Message** — The **Messages** menu appears in the display. (See “Messaging” on page 64 for more information.)
- **Contacts** — The **Find** screen appears in the display.
- **Recent Calls** — View, respond to, and manage your recent outgoing, incoming, and missed calls.
- **Send DTMF** — Send your phone number as DTMF tones.
- **Voice Privacy** — Select **Standard** or **Enhanced** voice privacy.
- **Voice Memo** — Record up to one minute of your phone conversation.
- **Speakerphone** — Allows you to use the speakerphone option.


Do one of the following:

- Use the Navigation key to highlight a menu or feature. Press the **OK** key to open the highlighted menu or to activate the highlighted feature.
- Press the **END** key to exit the menu.


Tip: You can block sound going to the other parties) on this call by pressing the **Mute / Unmute** (left) soft key (). This can reduce noise on conference calls.

Ignoring a Call

When you ignore an incoming call, the call is immediately forwarded to your voice mail.

- ▶ During an incoming call, press the **Ignore** (right) soft key (). The caller is forwarded to your voice mail.

Adjusting the Call Volume

In standby mode, repeatedly press the Volume key () down until the Call Volume Level desired appears in the display. The Volume key is on the left side of phone.

Calls Log

The Calls log retains information about Outgoing, Incoming, and Missed calls. You can also view times for your last call and the time totals for all calls.

Review the Calls Log


1. In standby mode, press the **MENU** key (**OK**), then press **2+END** for **Calls**.
2. Press the number key associated with the Calls log that you wish to review or the function you wish to access:
 - Press **1+END** for **Outgoing Calls**.
 - Press **2+END** for **Incoming Calls**.



- Press **3** for **Missed Calls**.
- Press **4** for **All Calls**.
- Press **5** for **Call Timer**.
- Press **6** for **Data Counter**.

Note: In cases where there is a Contacts match for a Calls log entry, the name associated with the number appears in the display instead of the number.

Outgoing Calls


Your phone retains information about the last 90 outgoing calls and stores them in the Outgoing calls log. You can review the Outgoing calls log for the time and date of a call, as well as other information.

Note: To quickly view your most recent calls, briefly press  in standby mode. Up to 270 of your most recent outgoing, incoming, and missed calls appear in the display.

1. At the **Calls** menu, press **1** for **Outgoing Calls**. A list of your outgoing calls appears in the display.
2. Use the navigation keys to highlight a call, then press the **OPEN** key (**OK**) to view the Name of the called party (if in the Contacts list), the number dialed, the time and date the call was placed, and the duration of the call (in minutes and seconds).
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Details** — Calls to Contacts Only — Shows the entry for the called Contact.
 - **Erase** — Erase the selected call from your Outgoing call log.
 - **Lock/Unlock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Outgoing call log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, Outgoing Calls, Incoming Calls, Roaming Calls, All Calls, Last Reset, and Lifetime Calls.
4. Press the **Msgs** (left) soft key (). launches the **Send Message** menu. The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected number called.
 - **Picture Message** — Lets you send a picture message to the selected number called.


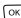


- **Video Message** — Lets you send a video message to the selected number called.

Note: See “Creating and Sending New Messages” on page 69 for more information.


5. Use the navigation keys to highlight an option.
6. Press the  key to perform the highlighted option's function.

Incoming Calls

Your phone retains information about the last 90 Incoming calls and stores them in the Incoming call log. You can review the Incoming call log for the time and date of the call, as well as other information.

1. At the **Calls** menu, press  for **Incoming Calls**. A list of your Incoming calls appears in the display.
2. Use the navigation keys to highlight a call, then press the **OPEN** key () to view the Name of the caller (if in the Contacts list), the originating number, the time and date the call was received, and the duration of the call (in minutes and seconds).
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Details** — Calls from Contacts Only — Shows the entry for the calling Contact.
 - **Erase** — Erase the selected call from your Incoming calls log.
 - **Lock/Unlock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Incoming calls log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, All Calls, Received, Outgoing, Roaming Calls, Lifetime Calls.
4. Press the **Msgs** (left) soft key (). The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected calling number.
 - **Picture Message** — Lets you send a picture message to the selected calling number.
 - **Video Message** — Lets you send a video message to the selected number called.

Note: See “Creating and Sending New Messages” on page 69 for more information.

5. Use the navigation keys to highlight an option.
6. Press the  key to perform the highlighted option's function.

Missed Calls

Your phone retains information about the last 90 missed calls (calls that were never picked up) and stores them in the Missed call log. You can review the Missed call log for the time and date of the call, as well as other information.

1. At the **Calls** menu, press **3 call** for **Missed Calls**. A list of your missed calls appears in the display.
2. Use the navigation keys to highlight a call, then press the **OPEN** key (**OK**) to view the Name of the caller (if in the Contacts list), the originating number, and the time and date the call was received.
3. Press the **Options** (right) soft key (**B**). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Details** — Calls from Contacts Only — Shows the entry for the calling Contact.
 - **Erase** — Erase the selected call from your Missed call log.
 - **Lock/Unlock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Missed call log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, All Calls, Received, Outgoing, Roaming Calls, Lifetime Calls.
4. Press the **Msgs** (left) soft key (**B**). The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected called number.
 - **Picture Message** — Lets you send a picture message to the selected called number.
 - **Video Message** — Lets you send a video message to the selected number called.


Note: See “Creating and Sending New Messages” on page 69 for more information.

5. Use the navigation keys to highlight an option.
6. Press the **OK** key to perform the highlighted option's function.

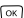
All Calls

You can review all of the calls log entries (outgoing, incoming, and missed calls) for the time and date of a call, as well as other information.

1. At the **Calls** menu, press **4 all** for **All Calls**. A list of all logged calls appears in the display.
2. Use the navigation keys to highlight a call, then press the **OPEN** key (**OK**) to view further information about the call.

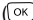


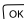

3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Details** — Calls from Contacts Only — Shows the entry for the calling/called Contact.
 - **Erase** — Erase the selected call from your Calls log.
 - **Lock/Unlock** — Protect the selected call from being erased.
 - **Erase All** — Erase all calls from your Calls log.
 - **View Timer** — Shows the number of calls and/or the total time spent on the Last Call, All Calls, Received, Outgoing, Roaming Calls, Lifetime Calls.
4. Press the **Msgs** (left) soft key (). The following options appear in the display:
 - **Text Message** — Lets you send a text message to the selected calling/called number.
 - **Picture Message** — Lets you send a picture message to the selected calling/called number.
 - **Video Message** — Lets you send a video message to the selected number calling/called.

Note: See “Creating and Sending New Messages” on page 69 for more information.

5. Use the navigation keys to highlight an option.
6. Press the  key to perform the highlighted option's function.

Data Call

Your phone retains information about the last 10 data calls and stores them in the Data call log. You can review the Data call log for the time and date of the call, as well as other information.

1. In standby mode, press the **MENU** key (), then press  (for **Calls**) and  for **Data Call**. A list of your missed calls appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Save** — Save the number to your Contacts.
 - **Details** — Calls from Contacts Only — Shows the entry for the calling/called Contact.
 - **Erase** — Erase the selected call from your Data call log.
 - **Lock / Unlock** — Blocks / permits erasure of this Call entry.

- **Erase All** — Erase all calls from your Data call log.
- **Data Counter** — Shows the amount of data Transmitted and Received during this call, the Total amount of data exchanged during this call, and the total amount of data exchanged since the phone was activated.




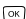

4. Use the navigation keys to highlight an option.

Press the  key to perform the highlighted option's function.

Call Timer

View the duration of your last call, total calls, and calls made during the life cycle of your phone using the Call Timer feature.

Note: Call Timer is not for billing purposes.






1. At the **Calls** menu, press  for **Call Timer**. The following options appear in the display:
 - **Last Call** — View the duration of your last call.
 - **Outgoing Calls** — View the duration of the total outgoing calls made on your phone since the last erasure.
 - **Incoming Calls** — View the duration of the total incoming calls received on your phone since the last erasure.
 - **Roaming Calls** — View the total calls duration on your phone while roaming since the last erasure.
 - **All Calls** — View the duration of the total call, incoming, outgoing, and data calls made on your phone since the last erasure.
 - **Last Reset** — View the time and date all timers were last reset.
 - **Lifetime Calls** — View the duration of all calls since your phone was activated.
2. Press the **Reset** (left) soft key () to reset a selected counter except Last Reset and Lifetime Calls.
3. Press the **Reset All** (right) soft key () to reset all counters except Lifetime Calls.
4. Press the  key or the  key if you wish to exit the list.

Note: Although Total call timers can be erased, the Lifetime call timer can never be erased.

Data Counter

View the amount of Transmit data, Receive data, and Total data transmitted or received since the last time you reset the data counters, and the Lifetime amount of data transmitted or received.


Note: Data Counter is not for billing purposes.

1. At the **Calls** menu, press  for **Data Counter**. The following options appear in the display:
 - **Transmit** — View the total amount of data transmitted by your phone since the last reset.
 - **Received** — View the total amount of data received by your phone since the last reset.
 - **Total** — View the total amount of data sent or received by your phone since the last reset.
 - **Last Reset** — View the time and date all timers were last reset.
 - **Lifetime Data Counter** — View the total amount of data sent or received by your phone since activation (Lifetime Data Counter cannot be reset).
 2. Press the **Reset** (left) soft key () to reset a selected counter except Last Reset and Lifetime Data Counter.
 3. Press the **Reset All** (right) soft key () to reset all counters except Lifetime Data Counter.
 4. Press the  key or the  key if you wish to exit the list.
-

Note: Although Total data counters can be erased, the Lifetime Data Counter can never be erased.

Roaming

What is Roaming?

Roaming lets you use your r610 phone when you travel outside of your Wireless Provider's coverage area. The Roaming icon () appears in the top line of the display when Roaming is active, and extra charges may apply when making or receiving calls.

Note: Some features may be unavailable while roaming. Roaming also consumes additional power from the battery requiring more frequent recharging. Contact your Wireless Provider for more information about Roaming.

How Roaming Works

Roam Option lets you set roaming preferences if you move in and out of your home network. The following roaming options are available:

- **Home only** — Your phone is available for normal operation only in the designated coverage area.

- **Automatic** — Your Wireless Provider's Preferred Roaming List (PRL) of networks is used to acquire service. If no preferred networks are found, any digital system is acquired.




Section 4: Menu Navigation

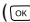
Topics Covered

- Menu Navigation
 - Menu Shortcuts
 - Navigation Key Shortcuts
 - Navigate Using a Shortcut
 - Menu Shortcuts Outline
-


This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.



Menu Navigation

Access the menus and sub menus in your phone using the navigation key () and soft keys ( ), or use a shortcut.



1. In standby mode press the **MENU** key (). The first of several menus appears in the display.

Note: More than one menu may appear in your display. This setting can be modified in the **Display/Menu Style** menu.

Tip: You can launch any of the Main Menus by using a voice command — In standby mode, press and hold  until the phone prompts, “Say a command.” Say “Go to” followed by a Main Menu name into the microphone. For example, Say “Go to easyedge” to access the **easyedge**SM menu.

2. Use the navigation key to browse through the menus.
3. Press  to enter the menu or sub menu that appears in the display.
4. Press the right soft key () **Back** to return to the previous menu.

Return to the Previous Menu

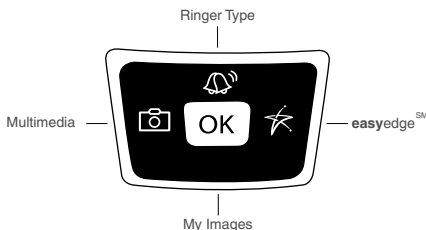 
- Press the right soft key () **Back** to return to a previous menu.
- When **Back** does not appear in the display, press  to return to the previous menu.

Menu Shortcuts

Use shortcuts to quickly access menus and sub menus. Press the **MENU** key (**OK**), then press the number to the left of the menu to jump to the desired menu, sub menu, or feature. For example, to jump to the **Outbox** sub menu, press the **MENU** key (**OK**), then press **3rd** (for **Messages**) and **3rd** for **Outbox**.

Navigation Key Shortcuts

In standby mode, press a navigation key to launch the key's corresponding application.



Navigate Using a Shortcut

You can also access menus and sub menus using menu numbers. Enter the menu number after pressing the **MENU** key (**OK**) to go directly to the menu or sub menu of your choice. Before you can navigate using a shortcut, you'll need the menu or sub-menu number that you wish to access.

Tip: Use the list of menus and sub menus, which begins on page 37, to navigate using shortcuts.

1. In standby mode, press the **MENU** key (**OK**).
2. Press the number of the menu, sub menu, and so on for the feature that you wish to access.

Example: Press the **MENU** key (**OK**), then press **8th**, **3rd**. This takes you to the **Tools** (MENU 8), and then to the **Calendar** (sub menu 3).

Menu Shortcuts Outline

1 **Contacts**

1.1 Find

- 1.2 Add New Entry
 - 1.3 Speed Dial
 - 1.4 Group
 - 1.4.1 *No Group*
 - 1.4.2 *Business*
 - 1.4.3 *Colleague*
 - 1.4.4 *Family*
 - 1.4.5 *Friends*
 - 1.5 Memory Info
- 2 Calls**
- 2.1 Outgoing Calls
 - 2.2 Incoming Calls
 - 2.3 Missed Calls
 - 2.4 All Calls
 - 2.5 Data Call
 - 2.6 Call Timer
 - 2.7 Data Counter
- 3 Messages**
- 3.1 Send Message
 - 3.1.1 *Text Message*
 - 3.1.2 *Picture Message*
 - 3.1.3 *Video Message*
 - 3.2 Inbox
 - 3.3 Outbox
 - 3.4 Drafts
 - 3.5 Voicemail
 - 3.6 Erase Messages
 - 3.6.1 *Inbox*
 - 3.6.2 *Outbox*
 - 3.6.3 *Drafts*
 - 3.6.4 *All Messages*
 - 3.7 Msg Settings

- 3.7.1 *General*
 - 3.7.1.1 **Auto Save**
 - 3.7.1.2 **Auto Erase**
 - 3.7.1.3 **Quick Text**
 - 3.7.1.4 **Voicemail #**
 - 3.7.1.5 **Entry Mode**
 - 3.7.1.6 **Callback #**
 - 3.7.1.7 **Signature**
 - 3.7.1.8 **Reminder**
- 3.7.2 *Text Message*
 - 3.7.2.1 **Auto View**
 - 3.7.2.2 **Signature**
 - 3.7.2.3 **Auto Scroll**
- 3.7.3 *Picture/Video Message*
 - 3.7.3.1 **Auto Receive**
 - 3.7.3.2 **Signature**

4 easyedgeSM

4.1 easyedgeSM

5 Display

- 5.1 Menu Style
- 5.2 Wallpaper
 - 5.2.1 *My Images*
 - 5.2.2 *My Videos*
 - 5.2.3 *Preset Images*
- 5.3 Clock Format
- 5.4 Theme
- 5.5 Dialing Font
 - 5.5.1 *Style*
 - 5.5.2 *Size*
- 5.6 Banner
- 5.7 Backlight
 - 5.7.1 *Main Display*
 - 5.7.2 *Keypad*
 - 5.7.3 *Brightness*

6 Sounds

- 6.1 Volume
 - 6.1.1 *Voice Calls*
 - 6.1.2 *Messages*
 - 6.1.3 *Alarms*
- 6.2 Ringer Type
 - 6.2.1 *Voice Calls*
 - 6.2.1.1 My Ringtones**
 - 6.2.1.2 My Sounds**
 - 6.2.2 *Messages*
 - 6.2.2.1 Text Message**
 - 6.2.2.1.1 My Ringtones
 - 6.2.2.1.2 My Sounds
 - 6.2.2.2 Picture/Video Message**
 - 6.2.2.2.1 My Ringtones
 - 6.2.2.2.2 My Sounds
 - 6.2.2.3 Voicemail**
 - 6.2.2.3.1 My Ringtones
 - 6.2.2.3.2 My Sounds
- 6.3 Alerts
 - 6.3.1 *Minute Beep*
 - 6.3.2 *Roaming*
 - 6.3.3 *Call Connect*
 - 6.3.4 *Power On/Off*
 - 6.3.4.1 Power On**
 - 6.3.4.2 Power Off**
- 6.4 Key Tone
 - 6.4.1 *Tone Level*
 - 6.4.2 *Tone Length*

7 Multimedia

- 7.1 Camera
- 7.2 Camcorder
- 7.3 My Images
- 7.4 My Videos
- 7.5 My Ringtones
- 7.6 My Sounds

- 7.6.1 *Record New*
- 7.7 Music Library
 - 7.7.1 *All*
 - 7.7.2 *Artists*
 - 7.7.3 *Albums*
 - 7.7.4 *Genres*
 - 7.7.5 *Playlists*

8 Tools

- 8.1 Voice SVC
 - 8.1.1 *Voice Commands*
 - 8.1.2 *Voice Settings*
 - 8.1.2.1 **Choice Lists**
 - 8.1.2.2 **Sensitivity**
 - 8.1.2.3 **Digit Dialing**
 - 8.1.2.3.1 Adapt Digits
 - 8.1.2.3.2 Reset Digits
 - 8.1.2.4 **Sound**
 - 8.1.2.4.1 Prompts
 - 8.1.2.4.2 Digits
 - 8.1.2.4.3 Names
 - 8.1.2.4.4 Name Settings
 - 8.1.2.5 **Voice Launch**
 - 8.1.2.6 **About**
- 8.2 Bluetooth
 - 8.2.1 *Add New Device*
 - 8.2.2 *Registered List*
 - 8.2.3 *Bluetooth Settings*
 - 8.2.3.1 **Enable/Disable**
 - 8.2.3.2 **Discovery Mode**
 - 8.2.3.3 **Device Name**
 - 8.2.3.4 **Device Info**
- 8.3 Calendar
- 8.4 Memo Pad
- 8.5 Alarm Clock
 - 8.5.1 *Alarm 1*
 - 8.5.2 *Alarm 2*

- 8.5.3 *Alarm 3*
- 8.6 World Time
- 8.7 Calculator
- 8.8 Stop Watch
- 8.9 Coverter
 - 8.9.1 *Currency*
 - 8.9.2 *Length*
 - 8.9.3 *Weight*
 - 8.9.4 *Volume*
 - 8.9.5 *Area*
 - 8.9.6 *Temperature*
- 8.0 Tip Calculator

9 Settings

- 9.1 Location
- 9.2 Call Settings
 - 9.2.1 *Call Answer*
 - 9.2.2 *Auto Answer*
 - 9.2.3 *Auto Retry*
 - 9.2.4 *TTY Mode*
 - 9.2.5 *Voice Privacy*
 - 9.2.6 *Data Settings*
 - 9.2.7 *International_Dialing*
- 9.3 Phone Settings
 - 9.3.1 *Airplane Mode*
 - 9.3.2 *Shortcut Key*
 - 9.3.3 *Language*
 - 9.3.4 *Security*
 - 9.3.4.1 **Lock Phone**
 - 9.3.4.2 **Change Lock**
 - 9.3.4.3 **Emergency #**
 - 9.3.4.3.1 911
 - 9.3.4.3.2 *911
 - 9.3.4.3.3 #911
 - 9.3.4.4 **Reset Phone**
 - 9.3.4.5 **Erase All Entry**

- 9.3.4.6 **Restriction**
 - 9.3.4.6.1 Outgoing
 - 9.3.4.6.2 Incoming
 - 9.3.5 *NAM Selection*
 - 9.3.6 *System Select*
 - 9.3.7 *Set Time*
 - 9.3.7.1 **Set Date**
 - 9.3.7.2 **Set Time**
 - 9.3.8 *Quick Search*
 - 9.3.9 *PC Connection*
 - 9.4 **Memory Info**
 - 9.4.1 *Save Options*
 - 9.4.1.1 **Images**
 - 9.4.1.2 **Videos**
 - 9.4.2 *Phone Memory*
 - 9.4.2.1 **Memory Usage**
 - 9.4.2.2 **My Images**
 - 9.4.2.3 **My Videos**
 - 9.4.2.4 **My Ringtones**
 - 9.4.2.5 **My Sounds**
 - 9.4.3 *Card Memory*
 - 9.4.3.1 **Memory Usage**
 - 9.4.3.2 **My Images**
 - 9.4.3.3 **My Videos**
 - 9.4.3.4 **My Music**
 - 9.4.3.5 **Format Card**
 - 9.5 **Phone Info**
 - 9.5.1 *Phone Number*
 - 9.5.2 *Icon Glossary*
 - 9.5.3 *Version*

Section 5: Entering Text


Topics Covered


- Changing the Text Entry Mode
 - Using T9® Mode
 - Using Abc Mode
 - Entering Symbols
 - Entering Numbers
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes you must make when entering text.

Changing the Text Entry Mode


Text messages can be made up of alphabetical characters, numbers, and symbols. You can use the following text entry modes to simplify text entry:

- **T9 Word** — Press each key only once to enter the letter of the word that you're spelling. (T9 Word mode offers the same letter options as Abc mode. Press the  key to change letter options.)
- **Abc** — Enter letters, numbers, and symbols by repeatedly pressing each key until the desired character (as shown on the key) appears in the display. Abc mode letter options are:
 - **Abc** — Enter initial capital letters
 - **ABC** — Enter all upper case letters
 - **abc** — Enter all lower case letters

Press the  key to change letter options.

- **123** — Enter numbers by pressing the corresponding key on the keypad.
- **Symbols** — Enter symbols into your message by pressing the number above the symbol in the **Symbol** pop-up window.




The current text entry mode (**Abc**, **123**, or **T9 Word**) is indicated in the lower part of a text entry screen. To change the text entry mode, do either of the following:

- ▶ Press and hold the ******* key. The left soft key label changes to indicate changes in text entry mode. Press and hold the ******* key repeatedly until the desired text entry mode appears in the display.
- ▶ While composing a text message, press the Left soft key (). The following options appear in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**

Use the navigation keys to highlight the desired text entry mode, then press the **OK** key.

Using T9® Mode








T9 Word recognizes commonly used words for the numeric sequence of key presses and inserts the word into your message. T9 Word is much faster than the traditional method of text entry (Abc) and *requires only one key press per letter* of the word that you're spelling.

1. In standby mode, press the **Message** (left) soft key () , then press  (for **Send Message**) and  for **Text Message**.
2. Enter the phone number of the recipient, then press **OK**. The **Create Text Msg** screen appears in the display.
3. Repeatedly press and hold the ******* key until the left soft key label changes to **T9 Word**.
 - For practice, enter the word "Samsung" by pressing each of the following keys only once:

      
S A M S U N G








T9 Word recognizes that the most commonly used word for the numeric sequence you just entered is "Samsung". If more than one word shares the same numeric sequence, T9 Word provides the most commonly used word. Other words, if any, appear in a pop-up list. To select one of these words, use the Up and Down navigation keys to highlight a word, then press the **OK** key.

Using Abc Mode

1. In standby mode, press the **Message** (left) soft key () , then press  (for **Send Message**) and  for **Text Message**.
2. Enter the phone number of the recipient, then press . The **Create Txt Msg** screen appears in the display.
3. If needed, repeatedly press and hold the  key until the Left soft key label changes to **Abc**.
 - Enter characters while in Abc mode by pressing the key labeled with the desired characters (such as  for "h").
 - Press the key repeatedly until the desired character appears in the display.
 - Pause briefly and the displayed character is accepted and inserted into your message.
 - Press  to enter a space.






Entering Symbols

Symbol mode enables you to enter symbols such as "@" or "%" into a text message.

1. In standby mode, press the **Message** (left) soft key () , then press  (for **Send Message**) and  for **Text Message**.
2. Enter the phone number of the recipient, then press . The **Create Txt Msg** screen appears in the display.
3. Press the Left soft key (). The following options appear in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**
4. The current text input mode is highlighted. Use the navigation keys to highlight **Symbols**, then press . The first of four symbol screens appears in the display.
5. Use the Left and Right soft keys to page through the other symbols, if desired.
6. Press the key that corresponds with the symbol that you wish to enter. For example, press  for an exclamation point (!).
7. Repeat steps 3 through 6 to insert as many symbols into your message as desired.

Entering Numbers

Enter numbers into a text message while in **123** mode.

1. In standby mode, press the **Message** (left) soft key () , then press  (for **Send Message**) and  for **Text Message**.
2. Enter the phone number of the recipient, then press  . The **Create Txt Msg** screen appears in the display.
3. Repeatedly press and hold the  key until the left soft key label changes to **123**.
4. Press the key containing the corresponding number that you wish to insert into your message.

Section 6: Understanding Your Contacts

Topics Covered

- Your Contacts List
 - Adding a New Contacts Entry
 - Finding a Contacts Entry
 - Editing an Existing Contact Entry
 - Assigning Speed Dial Numbers
 - Renaming a Contacts Group
 - Deleting a Contacts Entry
 - Memory Info
-

This section explains how to manage your daily contacts by storing their names and numbers in your Contacts. Contacts entries are listed as sorted by name.




Your Contacts List


Your Contacts list can store up to 500 entries, with each contact having up to five associated phone numbers, an e-mail address, and a picture ID.

Each phone number can be up to 32 digits in length, including hard pauses. Contact names can be up to 32 characters in length. You can also assign one or more speed dial numbers to each entry, and you can use your Contacts list to restrict incoming and outgoing calls. (See “*Restriction*” on page 150 for more information).

Tip: One-Touch, Two-Touch, and Three-Touch Speed Dialing allow you to call numbers stored in your Contacts list faster. (See page 27.)

Open Your Contacts List


1. In standby mode, press the **MENU** key () , then press  for **Contacts**. The following Contacts sub-menus and options appear in the display:
 - **Find** — Find a phone number by entering a Contact name. (For more information, see “*Finding a Contacts Entry*” on page 52)
 - **Add New Entry** — Add a number or e-mail to your Contacts.
 - **Speed Dial** — Assign speed dial numbers to your Contacts.
 - **Group** — Rename/add/manage Contacts groups.
 - **Memory Info** — View available memory for Contacts entries.
2. Use the Up and Down navigation keys to highlight the Contacts sub-menu or option of your choice, and press the  key.

Tip: You can also access a sub-menu or menu option by pressing the number key that corresponds to the menu item number. For example, press  for **Add New Entry**.



Adding a New Contacts Entry

You can add an entirely new entry to your Contacts list or add information to an existing entry.

Using the Contacts Add Option

1. At the **Contacts** menu, press  for **Add New Entry**. The **Add New Entry** screen appears in the display with the **Name** field highlighted.
2. Use the keypad to enter a name or phrase to associate with the new Contacts entry. (For more information, refer to “*Entering Text*” on page 44.)
3. Use the Up and Down navigation keys to highlight each field.
4. Enter a phone number (**Mobile**, **Home**, or **Work**,) or an e-mail address (**E-mail**) for the new Contacts entry.
5. If desired, assign the new Contact to a **Group**. This lets you send messages to and find this Contact and other related contacts. (For more information, refer to “*Group*” on page 54.)
6. If desired, select a unique **Ringtone** to identify this new Contact. (For more information, refer to “*Ringer Type*” on page 89.)
7. If desired, enter an additional phone number (**Pager** or **Fax**) for the new Contacts entry.



Adding a New Contacts Entry


8. If desired, select an identifying image by highlighting the photo ID field and pressing the **Set** (left) soft key (). The **My Images** screen appears in the display. (For more information, see “My Images” on page 114)
9. Press the **SAVE** key () to save the new Contacts entry.

Saving a Number from a Call

Once you've finished a call, you can save the number of the caller to your Contacts list.

Note: If the call was incoming and Caller ID information was unavailable, then the Save option is also unavailable.

1. After you press the  key to end a call, the call time, length of call, phone number, and name of the other party (if available) appear in the display.
2. Press the **Save** (right) soft key (). The **Save** screen appears in the display showing the following options:
 - **Create New** — Lets you create a new Contacts entry.
 - **Update Existing** — Lets you add the number or e-mail address you just entered to an existing Contacts entry.

Tip: You can also store a phone number from standby mode by entering the number, and pressing the **Save** (left) soft key ().

Creating a new Contacts entry:

3. Use the navigation keys to highlight **Create New**, then press the  key. The following (number type) icons appear in the display:



Mobile



Home




Work



Pager



Fax

4. Use the Up and Down navigation keys to highlight the number type that matches your new entry and press the  key. The **New Contact** screen appears in the display with the number being saved populating the selected number type field. (For more information on creating a new Contacts entry, see “Using the Contacts Add Option” on page 49)

Adding the number to an existing Contacts entry:

5. Use the Up and Down navigation keys to highlight **Update Existing**, then press the **OK** key. The **Update Existing** screen appears in the display showing your current Contacts list.
6. Enter the first few characters of the Contacts entry name under which you will store the saved number. (For more information on finding a Contacts entry, see *"Finding a Contacts Entry"* on page 52.)
7. Use the Up and Down navigation keys to highlight the desired Contacts entry, then press the **OK** key. The following (number type) icons appear in the **Update Existing** screen:



8. Use the Up and Down navigation keys to highlight the appropriate unassigned number type, then press the **OK** key. The **Edit Contact** screen appears in the display.
9. Make any added changes you wish to the Contacts entry. (For more information, see *"Editing an Existing Contact Entry"* on page 55)
10. Press the **SAVE** key (**OK**) to save the entry.

Storing Number from a Calls Log

You can store numbers from the Calls logs to your Contacts.

1. In standby mode, press the **MENU** key (**OK**), then press **2** for **Calls**.
2. Press the corresponding number on the keypad to view the following Calls logs:
 - Press **1** for **Outgoing Calls**
 - Press **2** for **Incoming Calls**
 - Press **3** for **Missed Calls**
 - Press **4** for **All Calls**
 - Press **5** for **Data Call**

A list of your calls appears in the display.

3. Use the navigation keys to highlight the number you wish to store in **Contacts**.

4. Press the **Options** (right) soft key ()
5. Use the navigation keys to highlight **Save**, then press the  key. The following options appear in the display:
 - **Create New** — Lets you create a new Contacts entry.
 - **Update Existing** — Lets you add the number or e-mail address you just entered to an existing Contacts entry.

For more information on saving the number, see “*Saving a Number from a Call*” on page 50





Finding a Contacts Entry

Voice Method

Use the VoiceSignal **Contacts** command to view contact information for any named contact stored in your Contacts list by saying the name.

Note: The Contacts command shows the requested contact information in the display but does not dial any phone numbers for the contact.

To look up information for a specific contact:

1. In standby mode, press the  key to launch **VoiceSignal**.
 “**Say a Command**” appears in the display and is pronounced through the speaker.
2. Say “**Lookup**”.
 VoiceSignal prompts you to “**Say the name.**”
3. Speak clearly and say the full name of the person you want to call, exactly as it is entered in your contact list.
 - If VoiceSignal recognizes the name you said, the contact information for that name appears in the display.
 - If VoiceSignal does not recognize the name you said, a choice list of up to three names appears in the display, and VoiceSignal prompts you with “**Did you say?**” followed by the first name on the list.
4. Say “**Yes**” to confirm the name or “**No**” to hear the next name, or use the keypad to select the correct name from the list. (See “*Choice Lists*” on page 128, for more information.)
 - To say the name again, press the **Repeat** (right) soft () key.
 - To exit VoiceSignal without dialing, press the **Settings** (left) soft () key, then press the **Exit** (right) soft () key.
5. The contact information for the name you selected appears in the display.

Keypad Methods





Find by Name

If you have stored a named contact in your Contacts list, Find lets you locate the entry quickly.

1. In standby mode, do one of the following:
 - If **Quick Search** is set to **On**, enter the numbers that correspond to the first few letters of the Contacts entry's name, then press the Up navigation key. The **Contact List** screen appears in the display listing the Contacts entries whose names match the numbers you entered. Now, skip to Step 3.



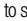

Example: If you saved a contact name as "Amy Smith", begin your search for that contact by pressing  for "A".

Note: For information about setting the Quick Search option, see "Quick Search" on page 153.

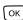
- If **Quick Search** is set to **Off**, do one of the following:
 - Press the **Contacts** (right) soft key () — Contacts **Find** shortcut.
 - Press the **MENU** key () , then press  (for **Contacts**) and  for **Find**. The **Find** screen appears in the display with an alphabetical list of Contacts showing.
2. Enter the first few characters of the name of the contact as it appears in your Contacts list.

Example: If you saved a contact name as "Amy Smith", begin your search for that contact by pressing  for "A".

Note: As you enter letters, the entry names of the closest matches (thus far) appear in the display.


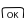

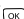

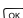
3. When the desired Contacts entry is listed in the display, highlight the contact using the Navigation key (if necessary). Then, do one of the following
 - Press the  key to dial the number associated with the named contact.
 - Press the **Edit** (left) soft key () to change the information about the contact.
 - Press the **VIEW** key () to show information about the contact.
 - Press the **Options** (right) soft key (). The following options appear in the display:
 - **New Contact** — Lets you add a new number to your Contacts list or to the selected contact.
 - **Erase** — Lets you delete the highlighted contact.

Finding a Contacts Entry

- **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send PIC Msg** — Lets you send a picture message to the selected contact.
 - **Send Video Msg** — Lets you send a video message to the selected contact.
 - **Call** — Lets you place a call to the highlighted contact.
4. Use the Up and Down navigation keys to highlight an option, then press the  key to enter that option's sub-menu.

Group


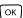
This option lets you find a Contacts list entry with a specific Group name.

1. At the **Contacts** menu, press  for **Group**. The **Group List** screen appears in the display.
2. Use the Up and Down navigation keys to highlight the name of the group you wish to browse, then press the  key. The selected Group list appears in the display.
3. Use the Up and Down navigation keys to find the desired Contacts entry.
4. When the desired Contacts entry is listed in the display, highlight the Contact using the Up and Down navigation keys (if necessary). Then, do one of the following:
 - Press the **Remove** (left) soft key () to delete the selected contact from the Group. (Does not apply to No Group.)
 - Press the **ADD** key () to add another existing contact entry to the selected Group. (Does not apply to the General group.)
 - Press the **Options** (right) soft key (). The following options appear in the display:
 - **Send Text Msg** — Lets you send a text message to selected contact(s) in the current group.
 - **Send PIC Msg** — Lets you send a picture message to selected contact(s) in the current group.
 - **Send Video Msg** — Lets you send a video message to selected contact(s) in the current group.
5. Use the Up and Down navigation keys to highlight an option, then press the  key to enter that option's sub-menu.

Search by Number




This option lets you find a Contacts list entry by one of its phone numbers.

1. In standby mode, enter the first few numbers of the Contacts list entry you wish to find (such as the area code or area code and exchange — for example, 888-987).


2. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Search** — Lets you find Contacts list entries by their phone numbers.
 - **2-Sec Pause** — Adds a two-second pause.
 - **Wait** — Adds a hard pause (awaits input from you).
 - **Send Text Msg** — Lets you send a text message to the entered number.
 - **Send PIC Msg** — Lets you send a picture message to the entered number.
 - **Send Video Msg** — Lets you send a video message to the entered number.
3. Use the navigation keys to highlight the **Search** option, then press the  key. The **Find** screen appears in the display listing all phone numbers in your Contacts list that contain the entered digits.
4. Use the navigation keys (if necessary) to highlight the desired Contacts entry. Then do one of the following:
 - Press the  key to dial the highlighted number.
 - Press the **OK** key () to display information about the Contacts entry associated with the highlighted number. From the **View Contact** screen, you can erase or edit the selected Contacts entry.

Editing an Existing Contact Entry

Once stored in the Contacts list, an entry can be changed quite easily.

1. Find the desired entry in the Contacts list. (See “*Finding a Contacts Entry*” on page 52 for more information.)
2. Press the **Edit** (left) soft key (). The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the navigation keys to highlight a number stored in this contact entry.
4. Press  to backspace and delete numbers.
5. Press and hold  to clear all numbers in the highlighted field.

Note: You can also add numbers (such as a second Mobile number or a Fax number) to the entry, assign it to a Group, and add other information.

6. When you're finished editing the entry, press the  key. Your changes are saved and a confirmation message appears in the display.

Adding Pauses to Contacts Numbers




When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **2-Sec Pause** — A two-second pause that stops the calling sequence for two seconds and then automatically sends the remaining digits.
- **Wait** — A hard pause that stops the calling sequence until further input from you.

Tip: You can enter multiple two-second pauses to extend the length of a pause. For example, two consecutive two-second pauses cause a total pause time of four seconds.





Note: Keep in mind that pauses count as digits towards the 32-digit maximum.

Store Pauses in a New Contacts Entry

1. In standby mode, enter the number you wish to store (such as your bank's teleservice number).
2. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Search** — Lets you find Contacts list entries by their phone numbers.
 - **2-Sec Pause** — Adds a two-second pause.
 - **Wait** — Adds a hard pause (awaits input from you).
 - **Send Text Msg** — Lets you send a text message to the entered number.
 - **Send PIC Msg** — Lets you send a picture message to the entered number.
 - **Send Video Msg** — Lets you send a video message to the entered number.
3. Use the Up and Down navigation keys to highlight the pause option of your choice.
4. Press the  key to enter the highlighted pause into your number sequence.
5. When you're finished entering the number and pauses, press the **Save** (left) soft key () to store the number in your Contacts list.

Add Pauses to an Existing Contacts Entry

1. Find the desired entry in the Contacts list. (See *"Finding a Contacts Entry"* on page 52 for more information.)
2. Press the **Edit** (left) soft key (). The **Edit Contact** screen appears in the display with the contact name highlighted.

3. Use the Up and Down navigation keys to highlight a number stored in this contact entry.
4. Use the Left and Right navigation keys to place the cursor where you want to add a pause (usually at the right-hand end of the number).
5. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Set Speed Dial** — lets you assign a Speed Dial number to this Contacts entry.
 - **Set As Default** — your phone automatically dials this number when you find this Contacts entry and press the  key.
 - **2-Sec Pause** — Adds a two-second pause.
 - **Wait** — Adds a hard pause (awaits input from you).
6. Use the navigation keys to highlight the pause option of your choice.
7. Press the  key to enter the highlighted pause into your number sequence.
8. When you're finished entering pauses, press the  key to save your changes to the number in your Contacts list.



Assigning Speed Dial Numbers

Speed Dial lets you assign 1-digit, 2-digit, or 3-digit numbers to individual Contact phone numbers, and then use the assigned Speed Dial numbers to more quickly place calls. (For more information, see “*One-Touch Dialing*” on page 27.)

You can assign a Speed Dial number in the following ways:

- By using the **Add New Entry** screen (adding a new Contacts entry)
- By using the **Edit Contact** screen (editing an existing Contacts entry)
- By going directly to the **Speed Dial** menu


Using a New or Existing Contacts Entry

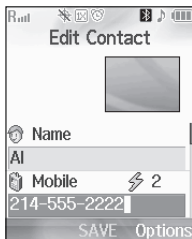 
1. Add or find the desired Contacts entry. (For more information, see “*Adding a New Contacts Entry*” on page 49 and “*Finding a Contacts Entry*” on page 52.)
2. In the **Add New Entry** screen or **Edit Contact** screen, use the Up and Down navigation keys to highlight one of this Contact's phone numbers.
3. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Set Speed Dial** — lets you assign a Speed Dial number to this Contacts entry.
 - **Set As Default** — your phone automatically dials this number when you Find this Contacts entry and press the  key.

Assigning Speed Dial Numbers

- **2-Sec Pause** — Adds a two-second pause.
- **Wait** — Adds a hard pause (awaits input from you).

Set Speed Dial is highlighted.

4. Press the **OK** key. The **Speed Dial** screen appears in the display.
5. Enter, or use the Up and Down navigation keys to select, an unassigned Speed Dial number.
6. Press the **SET** key (**OK**) to assign the new Speed Dial number to the selected Contact. You are prompted to confirm the assignment.
7. Press the **Yes** (left) soft key (**Yes**) to assign the selected Speed Dial number. The **Edit Contact** screen appears in the display with the Speed Dial icon () and number showing.
8. Press the **SAVE** key (**OK**) to save the new Speed Dial number assignment.



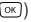

Using the Speed Dial Menu

1. At the **Contacts** menu, press **3** for **Speed Dial**. The **Speed Dial** screen appears in the display.
2. Enter, or use the Up and Down navigation keys to select, an unassigned Speed Dial number.
3. Press the **SET** key (**OK**) to assign the new Speed Dial number to a Contact. The **Set Speed Dial** screen appears in the display.
4. Enter the first few characters of the name of the contact as it appears in your Contacts list.






Example: If you saved a contact name as "Amy Smith", begin your search for that contact by pressing **2** for "A".

Note: As you enter letters, the entry names of the closest matches (thus far) appear in the display.










5. When the desired Contacts entry is listed in the display, use the Up and Down navigation keys to highlight the desired Contacts entry, then press the **OK** key (**OK**).
 - If the selected Contacts entry has only one phone number, you are simply prompted to confirm the assignment.

- If the selected Contacts entry has more than one phone number, the **Speed Dial - Choose Number** screen appears in the display.
 - Use the Up and Down navigation keys to select the phone number to receive the Speed Dial number assignment.
 - Press the **OK** key () to assign the new Speed Dial number to the selected Contact number. You are prompted to confirm the assignment.
- 6. Press the **Yes** (left) soft key () to assign the selected Speed Dial number. The **Speed Dial** screen appears in the display showing the newly assigned Speed Dial number.

Changing a Speed Dial Assignment

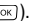
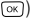

- **To change the phone number assigned to a Speed Dial number**, change the phone number in the Contacts entry. (For more information, see “*Editing an Existing Contact Entry*” on page 55.)
- **To change the Speed Dial number assigned to a Contacts entry**, do the following:
 1. Find the desired entry in the Contacts list. (See “*Finding a Contacts Entry*” on page 52 for more information.)
 2. Press the **Edit** (left) soft key (). The **Edit Contact** screen appears in the display with the contact name highlighted.
 3. Use the Up and Down navigation keys to highlight the number whose Speed Dial number is to be changed.
 4. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Remove Speed Dial** — lets you remove a Speed Dial number assignment from this Contacts entry.
 - **Set As Default** — your phone automatically dials this number when you Find this Contacts entry and press the  key.
 - **2-Sec Pause** — Adds a two-second pause.
 - **Wait** — Adds a hard pause (awaits input from you).**Remove Speed Dial** is highlighted.
 5. Press the **OK** key (). You are prompted to confirm the Speed Dial number removal.
 6. Press the **Yes** (left) soft key (). The **Edit Contact** screen appears in the display with the selected phone number highlighted and without a Speed Dial assignment.

Assigning Speed Dial Numbers


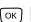
7. Press the **Options** (right) soft key (). The following menu options appear in the display:
 - **Set Speed Dial** — lets you assign a Speed Dial number to this Contacts entry.
 - **Set As Default** — your phone automatically dials this number when you Find this Contacts entry and press the  key.
 - **2-Sec Pause** — Adds a two-second pause.
 - **Wait** — Adds a hard pause (awaits input from you).**Set Speed Dial** is highlighted.
 8. Press the **OK** key. The **Speed Dial** screen appears in the display.
 9. Enter, or use the Up and Down navigation keys to select, an unassigned Speed Dial number.
 10. Press the **SET** key () to assign the new Speed Dial number to the selected Contact. You are prompted to confirm the assignment.
 11. Press the **Yes** (left) soft key () to assign the selected Speed Dial number. The **Edit Contact** screen appears in the display with the Speed Dial icon () and number showing.
 12. Press the **SAVE** key () to save the new Speed Dial number assignment.
- **To change the Contacts entry assigned to a Speed Dial number**, do the following:
1. At the **Contacts** menu, press  for **Speed Dial**. The **Speed Dial** screen appears in the display.
 2. Enter, or use the Up and Down navigation keys to select, the assigned Speed Dial number.
 3. Press the **SET** key () to overwrite the current Contacts entry assignment for this Speed Dial number. You are prompted to confirm the assignment overwrite.
 4. Press the **Yes** (left) soft key () to assign the selected Speed Dial number. The **Set Speed Dial** screen appears in the display.
 5. Enter the first few characters of the name of the new Contacts entry as it appears in your Contacts list.

Example: If you saved a contact name as "Amy Smith", begin your search for that contact by pressing  for "A".

Note: As you enter letters, the entry names of the closest matches (thus far) appear in the display.


6. When the desired Contacts entry is listed in the display, use the Up and Down navigation keys to highlight the desired Contacts entry, then press the **OK** key ().
 - If the selected Contacts entry has only one phone number, you are simply prompted to confirm the assignment.
 - If the selected Contacts entry has more than one phone number, the **Speed Dial - Choose Number** screen appears in the display.
 - Use the Up and Down navigation keys to select the phone number to receive the Speed Dial number assignment.
 - Press the **OK** key () to assign the new Speed Dial number to the selected Contact number. You are prompted to confirm the assignment.
7. Press the **Yes** (left) soft key () to assign the selected Speed Dial number. The **Speed Dial** screen appears in the display showing the newly assigned Speed Dial number.

Add a Number or E-mail Address to an Existing Entry

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 52 for more information.)
2. Press the **Edit** (left) soft key (). The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the Up and Down navigation keys to highlight a number field or E-mail field in this contact entry.
4. Enter the phone number or e-mail address for the new Contacts entry.
5. Press the  key to add the number or e-mail address to the existing entry.

Note: You can also add a phone number from a Call record to a Contacts entry. (For more information, see “Saving a Number from a Call” on page 50 and see “Storing Number from a Calls Log” on page 51.)

Edit an Existing E-mail Address

1. Find the desired entry in the Contacts list. (See “Finding a Contacts Entry” on page 52 for more information.)
2. Press the **Edit** (left) soft key (). The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Use the Up and Down navigation keys to highlight the **E-mail** field (labeled with the @ symbol).
4. Use the keypad to edit the **E-mail** address. (See “Entering Text” on page 48 for more information.)

Renaming a Contacts Group

- To insert the @ symbol, press the **123** key, twice.
 - To add the domain type to the end of the e-mail address, do the following:
 - Press the **abc** (left) soft key (**1**). A pop-up menu appears in the display with **Abc** highlighted.
 - Use the navigation keys to highlight **Shortcuts**, then press the **OK** key.
 - Use the navigation keys to highlight the desired domain type (such as, .com, .net, or .edu), then press the **OK** key.
5. Press the **OK** key to save your changes.

Renaming a Contacts Group

Use this option to rename a group in your Contacts list.




1. In standby mode, press the **MENU** key (**OK**), then press **123** (for **Contacts**) and **4** (for **Group**). A list of group names (like the following list) appears in the display:
 - **No Group**
 - **Business**
 - **Colleague**
 - **Family**
 - **Friends**

Note: You cannot rename No Group.

2. Use the navigation keys to highlight the group (other than **No Group**) that you wish to rename, then press the **Options** (right) soft key (**3**). The following options appear in the display:
 - **Send Text Msg** — Lets you send a text message to all contacts in the selected Group.
 - **Send PIC Msg** — Lets you send a picture message to all contacts in the selected Group.
 - **Send Video Msg** — Lets you send a video message to all contacts in the selected Group.
 - **Rename** — Lets you change the name of the selected Group.
 - **Erase** — Lets you delete the selected Group (this does not delete the related Contacts).
 - **Add** — Lets you add a new Group.
3. Use the navigation keys to highlight **Rename**, then press the **OK** key.
4. The **Rename Group** screen appears in the display. The current name of the selected group shows with a flashing cursor at the end of the name.

5. Enter a new group name using the keypad. (See *“Entering Text”* on page 48 for more information.)
6. Press the **OK** key to save the changed group name.

Deleting a Contacts Entry

1. Find the desired entry in the Contacts list. (See *“Finding a Contacts Entry”* on page 52 for more information.)
2. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **New Contact** — Lets you add an entry to your Contacts list.
 - **Erase** — Erases the selected Contact.
 - **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send PIC Msg** — Lets you send a picture message to the selected contact.
 - **Send Video Msg** — Lets you send a video message to the selected contact.
 - **Send V-card** — Lets you send one or more Contacts list entries to another device over a Bluetooth connection.
 - **Call** — Calls the highlighted Contact.
3. Use the navigation keys to highlight **Erase**.
4. Press the **OK** key. The phone prompts you to confirm the erasure.
5. Press the **Yes** (left) soft key () or the **No** (right) soft key (.

Memory Info

Use the Memory sub-menu to view the amount of Contacts entries you have stored, as well as the remaining memory.


- At the **Contacts** menu, press **5** for **Memory Info**. The amounts of memory used and remaining for Contacts entries appear in the display.

Section 7: Messaging

Topics Covered

- Types of Messages
 - Create and Send Text Messages
 - Send Picture Messages in Camera Mode
 - Send Picture Messages in Standby Mode
 - Receive Messages
 - Message Folders
 - Erase Messages
 - Message Settings
-



This section explains how to send or receive different types of messages. This section also describes the features and functionality associated with messaging.

Tip: To launch the **Messages** menu using a voice command — In standby mode, press and hold until the phone prompts, “Say a command.” Say “Go to Messages” into the microphone. 

Types of Messages






Your phone is able to send and receive Text and Picture messages to compatible phones and devices. Text messages can be up to 160 characters in length. Picture message text can be up to 1,000 characters in length.


To access the types of messages, do the following:



1. In standby mode, press the **Messages** (left) soft key (), then press  for **Send Message**. The **Send Message** screen appears in the display showing the following options:
 - **Text Message** — Create and send simple text messages to compatible phones.
 - **Picture Message** — Create and send multimedia messages containing text, pictures, and/or sounds.


- **Video Message** — Create and send multimedia messages containing text and video clips.



Create and Send Text Messages

1. In standby mode, press the **Messages** (left) soft key (), then press  (for **Send Message**) and  for **Text Message**. The **Create Txt Msg** screen appears in the display.
2. Enter one or more recipient phone numbers, then press the  key.
3. Enter the text content of your message using the keypad. (See “*Entering Text*” on page 44 for more information.)
4. At any point while composing a message, press the Left soft key () to change the text entry mode. The following options appear in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**

Use the **Up** and **Down** navigation keys to highlight the desired text input mode, then press the  key.

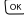



Tip: You can also change the text entry mode by pressing and holding the  key. You can change the capitalization mode by momentarily pressing the  key.

5. At any point while composing a text message, press the **Options** (right) soft key (). The following message composition and sending options appear in the display:
 - **Edit Send To** — Edit the recipient's Send To number.
 - **Add Quick Text** — Insert pre-composed text in the message.
 - **Save As Draft** — Save the message to your Draft folder.
 - **Priority Level** — Indicate whether the message is **High** or **Normal** priority.
 - **Validity Period** — Set a specific date and time, before which the message can be delivered, after which the message is recalled.
 - **Deferred Delivery** — Defer delivery of the message to some particular time.
 - **Enh. Delivery Ack** — Enable/disable confirmation of message delivery.
 - **Add To Contacts** — Add the recipient number(s) to your Contacts.

Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.
6. When you're finished composing your message, press the  key to send it.

Send Picture Messages in Camera Mode



Picture messages can be sent to recipients with compatible phones or devices. You can even accompany a Picture message with a voice memo or preloaded sound.


1. In standby mode, press and hold the Camera key (on the right side of your phone). The camera activates.
2. Using the display as a viewfinder, press the  key when the image that you wish to send appears in the display. The soft key labels change to the following:
 - **Save** — Left soft key ()
 - **Send** —  key
 - **Erase** — Right soft key ()



Note: For more information about using the camera feature in your phone, see “Camera-Camcorder” on page 91.


3. Press the  key. The **Create Pic Msg** screen appears in the display with the **Send To** tab highlighted.
4. Enter the phone number(s) or e-mail address(s) of the recipient of the Picture message.

Tip: Press the **Add** (right) soft key () to display a pop-up menu that lets you search your Contacts for a recipient, select a Group as recipient, browse the Recent Calls log for a recipient, or send the Picture message to the OnlineAlbum.

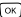
5. Press the  key to move the cursor to the **Subject** field, then enter a subject for the Picture message using the keypad.
6. Press the **Down** navigation key until the **Text** field is highlighted, then enter the message text using the keypad.
See “Entering Text” on page 44 for more information.
7. At any point while composing a message, press the Left soft key () to change the text entry mode. The following options appear in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**


Use the **Up** and **Down** navigation keys to highlight the desired text input mode, then press the  key.

Tip: You can also change the text entry mode by pressing and holding the  key. You can change the capitalization mode by momentarily pressing the  key.



8. At any point while composing a picture message, press the **Options** (right) soft key (). The following message composition and sending options appear in the display:

- **Preview** — The message appears in the display as will appear to the recipient(s).
- **Add Quick Text** — Insert pre-composed text in the message.
- **Save As Draft** — Save the message to your Draft folder.
- **Priority Level** — Indicate whether the message is **High**, **Normal**, or **Low** priority.
- **Validity Period** — Set a specific date and time, before which the message can be delivered, after which the message is recalled.
- **Deferred Delivery** — Defer delivery of the message to some particular time.
- **Delivery Ack** — Enable/disable confirmation of message delivery.
- **Remove PIC** — Removes the picture currently included in this message.
- **Remove Sound** — Removes the sound file currently included in this message.
- **Remove Video** — Video Message only — Removes the video clip currently included in this message.
- **Add To Contacts** — Add the recipient number(s) to your Contacts.

Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.



9. If you wish to insert a sound into your Picture message, follow the instructions in steps 10 through 12. Otherwise, proceed to step 13.
10. Use the navigation keys to highlight the **Sound** field.
11. Press the **Sounds** (left) soft key (). The following options appear in the display:
- **Record New** — Record a new memo to insert into the message.
 - **3 or more Sounds** — Select from a list of voice memos and/or sound files saved and/or preloaded on your phone.

Note: You can record and insert a voice memo of up to 60 seconds in length if you record first before attaching a picture. (See *Record a Voice Memo* on page 119 for more information.) If a picture is attached before recording, the size of the voice memo is limited to the amount of remaining memory.

12. Use the **Up/Down** navigation keys to highlight an sound file, then press the  key to insert a sound into your message. Press  to exit the pop-up menu without inserting a sound.




Send Picture Messages in Standby Mode


You can now send or preview the Picture message.



13. **To preview the Picture message before sending**, press the **Options** (right) soft key () , then select **Preview** from the list of options that appears in the display.
14. **To send the Picture message now**, press the **SEND** key (). **Sending Message** appears in the display and a progress bar indicates the send status.


Send Picture Messages in Standby Mode



Send Picture/Video messages to recipients with a compatible phone or other device, and accompany the Picture/Video message with a voice memo, ring tone, or downloaded ring tone.






1. In standby mode, press the **Messages** (left) soft key () , then press  (for **Send Message**) and  for **Picture Message**. The **Create Pic Msg** screen appears in the display with the **Send To** tab highlighted.
2. Enter the phone number(s) or e-mail address(s) of the recipient of the Picture message.

Tip: Press the **Add** (right) soft key () to display a pop-up menu that lets you search your Contacts for a recipient, select a Group as recipient, browse the Recent Calls log for a recipient, or send the Picture message to the OnlineAlbum.



3. Press the  key to move the cursor to the **Subject** field, then enter a subject for the Picture message using the keypad.
See See “*Entering Text*” on page 44 for more information.
4. Use the **Up** and **Down** navigation keys to highlight the **Text** field.
5. Enter the message text using the keypad.
See See “*Entering Text*” on page 44 for more information.
6. At any point while composing text for the picture message, press the Left soft key () to change the text entry mode. The following options appear in the display:
 - **T9 Word**
 - **Abc**
 - **ABC**
 - **123**
 - **Symbols**

Use the **Up** and **Down** navigation keys to highlight the desired text input mode, then press the  key.


 
Tip: You can also change the text entry mode by pressing and holding the  key. You can change the capitalization mode by momentarily pressing the  key.

7. At any point while composing the picture message, press the **Options** (right) soft key (). The following message composition and sending options appear in the display:
 - **Preview** — The message appears in the display as will appear to the recipient(s).
 - **Add Quick Text** — Insert pre-composed text in the message.
 - **Save As Draft** — Save the message to your Draft folder.
 - **Priority Level** — Indicate whether the message is **High** or **Normal** priority.
 - **Validity Period** — Set a specific date and time, before which the message can be delivered, after which the message is recalled.
 - **Deferred Delivery** — Defer delivery of the message to some particular time.
 - **Delivery Ack** — Enable/disable confirmation of message delivery.
 - **Remove PIC** — Removes the picture currently included in this message.
 - **Remove Sound** — Removes the sound file currently included in this message.
 - **Remove Video** — Video Message only — Removes the video clip currently included in this message.
 - **Add To Contacts** — Add the recipient number(s) to your Contacts.Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.
8. Press the **Down** navigation key until the **PIC** field is highlighted.
9. Press the **My PIC** (left) soft key (). The My Images screen appears in the display.
10. Use the navigation keys to highlight a photo to insert into your picture message, then press the  key.
11. If you wish to insert a sound into your Picture message, follow the instructions in steps 12 through 14. Otherwise, proceed to step 15.
12. Use the navigation keys to highlight the **Sound** field.
13. Press the **Sounds** (left) soft key (). The following options appear in the display:
 - **Record New** — Record a new memo to insert into the message.
 - **3 or more Sounds** — Select from a list of voice memos and/or sound files saved and/or preloaded on your phone.

Note: You can record and insert a voice memo of up to 60 seconds in length if you record first before attaching a picture. (See “Record a Voice Memo” on page 119 for more information.) If a picture is attached before recording, the size of the voice memo is limited to the amount of remaining memory.


14. Use the **Up/Down** navigation keys to highlight a sound file, then press the  key to insert a sound into your message. Press  to exit the pop-up menu without inserting a sound.

You can now send or preview the Picture message.


15. **To preview the Picture message before sending**, press the **Options** (right) soft key (), then select **Preview** from the list of options that appears in the display.
16. **To send the Picture message now**, press the **SEND** key (). **Sending Message** appears in the display and a progress bar indicates the send status.

Receive Messages


Receiving Text Messages

When you receive a text message in standby mode, the message alert sounds (unless turned off) and **New Message** pops-up in the display, along with the closed envelope icon (). The following options also appear in the display:


- **View Now** — Opens the message, where you have the Options: Forward, Reply With Copy, Save Quick Text, Lock, Add To Contacts, Message Info.
- **View Later** — Returns your phone to standby mode. The message is saved to your Inbox where you can view it later.

Use the Up and Down navigation keys to highlight the preferred option and press the  key.

Receive Text Messages While in a Call

When you receive a text message while in a call, the message alert sounds (unless turned off) and **New Message** pops-up in the display, along with the closed envelope icon (). The following options also appear in the display:

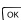
- **View Now** — Opens the message without interrupting the call. You have the Options: Forward, Reply With Copy, Save Quick Text, Lock, Add To Contacts, Message Info.
- **View Later** — Returns your phone to standby mode. The message is saved to your Inbox where you can view it later.

Use the Up and Down navigation keys to highlight the preferred option and press the  key.

Receive Picture/Video Messages

When you receive a picture message in standby mode, the message alert sounds (unless turned off) and **New Pic/Video Message** pops-up in the display, along with the closed envelope icon (). The following options also appear in the display:

- **View Now** — Connects to your Wireless Provider's message server, retrieves the message, opens, and plays it. You have the option to Play Again, Forward, Erase, Save PIC, Save Sound, Save Quick Text, Lock, Add to Contacts, or view Message Info.
- **View Later** — Returns your phone to standby mode. The message is saved to your Inbox where you can retrieve and view/play it later.
- **Reject** — Discards the message without retrieving it.

Use the Up and Down navigation keys to highlight the preferred option and press the  key.

Receive Picture/Video Messages While in a Call

When you receive a picture/video message while in a call, the message alert sounds (unless turned off) and "**1 New PIC/Video Message(s)**" pops-up in the display, along with the closed envelope icon ().

The new picture/video message is automatically saved to your Inbox where you can retrieve and erase or view/play it later.

View a Picture/Video Message Later

When you elect to view a new picture/video message later or you receive a picture/video message during a call, the message is saved to your Inbox.

- ▶ In standby mode, press the **Messages** (left) soft key () , then press  (for **Inbox**) to open your Inbox and view the picture/video message.

For more information on viewing your Inbox messages, see "*Inbox*" on page 71.



Message Folders



Your phone stores messages in any one of three folders. The subsections that follow describe each message folder in detail.





Inbox

Received messages of all types (except Voicemail) are stored in the **Inbox** folder.

Message Folders

1. In standby mode, press the **Messages** (left) soft key () , then press  for **Inbox**. A list of incoming messages appears in the display.



Tip: While in a call, press the **Options** (right) soft key () , then press  for **Message**, to open the **Messages** menu.


2. Use the navigation keys to highlight the message that you wish to view.
3. Press the  key to view contents of the highlighted message.
4. While viewing your message press the **Options** (right) soft key (). The following options appear in the display:
 - **Play Again** — Picture Messages Only — Replay this message.
 - **Forward** — Send a copy of this message to another recipient.
 - **Reply With Copy** — Text Messages Only — Compose a reply message and include a copy of this message.
 - **Save PIC** — Picture Messages Only — Save the picture included in this message to the My Images folder.
 - **Save Sound** — Picture Messages Only — Save the audio file (sound) included in this message to the My Sounds folder.
 - **Save Quick Text** — Save the text in this message as a new Quick Text.
 - **Lock / Unlock** — Block/permit erasure of the highlighted message.
 - **Add To Contacts** — Save the sender's number to your Contacts.
 - **Message Info** — Shows message delivery status, addressee, size, and so on.
5. Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.
6. Press the **REPLY** key () to compose a reply message.

Outbox

Your phone stores messages in the Outbox, regardless of whether the message was successfully transmitted. Verify if and when a message or e-mail was successfully transmitted by enabling the Delivery Ack feature. See “*Create and Send Text Messages*” on page 65 for more information on delivery acknowledgements.

Review Messages in the Outbox

1. In standby mode, press the **Messages** (left) soft key () , then press  for **Outbox**. Your list of sent messages appear in the display.

2. Press the **Options** (right) soft key (). The following options appear in the display:
 - **Forward** — Send a copy of the message to a new recipient. The **Forward Message** screen or the **Forward Message** screen appears in the display.
 - **Resend** — Re-send the highlighted message to the original recipient.
 - **Lock / Unlock** — Block a message from being erased or free a message to be erased.
 - **Add To Contacts** — Add the recipient's number or e-mail address to your Contacts.
 - **Erase Outbox** — Delete all unlocked messages in the Outbox folder.
 - **Message Info** — Display message delivery status, recipient, size, and so on.
3. Use the navigation keys to highlight the desired option.
4. Press the **OK** key to perform the function for the highlighted option.




Messages and Lock Mode

Your phone can still receive messages while in Lock Mode. The time and date of the message appear in the display, but you cannot access the message until you enter the lock code.




Drafts Folder

Messages in the Drafts folder are those that have been composed but never sent. You can return to the Drafts folder at any time to view, edit, or send a draft message.



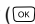



Create a Draft Message

1. In standby mode, press the **Messages** (left) soft key () , then press  for **Send Message**. The following options appear in the display:
 - **Text Message**
 - **Picture Message**
 - **Video Message**
2. Use the **Up** and **Down** navigation keys to highlight the type of message draft you wish to make, then press the **OK** key. The **Create Text / Pic / Video Msg** screen appears in the display with the **Send To** tab highlighted.
3. Enter the phone number of the recipient, then press the **OK** key.
4. Compose your draft message using the keypad, then press the **Options** (right) soft key ().
5. Use the navigation keys to highlight **Save As Draft**, then press the **OK** key. A confirmation message appears in the display and your message is saved to the Drafts folder.

Draft Message Options

1. In standby mode, press the **Messages** (left) soft key () , then press  for **Drafts**. The **Draft** screen appears in the display showing a list of any draft messages that you've saved.
2. Use the navigation keys to highlight a draft message.
3. Press the **Options** (right) soft key (). The following options appear in the display:
 - **SEND** — Send a copy of the draft message to the current recipient.
 - **Lock / Unlock** — Block a message from being erased or free a message to be erased.
 - **Add to Contacts** — Add the recipient number(s) to your Contacts.
 - **Save Quick Text** — Save the message text as a Quick Text item.
 - **Erase Drafts** — Erase all unlocked messages from the Drafts folder.

Edit Draft Text Messages

1. In standby mode, press the **Messages** (left) soft key () , then press  for **Drafts**. The **Draft** screen appears in the display showing a list of any draft messages that you've saved.
2. Use the navigation keys to highlight the draft text message that you wish to edit, then press the **EDIT** key (). The **Create Text Msg** screen appears in the display with the message **Text** field showing.
3. Use the keypad to add to or change the message text.
See *"Entering Text"* on page 44 for more information.
4. After you complete your changes to the selected draft message, do one of the following:
 - Press the **Options** (right) soft key (), then select the **Save As Draft** option to save the changed message as a new draft message.
 - Press the  key to send the changed message.
 - Press the **Options** (right) soft key (), then select the following options as needed before sending the changed message:
 - **Edit Send To** — Change or add message recipient number(s) or e-mail address(es).
 - **Add Quick Text** — Add pre-composed text to the message.
 - **Save As Draft** — Save the changed draft message as a new draft.
 - **Priority Level** — Indicate whether the message is **High** or **Normal** priority.
 - **Validity Period** — Set a specific date and time, before which the message can be delivered, after which the message is recalled.
 - **Deferred Delivery** — Defer delivery of the message to some particular time.


- **Enh. Delivery Ack** — Enable/disable confirmation of message delivery.
 - **Add To Contacts** — Add the recipient number(s) to your Contacts.
- Use the navigation keys to highlight an option. Press the **OK** key to perform the function for the highlighted option.

Edit Draft Picture/Video Messages

1. In standby mode, press the **Messages** (left) soft key (**M**), then press **4 OK** for **Drafts**. The **Draft** screen appears in the display showing a list of any draft messages that you've saved.
2. Use the navigation keys to highlight the draft picture/video message that you wish to edit, then press the **EDIT** key (**OK**). The **Create Pic Msg** or **Create Video Msg** screen appears in the display with the **Send To** tab highlighted.
3. Make any needed recipient number changes and press the **OK** key. The draft picture message contents appear in the display with the **Subject** field highlighted.
4. Use the Up and Down navigation keys to highlight each field to be changed. Use the keypad to make any text changes.
See “*Entering Text*” on page 44 for more information.
5. Press the Down navigation key until the **PIC/Video** field is highlighted to add a picture/video to the message or to change the picture/video.
6. Press the **My PIC/My Video** (left) soft key (**M**). The Images/Videos screen appears in the display.
7. Do one of the following:
 - Use the navigation keys to highlight a photo/video to insert into your picture/video message, then press the **OK** key.
 - Press the **Camera** (right) soft key (**C**) to take a new photo, then press the **SEND** key (**OK**). The Create Pic Msg screen appears, which allows you to add sound to your message.
8. After you complete your changes to the selected draft message, do one of the following:
 - Press the **Options** (right) soft key (**O**), then select the **Save As Draft** option to save the changed message as a new draft message.
 - Press the **OK** key to send the changed message.
 - Press the **Options** (right) soft key (**O**), then select the following options as needed before sending the changed message:
 - **Preview** — View the message as the recipient will see it.
 - **Add Quick Text** — Add pre-composed text to the message.





Erase Messages

- **Save As Draft** — Save the changed draft message as a new draft.
- **Priority Level** — Indicate whether the message is **High**, **Normal**, or **Low** priority.
- **Validity Period** — Set a specific date and time, before which the message can be delivered, after which the message is recalled.
- **Deferred Delivery** — Defer delivery of the message to some particular time.
- **Delivery Ack** — Enable/disable confirmation of message delivery.
- **Remove PIC** — Delete the picture currently included in the message.
- **Remove Sound** — Delete the sound file currently included in the message.
- **Remove Video** — Delete the video currently included in the message.
- **Add To Contacts** — Add the recipient number(s) to your Contacts.

Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.

Voicemail

Messages in your voice mailbox are logged in the Voicemail folder of the **Messages** menu. Open the Voicemail folder to view the **Callback #** (if available), **Urgency**, and other details of the voicemail message.

1. In standby mode, press the **Messages** (left) soft key (), then press  for **Voicemail**.
2. Press the  key or the  key to call your voice mailbox and listen to the message.


Note: You can also press and hold  to dial your voice mailbox.



Erase Messages

You can erase any or all of the unlocked messages in each your message folders.

Erase One Message

To erase a message from one of your message folders, do the following:

1. In standby mode, press the **Messages** (left) soft key (). The following options appear in the display:
 - **Send Message**
 - **Inbox**
 - **Outbox**
 - **Drafts**
 - **Voicemail**
 - **Erase Messages**
 - **Msg Settings**


2. Use the Up and Down navigation keys to select a message folder option and press the  key. A list of messages in the selected folder appears in the display.
3. Use the Up and Down navigation keys to select a message you wish to erase, then press the **Erase** (left) soft key (). You are prompted to confirm the erasure.







Note: If the selected message is locked, "**Cannot Erase Msg Locked.**" appears in the display. To erase the message, you must first unlock it. (See "*Message Folders*" on page 71 for more information.)

4. Press the **Yes** (left) soft key () to erase the message. Press the **No** (right) soft key () or the  key to keep the message.

Erase All Messages

Erase Messages lets you erase all unlocked messages from any or all of your message folders.



Note: This function erases all messages in the selected folder. To delete a single message, open the folder from the **Messages** menu, highlight the message, then press the **Erase** (left) soft key ().

1. In standby mode, press the **Messages** (left) soft key (), then press  for **Erase Messages**. The following options appear in the display:
 - **Inbox** — Deletes all unlocked messages stored in the Inbox.
 - **Outbox** — Deletes all unlocked messages stored in the Outbox.
 - **Drafts** — Deletes all unlocked messages stored in the Draft folder.
 - **All Messages** — Deletes all unlocked messages stored in all of the message folders.
2. Use the Up and Down navigation keys to highlight the folder containing the messages that you wish to delete.
3. Press the  key. You're prompted to confirm the erasure of all messages in the selected folder or in all folders.
4. Press the **Yes** (left) soft key () to erase the messages.
Press the **No** (right) soft key () or the  key to keep the messages.



Message Settings

Use the **Msg Settings** menu to define general message settings and specific settings for text and picture messages.






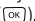
Message Settings

1. In standby mode, press the **Messages** (left) soft key () , then press  for **Msg Settings**. The **Msg Settings** screen appears in the display.
2. Use the navigation keys to highlight **General**, **Text Message**, or **Picture/Video Message**.
3. Use the instructions in the following subsections to change settings for **General**, **Text**, and **Picture** messages.


General Message Settings

1. With **General** highlighted in the **Msg Setting** sub menu, press the  key. The following options appear in the display:
 - **Auto Save** — Enable or disable automatic saving of messages or enable a prompt to save messages.
 - **Auto Erase** — Choose to receive (or not receive) a warning message when you delete a message.
 - **Quick Text** — Edit your pre-composed messages, which can then be inserted into new messages.
 - **Vicemail #** — Edit or view your Voicemail number.
 - **Entry Mode** — Choose the default method for entering text into messages. Options are T9 Word, Abc, ABC, 123.
 - **Callback #** — Enable, disable, and enter/change the number message recipients are to use to respond to your message.
 - **Signature** — Enable, disable, and enter/change the text signature to be added to the end of your messages.
 - **Reminder** — Enable, disable, and set the time interval for sounding a reminder alert tone.
2. Use the navigation keys to highlight the desired setting. Press the  key to enter the highlighted option's sub menu.

Editing and Adding New Quick Text


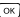
1. In standby mode, press the **Messages** (left) soft key () , then press  (for **Msg Settings**),  (for **General**), and  for **Quick Text**. The **Quick Text** menu appears in the display.
2. Do one of the following:
 - To add a Quick Text, press the **New** (right) soft key ().
 - Use the **Up** and **Down** navigation keys to highlight the Quick Text you want to change, then press the **EDIT** key ().

Note: You cannot edit the preloaded Quick Text entries included in your phone.



3. Use the keypad to enter or change the text content of your Quick Text. (See See “*Entering Text*” on page 44 for more information.)
4. Once you’re finished entering or changing your Quick Text entry, press the  key. The **Quick Text** menu appears in the display with your new Quick Text entry highlighted.

Tip: You can also create new Quick Text by using the **Save Quick Text** option in your Message Folders’ **Options** menus. See “*Message Folders*” on page 71 for more information.

Text Message Settings

1. With **Text Message** highlighted in the **Msg Settings** sub menu, press the  key. The following text message options appear in the display:
 - **Auto View** — Off/On — With Auto View **On**, the full content of text messages appear in the display as they are received.
 - **Signature** — Create a signature, which can be attached at the bottom of outgoing messages (see **Insert Sign.** above).
 - **Auto Scroll** — Message text automatically scrolls, showing the entire message text in the display.
2. Use the navigation keys to highlight the desired setting. Press the  key to enter the highlighted option’s sub menu.

Picture/Video Message Settings

1. With **Picture Message** highlighted in the **Msg Settings** sub menu, press the  key. The following options appear in the display:
 - **Auto Receive** — Options to save messages automatically in the Outbox, or prompt before saving.
 - **Signature** — Create a signature, which can be attached at the bottom of outgoing messages (see **Insert Sign.** above).
2. Use the navigation keys to highlight the desired setting. Press the  key to enter the highlighted option’s sub menu.

Section 8: easyedgeSM



Topics Covered

- easyedgeSM Features
 - Accessing easyedgeSM
-

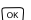
With easyedgeSM, you can download full featured applications over the air including games, personalized ring tones, pictures, and more. You can send and receive instant messages and email, or browse the web to catch up on all the latest news.

This section outlines how to obtain games and other applications for your phone. For more information, contact U.S. Cellular.

easyedgeSM Features

1. In standby mode, press the **MENU** key () , then press **4th** () for (easyedgeSM). The following option appears in the display:
 - easyedgeSM
-

Tip: To launch the easyedgeSM menu using a voice command — In standby mode, press and hold **044** until the phone prompts, “Say a command.” Say “Go to easyedge” into the microphone.

2. Use the navigation keys to highlight the desired easyedgeSM option, then press the  key.

Accessing easyedgeSM

Applications Shopping and Downloading



Download games, ring tones, e-mail, and more using easyedgeSM. For information on airtime charges, contact U.S. Cellular.

1. In standby mode, press the **Right** navigation key to launch easyedgeSM. The following easyedgeSM options appear in the display:



easyedgeSM **Settings**

Help

2. Use the navigation keys to highlight the **easyedgeSM** icon () , then press the  key.

Note: The first time you access **easyedgeSM** Shop, an “airtime warning” message appears in the display along with instructions on how to remove this message.


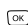

Your phone takes a moment to connect, then the **easyedgeSM** Catalog menu appears in the display.

3. Follow the instructions in your phone’s display.

Note: Please check with U.S. Cellular for availability of applications.

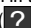
Changing Your **easyedgeSM** Settings



Use the **Settings** menu in **easyedgeSM** to manage, move, order applications, and much more.

1. In standby mode, press the Right navigation key to launch **easyedgeSM**.
2. At the **easyedgeSM** menu, use the navigation keys to highlight the **Settings** icon () , then press the  key. The following options appear in the display:
 - **Order Apps** — Download applications over the network.
 - **Move Apps** — Move previously downloaded applications between available folders.
 - **Manage Apps** — View used and available memory.
 - **Main Menu View** — Select whether you wish to view the main **easyedgeSM** menu in a list or icon format.
 - **Screen Savers** — View downloaded screensavers.
 - **Data Charge** — Enable/disable all data charges.
 - **View Log** — View the **easyedgeSM** log, which displays information about recent activity using **easyedgeSM**.
3. Use the navigation keys to highlight the desired option.
4. Press the  key to enter the option’s sub menu and view or change settings.

Using On-line Help

The Help sub menu within **easyedgeSM** is a short tutorial on several **easyedgeSM** features. View information about charges, cancelling subscriptions, buying applications, disabling applications, and more.

1. Within in the **easyedgeSM** menu, use the navigation keys to highlight the **Help** () icon.

2. Press the  key. The Help subjects described in the following subsections appear in the display.
3. Use the navigation keys to highlight the desired Help subject.
4. Press the  key to view the selected Help information.

Buying New Applications

To buy new and exciting applications, visit the **easyedgeSM** Shop. It provides you with a variety of applications you can choose from.

What do I pay?


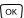



When you buy an application, you will be charged for the purchase cost of the application and the data usage to download it. Charges will also apply when you use applications that require data usage, such as downloading information and sending text messages.

Airtime Charges

Network usage charges may be incurred for network connections. A network connection is used when you are browsing online, downloading and restoring applications, or canceling subscription applications. Network usage charges may also apply when you use applications that require network connections, such as downloading information and sending text messages.

Cancelling Subscription

To cancel a subscription to an application, do the following:


1. At the **easyedgeSM** menu, use the navigation keys to highlight the Settings icon () , then press the  key.
2. Use the navigation keys to highlight **Manage Apps**.
3. Press the  key.
4. Use the navigation keys to highlight the Subscription you want to cancel.
5. Press the  key.
6. Use the navigation keys to highlight **Cancel Subscription**.
7. Press the  key.

Demo Applications

A Demo app is free and is designed to demonstrate the application's main features. It usually expires after a certain period of time or a number of uses and often has limited functions. When you run a demo application, you will be presented with a purchase option so you won't have to look for the application in the **easyedgeSM** catalog.

Removing Applications

You may remove applications that are no longer needed. When you remove an application, you cannot use the application unless you purchase it again. To remove an application, do the following:

1. At the **easyedgeSM** menu, use the navigation keys to highlight the Settings icon (), then press the **OK** key.
2. Use the navigation keys to highlight **Manage Apps**.
3. Press the **OK** key.
4. Use the navigation keys to highlight the application you want to remove.
5. Press the **OK** key.
6. Use the navigation keys to highlight **Remove**.
7. Press the **OK** key.

Disabled Applications

You can install new applications even if the memory of your phone is full by partially removing (disabling) applications you haven't used recently. When you need to use a disabled application, you can restore it at no additional purchase cost.

Restoring Applications

Disabled applications can be quickly restored at no additional purchase cost. To restore an application, run the application you want to restore from the Main Menu. You will be guided through the restoration process.

Expired Applications

Applications that were purchased based on the number of uses or for a specified period of time expire. You can purchase additional uses from the **easyedgeSM** Shop.

Section 9: Display

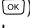


Topics Covered

- Display Settings
 - Menu Style
 - Wallpaper
 - Clock Format
 - Theme
 - Dialing Font
 - Banner
 - Backlight
-

This section shows you how to change your phone's menu appearance, display brightness and contrast, and display content to better meet your needs.

Display Settings

You can set the menu style, standby mode animation, customize backlight settings, and more in the Display sub menu.

1. In standby mode, press the **MENU** key () , then press  for **Display**. The following menus appear in the display:
 - **Menu Style** — Choose how the main menu appears in the display when you press the **MENU** key ().
 - **Wallpaper** — Choose the image that appears in the background of your phone's display while your phone is closed or in standby mode.
 - **Clock Format** — Lets you select the format your phone will use to present the current time in your phone's display.
 - **Theme** — Lets you select the color theme used to display menu screens and pop-up menus and messages.
 - **Dialing Font** — Lets you select the style and size of your dialing font.
 - **Banner** — Create your own personalized greeting that appears in the display when your phone is in standby mode.
 - **Backlight** — Set backlight options for the display and keypad.

Tip: To launch the **Display** menu using a voice command — In standby mode, press and hold **OK** until the phone prompts, “Say a command.” Say “Go to Display” into the microphone.

2. Use the navigation keys to highlight a sub menu.
3. Press the **OK** key to enter the highlighted sub menu. The following sections describe the Display sub menus in greater detail.

Menu Style

1. In standby mode, press the **MENU** key (**OK**), then press **5** (for **Display**) and **1** for **Menu Style**. The following options appear in the display:
 - **Icon** — Shows the main menu as an array of icons.
 - **List** — Shows the main menu in scrollable list (text) format.
2. Use the Navigation key to highlight **Icon** or **List**, then press the **OK** key.

Wallpaper

Wallpaper lets you choose the images that appear in the background of your phone's front and main displays while your phone is closed or in standby mode.

1. In standby mode, press the **MENU** key (**OK**), then press **5** (for **Display**) and **2** for **Wallpaper**. The following options appear in the display:
 - **My Images** — Lets you select a photo you've taken or an image that you've downloaded from the Internet as a wallpaper image.
 - **My Videos** — Lets you select a video you've recorded or downloaded as a wallpaper image.
 - **Preset Images** — Lets you select an image that came preloaded with your phone as a wallpaper image.
2. Use the Up and Down navigation keys to highlight the image type that you wish to use and press the **OK** key. An array of images appears in the display.
3. Use the Navigation key to highlight the image that you wish to use and press the **OK** key to save your selection.

Clock Format

Clock Format lets you choose the format your phone will use to present the current time in your phone's front and main displays while your phone is closed or in standby mode.

1. In standby mode, press the **MENU** key (**OK**), then press **5** (for **Display**) and **3** for **Clock Format**.

The following options appear in the display:

- **Digital** — The current time appears as large numbers on the second line from the top of the display.
 - **Analog** — The current time appears as sweep hand positions on a clock image. Individual hours appear as Roman numerals (I – XII).
 - **Off** — The current time appears as small numbers on the second line from the bottom of the display.
2. Use the navigation keys to highlight the desired clock format and press the **OK** key. A “Clock Set” message appears in the display, and you are returned to the **Display** menu.

Theme

Lets you select the color theme used to display menu screens and popup menus and messages. You can choose from a variety of color themes.

1. In standby mode, press the **MENU** key (**OK**), then press **5 M** (for **Display**) and **4 M** for **Theme**. The following options are available:
 - **Papaya**
 - **White**
 - **Black**
2. Use the navigation keys to show the available Color Themes (which appear in the preview screen), then press the **OK** key to save the selected Color Theme setting.

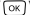


Dialing Font

Lets you select the style and size of your dialing font.


1. In standby mode, press the **MENU** key (**OK**), then press **5 M** (for **Display**) and **5 M** for **Dialing Font**. The following options appear in the display:
 - **Style** — Lets you select the font used to display the digits you dial.
 - **Normal**
 - **Quill Pen**
 - **Sticky**
 - **Color Dial**
 - **Size** — Lets you set the selected font size.
 - **Normal**
 - **Large**
2. Use the navigation keys to highlight the desired option and setting and press the **OK** key to save the selected setting.

Banner

Create your own personalized greeting that appears in the display while your phone is in standby mode.

1. In standby mode, press the **MENU** key () , then press  (for **Display**) and  for **Banner**.

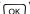



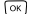
Tip: Press and hold  to erase an existing banner, if necessary.

2. Enter a word or short phrase to appear in your phone's display while in standby mode (Up to 13 characters). (See "Entering Text" on page 44. for more information.)
3. Press the  key to save the new banner.

Backlight

You can set the backlight for your display or keypad to remain on for a specified period of time or remain on as long as the folder is open.

Note: Prolonged backlight use drains your battery faster.

1. In standby mode, press the **MENU** key () , then press  (for **Display**) and  for **Backlight**. The following sub menus appear in the display:
 - **Main Display** — Sets the time the internal display backlight remains on after a period of inactivity. Optional settings are: **7 seconds**, **15 seconds**, **30 seconds**, **Always On**, and **Always Off**.
 - **Keypad** — Sets the amount of time the keypad backlight remains on after a period of inactivity. Optional settings are: **7 seconds**, **15 seconds**, **30 seconds**, **Always On**, and **Always Off**.
 - **Brightness** — Sets the brightness of the backlight to one of five possible settings.
2. Use the Up and Down navigation keys to highlight the desired sub menu and press the  key.
3. Use the Navigation key to change settings as desired the selected sub menu, and press the  key to save your selection.

Section 10: Sounds

Topics Covered

- Volume
 - Ringer Type
 - Alerts
 - Key Tone
-


This section shows you how to customize your phone's audio properties, such as ringers, keypad tones, alerts, shut down sounds, and more.

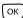
Tip: To launch the **Sounds** menu using a voice command — In standby mode, press and hold **OK** until the phone prompts, “Say a command.” Say “Go to Sounds” into the microphone.

Volume

Use the Volume sub menu to set the default volume for incoming calls and alarms.

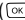



1. In standby mode, press the **MENU** key (**OK**), then press **6** (for **Sounds**) and **1** for **Volume**. The following options appear in the display:
 - **Voice Calls** — Lets you set your phone to be silent, play a sound, and/or vibrate in response to incoming calls.
 - **Messages** — Lets you set your phone to be silent, play a sound, and/or vibrate in response to incoming messages.
 - **Alarms** — Lets you set your phone to be silent, play a sound, and/or vibrate in response to a preset alarm time being reached.
2. Use the Up and Down navigation keys or the Volume key on the left side of your phone to highlight the desired option, then press the **OK** key.
3. Use the Navigation key or the Volume key on the left side of your phone to select the volume level (**Ringer Off**, **Low**, **Low/Medium**, **Medium**, **Medium/High**, **High**) or vibrate mode (**Vibrate**, **Vibrate/High**) for the selected option.

Tip: You can press the **Play** (left) soft key () to preview the selected ringtone or alert tone while adjusting the volume setting.




4. Press the  key to save the option setting.

Ringer Type

You can assign ring tones for calls, alarms, and other alerts in the **Ringer Type** sub menu.




1. In standby mode, press the **MENU** key (), then press  (for **Sounds**) and  for **Ringer Type**. The following ringer types appear in the display:
 - **Voice Calls**
 - **Messages**
2. Use the Up and Down navigation keys or the Volume key on the left side of your phone to highlight a ringer type, then press the  key. The following options appear in the display:
 - **My Ringtones**
 - **My Sounds**

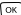


Note: Your phone includes preloaded ringtones and sounds. You can download additional ringtones and sounds using **easyedge**SM.

3. Use the navigation keys to highlight the desired option, then press the  key. A list of ringtones or sounds appears in the display.
4. Use the navigation keys to scroll through the ringtones and sounds for the selected ringer type.
Press the **Play** (left) soft key () to play each ringtone or sound.
5. Press the  key to save the desired ringtone or sound as the selected Ringer Type.

Alerts

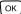






You can set your phone to sound an alert whenever you enter or leave your service area, connect or disconnect a call, and other options.

1. In standby mode, press the **MENU** key (), then press  (for **Sounds**) and  for **Alerts**. The following options appear in the display:
 - **Minute Beep** — Sound an alert ten seconds before each elapsed minute of a call.
 - **Roaming** — Sound an alert when you leave your home service area while on a call.

- **Call Connect** — Sound an alert when you connect a call.
 - **Power On/Off** — Sound an alert when you turn your phone on or off.
2. Use the navigation keys to highlight a sub menu, then press the  key. The following available settings appear in the display:
 - **On**
 - **Off**
 3. Use the **Up** and **Down** navigation keys to change the setting for the selected alert.
 4. Press the  key to save the new setting. Press  to retain the current setting.

Key Tone

Key Tone allows you to adjust the volume level and length of the tone that the keypad generates each time you press a key.

1. In standby mode, press the **MENU** key () , then press  (for **Sounds**) and  for **Key Tone**. The following options appear in the display:
 - **Tone Level**
 - **Tone Length**
2. Use the Up and Down navigation keys to highlight **Tone Level**, then press the  key.
 - Use the Volume key or Navigation key to set the tone level for keypad tones.
 - Press the  key when the desired tone level setting is reached to save your setting. You are returned to the **Key Tone** sub menu.
3. Use the Up and Down navigation keys to highlight **Tone Length**, then press the  key.
 - Use the Volume key or Navigation key to highlight **Short** or **Long**.
 - Press the  key to save your setting. You are returned to the **Key Tone** sub menu.

Section 11: Camera-Camcorder

Topics Covered

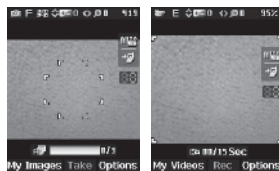 
- Taking Pictures and Videos
 - Screen Layouts
 - Saving Pictures and Videos
 - Camera Options
 - Camcorder Options
 - Zoom
 - Brightness
 - My Images
 - Point, Click, and Send Pictures and Videos
-

Use your r610 phone to take full color digital pictures and videos, display them on your phone's vivid color display, and instantly share them with family and friends. It's fun, and as easy to use as a traditional point-and-click camera or camcorder. This section explains how you can do the following:

- Take pictures and videos with your phone's built-in digital camera-camcorder.
- Send and receive pictures and videos taken with your phone's camera-camcorder.
- Set the several options associated with the camera-camcorder that help you take crisp, clear pictures and videos.

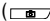
Taking Pictures and Videos

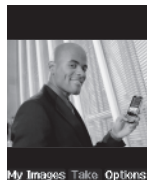 
Taking pictures and videos with the built-in camera-camcorder is as simple as launching the camera or camcorder, choosing a subject, pointing the lens (located at the top of your phone's flip), and pressing a button.









Taking Snap Shots (Single Pictures)

To take a single picture using the current camera settings, do the following:

1. In standby mode, press and hold the Camera key () on the right side of the phone. The message "Loading..." appears in the display followed by a camera view finder screen. (See "Screen Layouts" on page 94 for more information.)



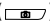
Note: You can also activate the camera by pressing the **MENU** key () , then press  (for **Multimedia**) and  for **Camera**.




2. Using the display as a viewfinder, point the camera at your subject.
 3. Press the  key when the image that you wish to capture appears in the display.
 4. Press the **Save** (left) soft key () to save the picture to memory.
 5. Press the **Erase** (right) soft key () to erase the photo.
-

Tip: You can change a number of the camera's settings to suit particular uses for your pictures. See "Camera Options" on page 97 for more information.



Taking Multi Shot Pictures

When taking pictures of moving subjects or subjects you cannot pose, such as children and pets, the camera's Multi Shot mode simplifies the process of taking multiple pictures in quick succession. After taking Multi Shot pictures, the camera automatically displays thumbnail views of the pictures you have just taken so you can select the best picture(s) and discard the rest.

1. In standby mode, press and hold the Camera key () on the right side of the phone. The message "Loading..." appears in the display followed by a camera view finder screen. (See "Screen Layouts" on page 94 for more information.)

Note: You can also activate the camera by pressing the **MENU** key () , then press  (for **Multimedia**) and  for **Camera**.

2. Press the **Options** (right) soft key () . The options menu bar appears in the display.


- Use the Left and Right navigation keys to highlight the **Multi Shot** icon () . The following **Multi Shot** options appear in the display:
 - Series Shot** — Lets you take a series of 3 or 5 photos.
 - Divided Shot** — Lets you take a mosaic of 4 or 9 photos.
 - Auto/Manual** — Lets you select to take the multiple photos automatically (in quick succession) or to take each successive photo manually.
- Use the **Up** and **Down** navigation keys to highlight the desired option, then press the  key.

When you select the **Series Shot** option, the following options appear in the display:


- **Off**
- **3**
- **5**

When you select the **Divided Shot** option, the following options appear in the display:



- **Off**
- **4**
- **9**

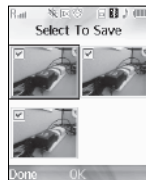 
- Use the **Up** and **Down** navigation keys to highlight **3** or **5** (Series Shot) or **4** or **9** (Divided Shot), then press the  key.

The Series Shot progress bar ( or ) or the Divided Shot icon ( or ) (which acts as a progress bar while pictures are being taken) appears in the display.


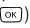

- Using the display as a viewfinder, point the camera lens at your subject.
- Press the  key when the image that you wish to capture appears in the display. The camera takes one picture (**Manual**) or multiple pictures in quick succession (**Auto**), then the Series Shot **Select to Save** screen or the Divided Shot multiple-photo screen appears in the display.

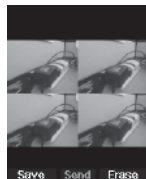 
• **Series Shot:**

- To save the pictures to memory, press the **Done** (left) soft key (.
- To discard the pictures, press the  key.



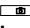
Screen Layouts

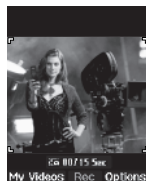 
- **Divided Shot:**
 - To save the pictures to memory, press the **Save** (left) soft key ()
 - To send the picture in a picture message, press the **Send** key ()
 - To discard the pictures, press the **Erase** (right) soft key ()



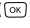


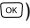
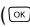


Taking Videos

To take a video using the current camcorder settings, do the following:

1. In camera mode, press and hold the Camera key () on the right side of the phone. The message "Loading..." appears in the display followed by the camcorder view finder screen. (See "Camcorder Screen" on page 96 for more information.)



Note: You can also activate the camcorder by doing one of the following:

1. Pressing the **MENU** key () , then press **2nd** (for **Multimedia**) and **2nd** for **Camcorder**.
2. From the camera screen, by pressing the **Options** (right) soft key () , using the Left and Right navigation keys to highlight the Camcorder icon, and then pressing the  key.
2. Using the display as a viewfinder, point the camera lens at your subject.
3. Press the **REC** () key when the image that you wish to capture appears in the display. Recording continues until you press the **Stop** () key or until 15 seconds of video has been recorded, whichever comes first.
4. Press the **Save** (left) soft key () to save the video to memory.
5. Press the **Erase** (right) soft key () to erase the video.




Screen Layouts

Camera Screen

When you activate your phone's camera, the second line of the display is reserved for the current camera resolution setting and the picture counter. The center of the display shows a viewfinder image of the subject at which the camera is pointed.



The soft key labels on the bottom line of the display change to the following:

- **My Images** — Pressing the Left soft key () opens the **My Images** multimedia folder so you can view or manage your stored pictures. (See “*My Images*” on page 111 for more information.)
- **TAKE** — Pressing the  key takes a picture of the image currently appearing on the display.
- **Options** — Pressing the right soft key () opens a menu bar of camera options and settings.

Camera Screen Icons



Camera — Indicates the camera is active.



Quality — Indicates camera's picture quality setting. (You can change the picture quality setting. See “*Quality*” on page 107 for more information.)



Camera Resolution — Indicates camera's current resolution setting. (You can change the camera resolution setting. See “*Camera Options*” on page 97 for more information.)



Photo Limit — Indicates the available number of photos you can take. (Depending on the camera resolution setting.)



White Balance — Indicates camera's white balance setting. (You can change the camera white balance setting. See “*White Balance*” on page 107 for more information.)



Phone Memory — Indicates photos will be stored in the phone's memory.



Card Memory — Indicates photos will be stored on a microSD Memory Card.





Zoom — Enlarges the image from X0 to X9 before you take a picture. (Depending on the camera resolution setting.)




Brightness — Brightens or darkens the image from -4 to +4.



Multi Shot in use (Divided Shot) — Takes multiple pictures automatically (as shown) or manually () when you press the  key. The number of pictures taken depends upon the Divided Shot setting.



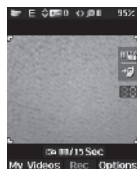 
Multi Shot in use (Series Shot) — Takes multiple pictures when you press the  key. The number of pictures taken depends upon the Series Shot setting.






Self Timer in use — Delays the camera shutter from 2 to 10 seconds after you press the  key.

Camcorder Screen

When you activate your phone's camcorder, the first line of the display shows current camcorder setting icons. The center of the display shows a viewfinder image of the subject at which the camcorder is pointed. The soft key labels on the bottom line of the display change to the following:



- **My Videos** — Pressing the left soft key () opens the **My Videos** multimedia folder so you can view or manage your stored pictures. (See “*My Images*” on page 111 for more information.)
- **Rec** — Pressing the  key starts the camcorder recording a video of the image currently appearing in the display.
- **Options** — Pressing the right soft key () opens a menu bar of camcorder options and settings.

Camcorder Screen Icons



Camcorder — Indicates the camcorder is active.



Quality — Indicates camcorder's video quality setting. (You can change the video quality setting. See “*Quality*” on page 107 for more information.)



Memory Available — Indicates the percentage of memory available for you to store a video.



White Balance — Indicates the camcorder's white balance setting. (You can change the camcorder white balance setting. See “*White Balance*” on page 107 for more information.)



Phone Memory — Indicates videos will be stored in the phone's memory.



Card Memory — Indicates videos will be stored on a microSD Memory Card.



Zoom — Enlarges the image from X0 to X9 before you take a video. (Depending on the camcorder quality setting.)




Brightness — Brightens or darkens the image from -4 to +4.




Self Timer in use — Delays the camcorder from recording for from 2 to 10 seconds after you press the **OK** key.



Recording Mode — Indicates camcorder is in MMS mode (as shown) with Quality and recording time limits or in Normal mode ().

Saving Pictures and Videos

After you've taken a picture or video, you can do any of the following:

- **Save the picture or video** by pressing the **Save** (left) soft key ().

A picture is stored in the **My Images** folder. A video is stored in the **My Videos** folder. These folders are part of the phone's memory and/or part of an optional Memory Card devoted to storing, browsing, and viewing saved pictures and videos. (See “*My Images*” on page 111 for more information.)

- **Send the picture or video** to someone else by pressing the **Send** () key.

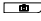


For a detailed procedure, see “*Creating and Sending a Picture Message*” on page 70 or See “*Creating and Sending a Video Message*” on page 72.

- **Discard the picture or video** by pressing the **Erase** (right) soft key ().

Camera Options




The Camera Options let you adjust the default camera settings to suite available lighting, the subject of the photo, or the purpose of the photo. To access Camera Options, do the following:

Camera Options

1. In standby mode, press and hold the Camera key (). The camera viewfinder screen appears in the display.
2. Press the **Options** (right) soft key (). The following sub-menus appear in the display:
 - **Flash**
 - **Self Timer**
 - **Multi Shot**
 - **Quality**
 - **Resolution**
 - **White Balance**
 - **Fun Tools**
 - **Metering**
 - **Settings**
 - **Camcorder**
3. Use the Left and Right navigation keys to highlight the desired option and/or setting, then press the  key to save the selected setting.


Flash



Flash lets you control whether the camera flash lights (**Off**) and when [always (**On**), automatically (**Auto**), one shot only (**On This Shot**)].

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the navigation keys to highlight the **Flash** icon (). The following options appear in the display:
 - **Off**
 - **Always On**
 - **Auto**
 - **On This Shot**
3. Use the Up and Down navigation keys to highlight the desired flash setting, then press the  key. The camera screen appears in the display.


Self Timer

Self Timer lets you delay taking a picture long enough to let you join others in a picture.

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.

2. Use the Left and Right navigation keys to highlight the **Self Timer** icon (). The following options appear in the camera screen:
 - **Off**
 - **2 Sec.**
 - **5 Sec.**
 - **10 Sec.**
3. Use the Up and Down navigation keys to highlight a Self Timer value, then press the  key.




Note: If you select **2 Sec.**, **5 sec.**, or **10 sec.**, the Self Timer icon () appears in the camera screen in the display.



The next time you press the  key, the countdown timer indicates the time remaining before the camera takes the picture. The phone reads the countdown timer value to you beginning with two or three and continuing to zero, when the picture is taken.

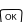
Tip: To stop the countdown timer without resetting it, press the  key.

Multi Shot

Multi Shot lets you take multiple pictures in succession at the touch of a key.



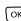
1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Multi Shot** icon (). The following options appear in the camera screen:
 - **Series Shot** — Off / 3 pictures taken in succession / 5 pictures taken in succession.
 - **Divided Shot** — Off / 4 of the same new picture in a 2-by-2 array / 9 of the same new picture in a 3-by-3 array.
 - **Auto/Manual** — Automatically takes pictures / You Manually take the pictures.
3. Use the Up and Down navigation keys to highlight a Multi Shot value, then press the  key. The camera screen appears in the display.

Note: When a Multi Shot option is set to a value other than Off, either a Series Shot progress bar () or a Divided Shot icon () appears in the viewfinder screen.

The next time you press the  key, the camera takes several pictures in rapid succession.




Quality

You can affect how much your photo is compressed, thereby reducing it's overall size (not to be confused with resolution).

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Quality** icon (). The following options appear in the camera screen: **Fine**, **Normal**, or **Economy**.
3. Use the Up and Down navigation keys to highlight a Quality value, then press the  key. The camera screen appears in the display.

Resolution



Change the size (in bytes) of your pictures using the Resolution setting.

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Resolution** icon (). The following options appear in the camera screen:
 - **1280 X 960** (pixels)
 - **640 X 480** (pixels)
 - **320 X 240** (pixels)
 - **176 X 144** (pixels)
 - **160 X 120** (pixels)
 - **Picture ID** — Lets you take pictures the correct size and resolution for Contacts list picture IDs.
3. Use the Up and Down navigation keys to highlight a Resolution value, then press the  key. The camera screen appears in the display.

Note: The Resolution setting affects zoom capabilities. When Resolution is set to **1280 X 960**, zoom is not available. When Resolution is set to any value lower than **1280 X 960**, zoom settings 1 – 9 are available.

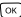
White Balance

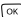
White Balance allows you to adjust picture quality according to available light.

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **White Balance** icon (). The following options appear in the camera screen:

- **Auto** — The camera automatically adjusts picture quality to available light.
- **Sunny** — Use this setting when taking pictures in full sun.
- **Cloudy** — Use this setting when taking pictures in cloudy conditions.
- **Tungsten** — Use this setting when taking pictures under incandescent lights.
- **Fluorescent** — Use this setting when taking pictures under fluorescent lights.
- **Manual** — Use this setting to manually adjust the camera's White Balance.

Each option, as you highlight it, shows the effects it has on a picture.



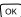
3. Use the Up and Down navigation keys to highlight a Resolution value, then press the  key. The camera viewfinder screen appears in the display with your selected White Balance applied.

The next time you press the  key, the camera applies the selected White Balance to your picture.

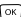
Fun Tools

Color Effects

Change the look of your pictures with Color Effects. Choose from eight available settings such as Gray, Negative, and Sepia. The selected color effect previews in the display before you take the picture.

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Fun Tools** icon ().
3. Use the Up and Down navigation keys to highlight **Color Effects**, then press the  key. The following options appear in the display:

Note: Choose Normal to disable Color Effects.



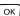
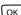
- **Normal** — Subjects and pictures appear with a normal hue.
 - **Black&White** — Subjects and pictures appear in black and white.
 - **Sepia** — Subjects and pictures appear in a brownish-gray hue.
 - **Green** — Subjects and pictures appear in a greenish hue.
 - **Aqua** — Subjects and pictures appear in an aqua hue.
 - **Negative** — Subjects and pictures appear in inverted colors.
 - **Sketch** — Subjects and pictures appear as rough black outlines.
 - **Emboss** — Subjects and pictures appear as raised images.
4. Use the navigation keys to highlight the color effect of your choice is highlighted, then press the  key. You're returned to the camera viewfinder screen.

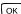
When you take your next picture, the phone's display previews your subject image with the selected color effect.

Fun Frames




Fun Frames lets you temporarily apply one of the preloaded picture frames in your phone to characterize or enhance one or more pictures.

Note: The None frame is a blank frame.

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Fun Tools** icon ().
3. Use the Up and Down navigation keys to highlight **Fun Frames**, then press the  key. A pop-up menu of the available Fun Frames appears in the display.
4. Use the Up and Down navigation keys to show the various Fun Frames.
5. When you decide on the frame you wish to use, press the  key. The camera screen appears in the display with your selected Fun Frame in place.

The next time you press the  key, the camera includes the selected Fun Frame in your picture.




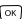
Metering

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Metering** icon (). The following options appear in the display:
 - **Average** — Adjusts exposure to the average light level over a large picture area.
 - **Center** — Adjusts exposure to the average light level over a center portion of the subject.
 - **Spot** — Adjusts exposure to the light level over a small portion of the subject.
3. Use the Up and Down navigation keys to highlight the Metering setting of your choice, then press the  key. You're returned to the camera viewfinder screen.




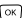
When you take your next picture, the phone's display previews your subject image with the measured exposure.

Settings




Memory

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Memory**, then press the  key. The following Memory options appear in the display:
 - **Phone** — Stores pictures in phone memory.
 - **Card** — Stores pictures on an optional microSD Memory Card.
4. Use the Up and Down navigation keys to highlight the memory location setting of your choice, then press the  key. You're returned to the camera viewfinder screen.

Auto Save



1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Auto Save**, then press the  key. The following options appear in the display:
 - **Off**
 - **On**
4. Use the Up and Down navigation keys to highlight the automatic save setting of your choice, then press the  key. You're returned to the camera viewfinder screen.

Icon Display

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Icon Display**, then press the  key. The following options appear in the display:
 - **Display All** — Shows camera icons as seen in “Camera Screen Icons” on page 95.
 - **Guideline** — Shows a cross hatch pattern in the view finder screen.



- **No Icons** — Shows a nearly full-display subject image and without icons.
4. Use the Up and Down navigation keys to highlight the viewfinder screen setting of your choice, then press the **OK** key. You're returned to the camera viewfinder screen.

View Mode



1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **View Mode**, then press the **OK** key. The following options appear in the display:
 - **Landscape** — Shows a wider, more panoramic view of the subject.
 - **Portrait** — Shows a narrower, more vertically oriented view of the subject.
4. Use the Up and Down navigation keys to highlight the view mode setting of your choice, then press the **OK** key. You're returned to the camera viewfinder screen, which now shows the selected view.

Shutter Sound



Choose from four different sounds whenever you take a picture. Aside from being a cool sound effect, Shutter Sounds acts as an audible reminder that your camera has taken a picture.

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Shutter Sound**, then press the **OK** key. The following shutter sounds appear in the display:
 - **Off**
 - **Shutter**
 - **OK**
 - **DingDong**
4. Use the Up and Down navigation keys to highlight the shutter sound setting of your choice, then press the **OK** key. You're returned to the camera viewfinder screen.

Reset Settings

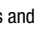

1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Left and Right navigation keys to highlight **Reset Settings**, then press the **OK** key. You are prompted to confirm reset of all camera settings.
 - Select the **Yes** option to reset the camera settings to default values.
 - Select the **No** option to keep the current camera settings.

Camcorder




1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Camcorder** icon (), then press the **OK** key. The Camcorder view finder screen appears in the display.

Camcorder Options

The Camcorder Options let you adjust the default camcorder settings to suite available lighting, the subject of the video, or the purpose of the video. To access Camcorder Options, do the following:




1. In camera mode, press and hold the Camera key (). The camcorder viewfinder screen appears in the display.
2. Press the **Options** (right) soft key (). The following sub-menus appear in the display:
 - **Recording Mode**
 - **Flash**
 - **Self Timer**
 - **Quality**
 - **White Balance**
 - **Color Effects**
 - **Settings**
 - **Camera**
3. Use the Left and Right navigation keys to highlight the desired option and/or setting, then press the **OK** key to save the selected setting.

Recording Mode

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the navigation keys to highlight the **Recording Mode** icon (). The following options appear in the display:
 - **Limit for MMS** — Record videos that are a maximum of 15 seconds long. The videos can be included in video messages.
 - **Normal** — Record videos that are any length up, depending on available memory.
3. Use the Up and Down navigation keys to highlight the desired recording mode setting, then press the  key. The camcorder screen appears in the display.



Flash


Flash lets you control whether the camera flash lights (**Off**) and when [always (**On**), automatically (**Auto**)].

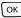
1. In camera mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Flash** icon (). The following options appear in the display:
 - **Off**
 - **Always On**
 - **Auto**
3. Use the Up and Down navigation keys to highlight the desired flash setting, then press the  key. The camera screen appears in the display.

Self Timer

Self Timer lets you delay taking a video long enough to let you join others in the video.

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Self Timer** icon (). The following options appear in the display:
 - **Off**
 - **2 Sec.**
 - **5 Sec.**
 - **10 Sec.**




3. Use the Up and Down navigation keys to highlight the desired delay, then press the  key. The camcorder screen appears in the display.

The next time you press the  key, a countdown timer in the display indicates the time remaining before the camcorder starts recording the video. The phone reads the countdown timer value beginning with two or three and continuing to zero, when recording begins.

Tip: To stop the countdown timer without resetting it, press the  key.




Quality


You can affect how much your video is compressed, thereby reducing its overall size (not to be confused with resolution).

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Quality** icon ().
3. Use the Up and Down navigation keys to highlight **Fine**, **Normal**, or **Economy**.
4. Once the quality setting of your choice is highlighted, press the  key. You're returned to the camcorder viewfinder screen.

White Balance



White Balance allows you to adjust video quality according to available light.

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **White Balance** icon (). The following options appear in the display:
 - **Auto** — The camcorder automatically adjusts color balance to available light.
 - **Sunny** — Use this setting when recording videos in full sun.
 - **Cloudy** — Use this setting when recording videos in cloudy conditions.
 - **Tungsten** — Use this setting when recording videos under incandescent lights.
 - **Fluorescent** — Use this setting when recording videos under fluorescent lights.
 - **Manual** — Use this option to change the default settings.
3. Use the Up and Down navigation keys to show the various White Balances and the effects they have on a video.
4. When you decide on the White Balance you wish to use, press the  key. The camcorder viewfinder screen appears in the display with your selected White Balance applied.


The next time you press the  key, the camcorder applies the selected White Balance to your video.

Color Effects

Change the look of your videos with Color Effects. Choose from eight available settings such as Gray, Negative, and Sepia. The selected color effect previews in the display before you take the picture.

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the navigation keys to highlight the **Color Effects** icon (). The following options appear in the display:
 - **Normal** — Subjects and videos appear with a normal hue.
 - **Black&White** — Subjects and videos appear in black and white.
 - **Sepia** — Subjects and pictures videos in a brownish-gray hue.
 - **Green** — Subjects and pictures videos in a greenish hue.
 - **Aqua** — Subjects and pictures videos in an aqua hue.
 - **Negative** — Subjects and pictures videos in inverted colors.
 - **Sketch** — Subjects and pictures videos as rough black outlines.
 - **Emboss** — Subjects and pictures videos as raised images.



Note: Choose **Normal** to disable Color Effects.



3. After you highlight the color tone of your choice, then press the  key. You're returned to the camcorder viewfinder screen.

When you record your next video, the phone's display previews your subject image with the selected color effect.





Settings

Memory




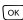
1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().

3. Use the Up and Down navigation keys to highlight **Memory**, then press the  key. The following Memory options appear in the display:
 - **Phone** — Stores videos in phone memory.
 - **Card** — Stores videos on an optional microSD Memory Card.
4. Use the Up and Down navigation keys to highlight the memory location setting of your choice, then press the  key. You're returned to the camcorder viewfinder screen.

Auto Save

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Auto Save**, then press the  key. The following options appear in the display:
 - **Off**
 - **On**
4. Use the Up and Down navigation keys to highlight the automatic save setting of your choice, then press the  key. You're returned to the camcorder viewfinder screen.



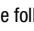

Icon Display

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Icon Display**, then press the  key. The following options appear in the display:
 - **Display All** — Shows camcorder icons as seen in “*Camcorder Screen Icons*” on page 96.
 - **No Icons** — Shows a nearly full-display subject image and without icons.
4. Use the Up and Down navigation keys to highlight the viewfinder screen setting of your choice, then press the  key. You're returned to the camcorder viewfinder screen.

Start Sound





Choose from two different sounds whenever you begin video recording. Aside from being a cool sound effect, Start Sound acts as an audible reminder that your camcorder has begun recording a video.

Camcorder Options



1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **Start Sound**, then press the  key. The following options appear in the display:
 - **Off**
 - **Look here**
 - **1,2,3!**
4. Use the Up and Down navigation keys to highlight the desired start sound, then press the  key. You're returned to the camcorder viewfinder screen.


End Sound

Choose from two different sounds whenever you stop video recording. Aside from being a cool sound effect, End Sound acts as an audible reminder that your camcorder has stopped recording a video.



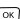
1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().
3. Use the Up and Down navigation keys to highlight **End Sound**, then press the  key. The following options appear in the display:
 - **Off**
 - **OK**
 - **Melody**
4. Use the Up and Down navigation keys to highlight the desired end sound, then press the  key. You're returned to the camcorder viewfinder screen.

Reset Settings

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Settings** icon ().

3. Use the Up and Down navigation keys to highlight **Reset Settings**, then press the  key. You are prompted to confirm reset of all camcorder settings.
 - Select the **Yes** option to reset the camcorder settings to default values.
 - Select the **No** option to keep the current camcorder settings.

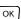
Camera

1. In camcorder mode, press the **Options** (right) soft key (). The options menu bar appears in the display.
2. Use the Left and Right navigation keys to highlight the **Camera** icon () , then press the  key. The Camera viewfinder screen appears in the display.

Zoom

Zoom lets you temporarily enlarge the pictures you take. Increasing the Zoom (1 – 9) enlarges your pictures or videos (0 is normal).

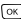
- In camera or camcorder viewfinder screen, use the Left and Right navigation keys to adjust the Zoom (the screen image enlarges to show the affects of your changes).

The next time you press the  key, the camera takes an enlarged picture or the camcorder takes an enlarged video according to your selected Zoom setting.

Brightness


Brightness lets you temporarily lighten the pictures you take. Increasing the Brightness (-4 – +4) lightens your pictures (0 is normal).

- In camera or camcorder viewfinder screen, use the Up and Down navigation keys to adjust the Brightness (the screen image lightens or darkens to show the affects of your changes).

The next time you press the  key, the camera takes a lighter or darker picture or the camcorder records a lighter or darker video according to your selected Brightness setting.

My Images



Saved pictures are stored in the My Images folder. You can browse the pictures one at a time (expanded mode), or view several pictures at once in thumbnail format.

1. In the Camera viewfinder screen, press the **My Images** (left) soft key (). Any pictures that you've saved appear in the display.

Point, Click, and Send Pictures and Videos

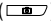
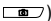


2. Use the navigation keys to browse pictures in the gallery.
3. Press the **Options** (right) soft key () while viewing pictures in the Gallery. The following options appear in the display:
 - **Send** — Send the currently displayed or highlighted picture as a Picture message.
 - **Online Album** — Send the currently displayed or highlighted picture to the Online Album.
 - **Set As** — Assign the currently displayed or highlighted picture to be standby screen Wallpaper or as a Picture ID for someone in your Contacts list.
 - **Slide Show** — Show the pictures as a full screen slide show.
 - **Rename** — Rename the currently displayed or highlighted picture.
 - **Move** — Relocate the currently displayed or highlighted picture from phone memory to a Memory Card or from a Memory Card to phone memory.
 - **Lock / Unlock** — Lock the currently displayed or highlighted picture so that it cannot be deleted, or unlock the picture so that it can be deleted.
 - **Erase** — Erase selected unlocked pictures in the Picture Gallery. Locked pictures must be unlocked before you can erase them.
 - **Erase All** — Erase all unlocked pictures in the Picture Gallery. Locked pictures must be unlocked before you can erase them.
 - **Picture Info** — View the Title, time and date created, size, and resolution of the currently highlighted or displayed picture.
4. Use the navigation keys to highlight the desired option. Press the  key to perform the function for the option or enter its sub menu.

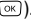

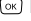

Switch From Expanded to Thumbnail Mode

1. Use the navigation keys to highlight a picture that you wish to view full size, press the  key.
2. Press the  key to return to the thumbnail view of your photos.

Point, Click, and Send Pictures and Videos

Take a picture or record a video and send it to anyone with a compatible device in a few easy steps.

1. In standby mode, press and hold the Camera key () to activate the camera.
Press and hold the Camera key () a second time to activate the camcorder.
2. Using the display as a viewfinder, take the desired picture or record the desired video by pressing the  key.
Press the  key a second time to stop video recording.

3. Press the **Send** key (). You are prompted to send the picture(s) or video in a Picture or Video message.
4. Use the Up and Down navigation keys to highlight **No** and press the  key. The **Create Pic Msg** or **Create Video Msg** screen appears in the display.
5. Enter the recipient's phone number or e-mail address using the keypad.
6. Press the  key to save the address(es) and move to the **Subject** field. Use the navigation keys to move to the other message fields. For more information, see "*Messaging*" on page 68.
7. When you are finished composing your message, press the **SEND** key () to send the Picture or Video message to the intended recipients.

Section 12: Multimedia


Topics Covered

- Accessing Multimedia
 - My Images
 - My Videos
 - My Ringtones
 - My Sounds
-


This section outlines your phone's multimedia functions and key features associated with multimedia.

Accessing Multimedia

1. In standby mode, press the **MENU** key () , then press  for **Multimedia**. The following Multimedia sub-menus appear in the display:
 - **Camera** — Lets you launch and set up your phone's camera. (See “*Camera-Camcorder*” on page 91 for more information.)
 - **Camcorder** — Lets you launch and set up your phone's camcorder. (See “*Camera-Camcorder*” on page 91 for more information.)
 - **My Images** — Lets you choose the pictures that appear in your phone's display or in picture messages.
 - **My Videos** — Lets you choose the video clips that appear in your phone's display or in video messages.
 - **My Ringtones** — Lets you assign ringtones for Ringtone (calls), Contact ID, and Alert Tone.
 - **My Sounds** — Lets you assign sound files as ringers for Ringtone (calls), Contact ID, and Alert Tone.
 - **Music Library** — Lets you listen to and manage music (MP3) files you have stored on a microSD™ Memory Card.

Tip: To launch the Multimedia menu using a voice command — In standby mode, press and hold  until the phone prompts, “**Say a command.**” Say “**Go to Multimedia**” into the microphone.

2. Use the navigation keys to highlight a sub-menu.


3. Press  to enter the highlighted sub-menu. The following sections describe the above listed sub-menus in greater detail.






My Images

My Images lets you choose the pictures that appear in your phone's display while in standby mode (Wallpaper) and as picture IDs for your contacts.

1. At the **Multimedia** menu, press  for **My Images**. A 2-by-2 matrix of thumbnail images of your pictures appears in the display.

Tip: You can also access My Images from:


- The Camera screen by pressing the **My Images** (left) soft key ()
 - The **Edit Contact** screen by selecting the picture ID field and pressing the **Set** (left) soft key ()
-






2. Use the navigation keys to highlight a picture.
Press the  key to expand the selected picture to fill the screen.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected image to a specified recipient in a Picture message.
 - **Online Album** — Lets you send the selected image to an Online Album on U.S. Cellular's server. For details, contact U.S. Cellular.
 - **Set As** — Lets you assign the selected picture as the **Main Wallpaper** or as the **Picture ID** for a Contact.
 - **Slide Show** — Shows pictures in My Images folder as a series of full-screen images.
 - **Rename** — Lets you rename the picture.
 - **Move** — Lets you move a selected picture to phone memory or to a Memory Card.
 - **Lock / Unlock** — Lets you prevent/permit picture deletion.
 - **Erase** — Erases a selected picture.
 - **Erase All** — Erases all pictures.
 - **Photo Info** — Displays information about the picture, such as the picture **Name**, creation **Date** and **Time**, **Resolution**, and the data **Size**.
4. Use the Up and Down navigation keys to highlight an option, then press the  key to invoke the selected option.
5. Press the  key to return to the previous menu, or press the  key to return to standby mode.

My Videos

My Images lets you choose the video clips that appear in your phone's display while in standby mode (Wallpaper) and are sent in video messages.

1. At the **Multimedia** menu, press  for **My Videos**. A 2-by-2 matrix of thumbnail images of your video clips appears in the display.

Tip: You can also access My Videos from the Camcorder screen by pressing the **My Videos** (left) soft key .

2. Use the navigation keys to highlight a video clip.
Press the  key to expand the selected video clip to fill the screen.
3. Press the **Options** (right) soft key (). A pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected video clip to a specified recipient in a Video message.
 - **Online Album** — Lets you send the selected video clip to an Online Album on U.S. Cellular's server. For details, contact U.S. Cellular.
 - **Set As** — Lets you assign the selected video clip as the **Main Wallpaper**.
 - **Rename** — Lets you rename the selected video clip.
 - **Move** — Lets you move the selected video clip between phone memory and a Memory Card.
 - **Lock / Unlock** — Lets you prevent/permit video clip deletion.
 - **Erase** — Erases a selected video clip.
 - **Erase All** — Erases all video clips.
 - **Video Info** — Displays information about the video clip, such as the video clip **Name**, creation **Date** and **Time**, **Resolution**, the data **Size**, and the **Duration**.
4. Use the Up and Down navigation keys to highlight an option, then press the  key to invoke the selected option.
5. Press the  key to return to the previous menu, or press the  key to return to standby mode.


My Ringtones



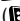
My Ringtones lets you assign ringtones (preloaded and downloaded) for Ringtone, Contact Id, and as Alert Tone.

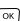
1. At the **Multimedia** menu, press  for **My Ringtones**. A list of ringtones appears in the display.


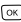


Tip: You can also access My Ringtones from:

—A **Set Alarm** screen by selecting the **Ringer** option, highlighting the second (file name) field, pressing the Left or Right navigation key, and selecting **My Ringtones**. (For more information, see “Alarm Clock” on page 135.)

—The **Edit Contact** screen by selecting the **Ringtone** field, pressing the **Set** (left) soft key () and selecting **My Ringtones** (see “Editing an Existing Contact Entry” on page 55 for more information).

2. Use the navigation keys to highlight a particular ringtone.
 - Press the  key to **PLAY** the ringtone.
 - Press the **Info** (right) soft key () to show the Title and File Type.
3. Press the **Set As** (left) soft key () to assign the highlighted ringtone. The following options appear in the display:
 - **Ringtone** — Lets you assign the selected ringtone to incoming voice calls.
 - **Contact ID** — Lets you assign the selected ringtone as the distinctive ringer for a Contact.
 - **Alert Tone** — Lets you assign the selected ringtone to **All Msg**, **Text Msg**, **Picture Msg**, or **Voicemail Msg**.

Use the Up and Down navigation keys to highlight an option, then press the  key.

4. When using a downloaded ringtone, press the **Options** (right) soft key () and the following options appear in the display:
 - **Lock / Unlock** — Lets you prevent/permit file deletion
 - **Erase** — Erases the selected file
 - **Rename** — Lets you rename the selected file
 - **Ringtone Info** — Displays information about the selected file, such as the file name, the file type, and the data sizeUse the navigation keys to highlight an option, then press the  key.
5. Press the  key to return to the previous menu, or press the  key to return to standby mode.

My Sounds

My Sounds lets you record voice memos and lets you assign preloaded and downloaded sound files as Ringtones, Contact IDs, or Alert Tones.



1. At the **Multimedia** menu, press  for **My Sounds**. **Record New** and a list of sound files appears in the display.

Tip: You can also access My Sounds from:

–A **Set Alarm** screen by selecting the **Ringer** option, highlighting the second (file name) field, pressing the Left or Right navigation key, and selecting **My Sounds**



–The **Edit Contact** screen by selecting the **Ringtone** field, pressing the **Set** (left) soft key () , and selecting **My Sounds**

Note: Recorded sound files (voice memos) do not appear in these lists.

2. Use the navigation keys to highlight the **Record New** option, then press the  key to record a voice memo. (See “Record New Voice Memo” on page 119 for more information.)
3. Press the **Options** (right) soft key ().
 - For a recorded sound file, a pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected sound file to a specified recipient in a Picture message.
 - **Online Album** — Lets you send the selected sound file to an Online Album on U.S. Cellular's server. For details, contact U.S. Cellular.
 - **Rename** — Lets you rename the sound file.
 - **Lock / Unlock** — Lets you protect the sound file from being deleted.
 - **Erase All** — Erases all sound files.
 - **Sound Info** — Displays information about the sound file, such as the Title, File Size, and File Type.
 - For a preloaded sound file, a pop-up menu containing the following options appears in the display:
 - **Send** — Lets you send the selected sound file to a specified recipient in a Picture message.
 - **Set As** — Lets you assign the selected sound file as the **Ringtone** or as the **Contact ID** for a Contact or an **Alert Tone** for Text, Picture, or Voicemail messages.
 - **Erase All** — Erases all sound files.
 - **Sound Info** — Displays information about the sound file, such as the Title, File Size, and File Type.
 - For a downloaded sound file, the following options appear in the display:
 - **Send** — Lets you send the selected sound file to a specified recipient in a Picture message.
 - **Online Album** — Lets you send the selected sound file to an Online Album on U.S. Cellular's server. For details, contact U.S. Cellular.
 - **Set As** — Lets you assign the selected sound file as the **Ringtone** or as the **Contact ID** for a Contact or an **Alert Tone** for Text, Picture, or Voicemail messages.

- **Rename** — Lets you rename the sound file.
- **Lock / Unlock** — Lets you protect the sound file from being deleted.
- **Erase All** — Erases all sound files.
- **Sound Info** — Displays information about the sound file, such as the file name, file type, and the data size.

Use the navigation keys to highlight an option and press the  key.

4. Press the  key to return to the previous menu, or press the  key to return to standby mode.

Record New Voice Memo

You can use your phone to record voice memos for later playback. You can also record the caller on the other end of the line during a phone conversation.




Note: There is limited space for the length of recordings.

- The maximum length for a single voice memo is 60 seconds.

Record a Voice Memo





1. At the **Multimedia** menu, press  (for **My Sounds**), and  for **Record New**. The **Record New** screen appears in the display.

Tip: You can also set your phone to record a Voice Memo while in a call. This lets you record the phone call. See “The In-Use Options Menu” on page 27 for more information.

2. Press the  key, then start speaking. As it is recording the phone displays a countdown timer that shows the seconds remaining for the recording.
 - To pause the memo, press the **Pause** (left) soft key (). When a memo is paused, select **Resume** to continue recording.
3. Press the  key once you’re finished recording. The new recording is automatically saved.





Review Voice Memos

If you’ve saved any voice memos, you can review them anytime.




1. At the **Multimedia** menu, press  for **My Sounds**. A list of sound files appears in the display.
2. Use the navigation keys to highlight the voice memo you wish to review.
3. Press the  key to play the voice memo.
 - To stop the memo, press the  key. Press the  key again to restart playing the memo.

When the voice memo finishes playing, the selected voice memo remains highlighted in the list of sound files.

Erase a Voice Memo

1. At the **Multimedia** menu, press  for **My Sounds**. A list of sound files appears in the display.
2. Use the navigation keys to highlight the voice memo you wish to erase.
3. Press the **Erase** (left) soft key (). "Erase Sound?" appears in the display.
4. Press the **Yes** (left) soft key () to erase the selected voice memo or press the **No** (right) soft key () to return to the list of sound files.

Voice Memo Options

1. At the **Multimedia** menu, press  for **My Sounds**. A list of sound files appears in the display.
2. Use the navigation keys to highlight a voice memo, then press the **Options** (right) soft key (). The following options appear in the display:
 - **Send** — Send this sound file to a specified recipient.
 - **Online Album** — Send this sound file to your Online Album. (For more information, contact US Cellular)
 - **Rename** — Change the name of this sound file.
 - **Lock / Unlock** — Prevent/allow deletion of this sound file.
 - **Erase all** — Erase all unlocked sounds.
 - **Sound Info** — Shows the name, size, type, and date for this sound file.
3. Use the navigation keys to highlight an option, then press the  key.

Music Library

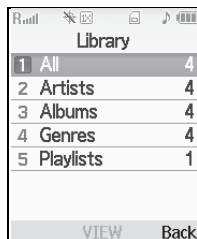 
Music Library lets you play downloaded music files (MP3) stored on a Memory Card. (For information on loading music files on a Memory Card, see "Loading Music Files" on page 123.)

Launching the Music Library Menu

1. At the **Multimedia** menu, press **7** for **Music Library**.

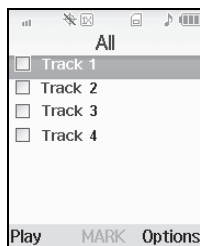 
The **Library** screen appears in the display, showing the following options:

- **All** — Lists all music files on the Memory Card and lets you play individual music files or play multiple music files by creating a temporary music playlist.
- **Artists** — Lists artist names for music files on the Memory Card and lets you play one or more music files by a selected artist.
- **Albums** — Lists album titles for music files on the Memory Card and lets you play one or more music files from a selected album.
- **Genres** — Lists music categories for music files on the Memory Card and lets you play one or more music files of a particular music category.
- **Playlists** — Lists any playlists you have saved and lets you create, save, and manage playlists.



2. Use the Navigation key to highlight a music file, then:

- Press the **Play** (left) soft key (**⏮**) to play the file.
- Press the **MARK** key (**OK**) to select the file for playing or other options.
- Press the **Options** (right) soft key (**⏭**) to select and apply any of the following options to the highlighted or marked music file(s):
 - **Mark All** — Marks all listed music files for playing, removal, or assignment of player settings.
 - **Remove** — Deletes highlighted or marked music file(s) from the Memory Card.
 - **Properties** — Lists the title, artist, album, genres, copyright information, time length, file size, and bit rate of the highlighted music file.
 - **Player Settings** — Lets you assign a particular Visualizer to highlighted or marked music file(s).



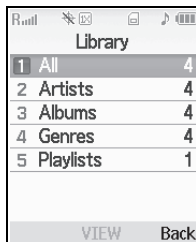 
Use the Up and Down navigation keys to highlight an option, then press the **OK** key.

Playing Music

1. At the **Multimedia** menu, press **7** for **Music Library**.

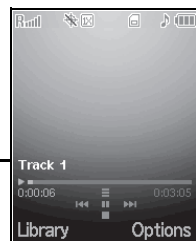 
The **Library** screen appears in the display, showing the following options:

- **All**
- **Artists**
- **Albums**
- **Genres**
- **Playlists**



2. Use the Navigation key to highlight the desired option, press the **VIEW** key (**OK**), and then do one of the following:

- **All option** — Use the Navigation key to highlight a music file, then press the **Play** (left) soft key (**⏮**) to play the file.



Tip: To play additional files, use the Left and Right navigation keys, or highlight and mark additional files for playback. (For more information, see “*Launching the Music Library Menu*” on page 121)

- **Other options** — Use the Navigation key to highlight an Artist, Album, Genre, or Playlist, then press the **VIEW** key (**OK**).

Use the Navigation key to highlight a music file, then press the **Play** (left) soft key (**⏮**) to play the file.

The Music Player screen appears in the display and the selected music file/playlist begins playing.

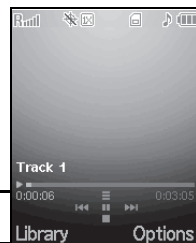 
Music Player Controls

• Volume key:

- To play a music file louder, press the Volume key Up.
- To play a music file softer, press the Volume key Down.

• Navigation key:

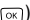
- To pause/resume playing a music file, press the **OK** key.



Note: With the flip closed, use the Camera key to pause/resume playing a music file.


- To stop playing a music file, press the Down navigation key.
- To skip play to an earlier music file in the selected list, press the Left navigation key.
- To skip play to a later music file in the selected list, press the Right navigation key.
- To return to the selected list and choose another music file to play, press the Up navigation key.

- **Library** (left) soft key — Returns you to the **Library** screen.
- **Options** (right) soft key — Shows the following sub-menus and options:
 - **Play Mode** — Lets you change the play mode from Normal, Shuffle, Repeat One, Repeat All, or Shuffle Repeat All.
 - **Add to Playlist** — Moves you to the **Playlists** menu to let you add the selected music file to a playlist.
 - **Remove** — Deletes the selected music file from the Memory Card
 - **Properties** — Lists the title, artist, album, genre, copyright information, time length, file size, and bit rate of the highlighted music file.
 - **Visualizer** — Lets you change the Music Player visualization to Simple View, Equalizer, Album Art, or Lyrics.
 - **Memory Info** — Displays the **Memory Usage** screen which lists Memory Card usage and availability amounts.

Press the Navigation key Up or Down to highlight the desired option, then press the **OK** key () to launch the option or access the sub-menu.

Loading Music Files

To transfer music to a microSD™ Memory Card, do the following:

1. Before loading music files on a Memory Card, do the following:
 - Insert the Memory Card into your phone. (For more information, see “*Install a Memory Card*” on page 12)
 - When the Memory Card icon () appears in the display, remove the Memory Card from your phone. (For more information, see “*Remove a Memory Card*” on page 12)
2. Insert the Memory Card into a compatible card reader.

Note: Card readers vary. Follow the installation instructions included with your card reader and personal computer.

3. Open the Memory Card reader drive and the “My_Music” folder.
4. Drag or download music (MP3) files into the “My_Music” folder.
5. Remove the Memory Card by following the removal instructions for the Memory Card reader and for your personal computer.

Music Library

6. Insert the Memory Card into your phone. (For more information, see *"Install a Memory Card"* on page 12)

Section 13: Tools

Topics Covered

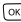

- Tools Menu
 - Voice Service
 - Bluetooth
 - Calendar
 - Memo Pad
 - Alarm Clock
 - World Time
 - Calculator
 - Stop Watch
 - Converter
 - Tip Calculator
-

This section explains how to use your phone's digital assistant functionality to schedule events, set reminders, perform calculations, and more.

Tools Menu

Tools is a suite of Personal Information Manager (PIM) applications such as a Calendar, and Memo Pad that run on your phone. You can use your phone to schedule events, set reminders, perform calculations, and more with the functions provided by this useful feature.

Opening Tools Menu

1. In standby mode, press the **MENU** key () , then press  for **Tools**. The following sub-menus appear in the display:
 - **Voice SVC** — Lets you access voice recognition functions.
 - **Bluetooth** — Lets you access Bluetooth functions.
 - **Calendar** — Lets you view the current, past, or future month in a monthly calendar layout.

Voice Service

- **Memo Pad** — Lets you store and review useful information.
- **Alarm Clock** — Lets you set an alarm to go off once, or daily, at a specified time.
- **World Time** — Lets you view the current time of day or night in another part of the world.
- **Calculator** — Lets you perform calculations, including addition, subtraction, multiplication, and division.
- **Stop Watch** — Lets you view the amount of time.
- **Converter** — Lets you convert currencies (according to the latest rates) and weights, measures, and temperatures from one system or increment to another.
- **Tip Calculator** — Lets you quickly calculate service gratuities with a minimum of keypresses.

Tip: To launch the **Tools** menu using a voice command — In standby mode, press and hold **OK** until the phone prompts, “Say a command.” Say “Go to Tools” into the microphone.

2. Use the navigation keys to highlight an application, then press the **OK** key.

The following sections provide detailed descriptions of the applications and how to use their functions.

Voice Service

VoiceSignal is state-of-the-art voice recognition software for your mobile phone that lets you dial numbers, lookup contact information, and open applications using your voice. To access your phone's voice settings, do the following:

1. At the **Tools** menu, press **Tab** for **Voice SVC**. The following options appear in the display:
 - **Voice Commands** — Lets you place calls, access your Contacts List, review your appointments, and more by speaking commands into your phone. (Also see “Making a Call — Voice Dialing” on page 25 and “Voice Method” on page 52 for more information.)
 - **Voice Settings** — Lets you adjust Voice SVC to better suit your needs.
2. Use the navigation keys to highlight the desired sub-menu, then press **OK**.

Voice Commands

To start VoiceSignal, do one of the following:

- In standby mode, press and hold the **OK** key.

“Say a Command” appears in the display and is pronounced through the earpiece, followed by a list of available commands.

- At the **Tools** menu, press **16x** (for **Voice Service**), and **16x** for **Voice Command**.

Note: You can also set your phone to start VoiceSignal when you open the phone. See “Voice Launch” on page 131. for more information.

VoiceSignal includes the following commands:

- **Call** — Lets you dial the phone by saying any name stored in your contact list, without ever having to record, or “train” that name. VoiceSignal automatically voice-activates all your contacts, even if you have hundreds of them stored on your phone. You can also dial any telephone number, even if it is not stored in your contact list, by saying the digits in the number. (See “*Making a Call — Voice Dialing*” on page 25 for more information.)
- **Send Text** — Lets you launch the **Create Txt Msg** screen. (See “*Create and Send Text Messages*” on page 65 for more information.)
- **Send Picture** — Lets you launch the **Create Pic Msg** screen. (See “*Send Picture Messages in Camera Mode*” on page 66 for more information.)
- **Lookup** — Lets you look up and display contact information for any name stored in your Contacts list by saying the name. (See “*Finding a Contacts Entry*” on page 52 for more information.)
- **Go to** — Lets you access all of the Main Menus on your phone.
- **Check** — Lets you check your phone’s status (that is, network coverage, signal strength, and battery in the same report), network coverage, signal strength, battery, and phone number.

Note: Speaking clearly, say the command that you want to use. If, after a few seconds, the device has not recognized a command, it prompts you to repeat the command. If, after a few more seconds, it still has not recognized a command, it tells you “**Sorry, no match found.**” and cancels voice recognition.

Voice Command Tips:

- Make sure you wait for the beep before speaking.
- Speak clearly at a normal volume, as if you were talking on the phone.

Voice-Activating Your Contacts List

When you first start VoiceSignal, it reads your Contacts list and voice-activates all the names stored there. When you have add or change contacts, VoiceSignal automatically reloads and voice-activates the entire list.

Ending Calls Before Restarting the VoiceSignal Software

When you use VoiceSignal to make a call, you must end that call before you can use VoiceSignal again.

Voice Settings

Choice Lists

VoiceSignal uses choice lists when it is not confident it has correctly recognized a name or number. In this case, it can display a list of up to three possible choices, and prompt you to confirm the correct one.

You can change the way that VoiceSignal uses choice lists with name dialing, digit dialing, and contacts. For each feature, you can choose to always see a choice list (even if there is only one choice), or never see a choice list (even if there are multiple choices). If you leave the setting at “Automatic,” VoiceSignal displays a choice list only when it is not confident it has correctly recognized the name or number.

To change the way VoiceSignal uses choice lists:

1. At the **Tools** menu, press **1-8-8** (for **Voice Service**), **2-8-8** (for **Voice Settings**), and **1-8-8** for **Choice Lists** the following options appear in the display:
 - **Automatic**—VoiceSignal displays a choice list only when it is not sure if it has correctly recognized the name or number.
 - **Always On**—VoiceSignal always displays a choice list, even when there is only one choice.
 - **Always Off**—VoiceSignal never displays a choice list.

Use the navigation keys to highlight the Choice List behavior you prefer, then press the **OK** key to accept the new setting.

Sensitivity

1. At the **Tools** menu, press **1-8-8** (for **Voice Service**), **2-8-8** (for **Voice Settings**), and **2-8-8** for **Sensitivity**. The **Sensitivity** screen appears in the display.
2. Use the navigation keys to adjust the selected Sensitivity setting toward **Reject More** spoken commands or names or toward **Reject Less** spoken commands or names.
3. Press the **OK** key to accept the new setting.

Digit Dialing

If you regularly have trouble with VoiceSignal not recognize the numbers you say, try adapting digit dialing to your voice. Adapting can improve the accuracy of digit recognition, especially for people with strong regional accents.

Note: After you adapt Digit Dial, your phone is customized to your voice, and your voice only. Others will not be able to use it unless they reset the phone to factory defaults.

Adaptation involves recording several sequences of four digits each. The recording process takes about a minute.

Tips for Adapting Digit Dialing

- Use Adapt Digits in a quiet place.
- Make sure you wait for the beep before starting to speak.
- Speak clearly, and say each digit distinctly.
- If you make a mistake while recording a sequence of digits, or if there is an unexpected noise that spoils the recording, re-record that sequence.
- Only adapt digits if you are regularly having problems with digit dialing. Once you adapt, digit dialing will not work as well for other people using your phone. (You can always reset digit adaptation to its original state, as described below.)

Adapt Digits

To adapt digit dialing, do the following:

1. At the **Tools** menu, press **123** (for **Voice Service**), **246** (for **Voice Settings**), and **345** for **Digit Dialing**. The following options appear in the display:
 - **Adapt Digits**
 - **Reset Digits**
2. Use the navigation keys to highlight **Adapt Digits**, then press the **OK** key. Your phone displays the first digit sequence and “**Please say**” plays through the speaker followed by the four digits appearing in the display.
3. Wait for the beep and say the digits using your normal tone of voice. After a moment, the phone plays back the recording and prompts “Did the recording sound ok?”
 - If the recording was good, say “**Yes.**”
 - If you need to re-record, say “**No.**”

If you say “**No.**” the phone prompts you to pronounce the digits again. Wait for the beep and then say the digits.

Repeat this step until you're satisfied with the recording.

4. After confirming that the recording sounds “ok”, continue the recording process with the next set of digits.
5. After six sets of digits, the phone asks whether you want to do more adaptation. Answer “**Yes.**”
6. Repeat steps 4 and 5 for another six sets of digits. After the second group of six sets of digits, “**Adaptation complete**” plays through the speaker and you are returned to the **Adapt Digits** menu.

Reset Digits

To reset digit dialing to factory default settings, do the following:

1. At the **Tools** menu, press **1st** (for **Voice Service**), **2nd** (for **Voice Settings**), and **3rd** for **Digit Dialing**. The following options appear in the display:
 - **Adapt Digits**
 - **Reset Digits**
2. Use the navigation keys to highlight **Reset Digits**, then press the **OK** key. The phone prompts you to confirm digit rest.
3. Press the **OK** (left) soft key (**OK**) to reset your digit adaptation, or press the **Back** (right) soft key (**Back**) to cancel.
4. Press the **OK** key to reset digit dialing and exit.

Sound

Sound lets you specify what (if any) text prompts you want your phone to read to you through the earpiece.

1. At the **Tools** menu, press **1st** (for **Voice Service**), **2nd** (for **Voice Settings**), and **4th** for **Sound**. The following options appear in the display:
 - **Prompts** — Enables (On) or disables (Off) audio prompts.
 - **Digits** — Enables (On) or disables (Off) audio digit playback.
 - **Names** — Enables (On) or disables (Off) audio name playback.
 - **Name Settings** — Lets you adjust the speed and volume of your phone's audio name playback.
2. Use the navigation keys to highlight the desired setting.
3. Press the **OK** key to accept the new setting.

Voice Launch

To set the key or action that launches VoiceSignal, do the following:

1. At the **Tools** menu, press **1st** (for **Voice Service**), **2nd** (for **Voice Settings**), and **5th** for **Voice Launch**. The following options appear in the display:
 - **Key Only** — Press and hold **0**** to activate VoiceSignal for one call.
 - **Key/Ear Mic** — Attach a headset to your phone. Press and hold **0**** to activate VoiceSignal. Now, you can make and end calls using VoiceSignal by pushing the button on the headset.
2. Use the navigation keys to highlight the option you want, then press the **OK** key to save and exit.

About VoiceSignal

This option causes the **About VoiceSignal** screen to appear in the display, showing version and build information about the VoiceSignal software included on your phone.

1. At the **Tools** menu, press **1st** (for **Voice Service**), **2nd** (for **Voice Settings**), and **6th** for **About**.

The **About VoiceSignal** screen appears in the display showing the version level of the VoiceSignal software currently installed on your phone.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The Bluetooth wireless technology settings menu provides the ability to view and change the device name, show the visibility, and set the security for the device.

Turn Bluetooth On/Off

When the Bluetooth is turned on, you can use the Bluetooth features available. When the Bluetooth is turned off, you cannot send or receive information via Bluetooth. To save battery life or in situations where Bluetooth use is prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology headset.

Add New Device

To search for available Bluetooth device(s),

1. At the **Tools** menu, press **2 abc** for **Bluetooth**. The following options appear in the display:
 - **Add New Device**
 - **Registered List**
 - **Bluetooth Settings**
2. Highlight **Add New Device** and press the **OK** key.
 If Bluetooth is off, you are prompted to "Turn Bluetooth on?". Press the **Yes** (left) soft key (**Y**) to turn Bluetooth on. Press the **No** (right) soft key (**N**) to leave Bluetooth off.
 "Place device you are connecting to in discoverable mode" appears in the display.
3. Place the Bluetooth device in discoverable mode. (See the device user manual for more information.)
4. Press the **OK** key. Names of the available devices appears in the display.
5. Use the navigation keys to highlight the device you want to pair with your phone.
6. Press the **PAIR** key (**OK**) to pair the selected device with the phone. You are prompted to enter the passkey or PIN for the selected device.
7. Enter the device passkey or PIN and press the **OK** key.

Registered List

This menu provides a list of Bluetooth wireless technology devices discovered by your handset.

1. At the **Tools** menu, press **2 abc** for **Bluetooth**. The following options appear in the display:
 - **Add New Device**
 - **Registered List**
 - **Bluetooth Settings**
2. Highlight **Registered List** and press the **Select** soft key or the **OK** key.

Connecting to a Bluetooth Device

From the Device list,

1. Highlight the device and press the **OK** key.

2. If you are unable to pair with the device a popup appears in the display. Press the **Yes** soft key to retry.

Bluetooth Settings

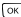
Enable/Disable

Selecting this option turns Bluetooth on or off.

Discovery Mode

Allows other users to see your accessibility. Select **On** for other devices to see your device, or **Off** for no visibility.

Device Name

Shows the handset name. You may change this name. Enter the text and press the  key.


Device Info

Shows the Bluetooth Type, Status, and Address of your phone.

Calendar

Calendar lets you view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is highlighted and days with scheduled events are surrounded by a box.




View an event

1. At the **Tools** menu, press  for **Calendar**.

A calendar appears in the display with the current date highlighted. The month and year also appear.

2. Use the navigation keys to move around within the calendar.
 - Press the  key to open the highlighted date.
 - Press the Volume Up key () to view previous months.
 - Press the Volume Down key () to view future months.
 - Press the **Options** (right) soft key () while viewing the calendar. The following options appear in the display:
 - **Go to Date** — Lets you jump to any date you specify.
 - **Go to Today** — Lets you jump to today's date.
 - **Erase Old** — Lets you erase past events.
 - **Erase all** — Lets you erase all events.
 - Use the navigation keys to highlight the desired option, then press the  key to select the highlighted option and perform the related process.



Add a New Event

1. At the **Tools** menu, press  for **Calendar**.
A calendar appears in the display with the current date highlighted. The month and year also appear.
2. Use the navigation keys to highlight the date of the new event.
3. Press the **Add** (left) soft key (). The **New Event** screen appears in the display.
4. Use the navigation keys and the keypad to select and enter details of the event. (See “Entering Text” on page 44 for more information.)
5. Enter the start and End dates and times for the event using the keypad. Enter the dates and times for the event using 2 digits for day, month, hour, and minute entries. Use 4 digits for year entries.
6. Use the **Left** and **Right** navigation keys to change between **AM** and **PM**.
7. When you're finished entering the dates and times, use the **Up** and **Down** navigation keys to highlight the **Alert** field. Use the **Left** and **Right** navigation keys to select a type of alert.
8. Use the **Up** and **Down** navigation keys to highlight the **Reminder** field. Use the **Left** and **Right** navigation keys to select the Reminder off or to select a reminder interval.
9. Use the **Up** and **Down** navigation keys to highlight the **Alert time** field. Use the **Left** and **Right** navigation keys to select the amount of time before the event occurs that you wish to be notified by an alert.
10. Press the  key to store the event in your calendar. An alert will notify you prior to the event, if you set a notification alert.

Memo Pad

You can create a notes and store them in Memo Pad. You can't prioritize or set an alert for stored notes. Return to Memo Pad anytime you wish to review and edit your notes.

Add a Memo

1. At the **Tools** menu, press  for **Memo Pad**.
2. If you have any stored memos, they appear as a list in the display. If this is your first time in **Memo Pad**, “No memos” appears in the display. Press the **Add** (left) soft key () to add a new memo.

3. Enter a memo using the keypad. (See “Entering Text” on page 44. for more information.)
4. When you're finished entering details for the memo, press the **OK** key. The memo is saved.

View, Edit, and Erase Memos

1. At the **Tools** menu, press **4** for **Memo Pad**.
2. Use the navigation keys to highlight a memo.
3. To view the memo, press the **VIEW** key (**OK**).
4. To edit the memo you are viewing, press the **Edit** (left) soft key (**B**). Edit the memo using the keypad. (See “Entering Text” on page 44. for more information.)
5. To erase the memo you are viewing, press the **Options** (right) soft key (**B**), then select the **Erase** option.
You are prompted to verify the erasure. Press the **Yes** (left) soft key (**B**) to erase the memo. Press the **No** (right) soft key (**B**) to keep the memo.

Alarm Clock


Your phone has an alarm clock that can be set to go off once, or daily at a specified time. Once set, the alarm clock is easy to change or turn off completely.

Note: The alarm doesn't function when the phone is turned off. If the time for an alarm that was set for Once has elapsed and the phone is off, the alarm occurs at the same time on the following day.

1. At the **Tools** menu, press **5** for **Alarm Clock**. The following options appear in the display:
 - **Alarm 1**
 - **Alarm 2**
 - **Alarm 3**
2. Use the navigation keys to highlight an Alarm selection, then press the **OK** key. A Set Alarm screen appears in the display containing the following options:
 - **Alarm**
 - **Time**
 - **Frequency**
 - **Ringer**

Use the Up and Down navigation keys to select options, and use the Left and Right navigation keys to select values for the options.

Use the keypad to enter the time for the alarm.

3. Press the **OK** key when you're finished entering the time for the alarm.
The alarm is set and the alarm icon () appears in the top of the display.

When an Alarm Sounds

An animated alarm clock appears in the display with the options **Snooze** or **Dismiss**, and an alert sounds when the specified time for the alarm arrives.

- Use the navigation keys to highlight **Dismiss**, then press the **OK** key to silence the alarm.
 - If the alarm was set as a Daily alarm, the alarm icon remains in the top of the display.
 - If the alarm was set as a Mon.-Fri., the alarm icon remains in the top of the display.
 - If the alarm was set as a Weekends only alarm, the alarm icon remains in the top of the display.
 - If the alarm was set as a Once only alarm, the alarm icon disappears from the top of the display.

Turn Off the Alarm

1. At the **Tools** menu, press **5** for **Alarm Clock**. The following options appear in the display:
 - **Alarm 1**
 - **Alarm 2**
 - **Alarm 3**
2. Use the navigation keys to highlight an active Alarm selection, then press the **OK** key.
3. The **Alarm** option is highlighted, use the Left and Right navigation keys to select **Off**, then press the **OK** key. Select alarm is turned off.




World Time

World Time lets you view the time of day or night in another part of the world. World Time displays time in the 24 different time zones around the world.

1. At the **Tools** menu, press **6** for **World Time**. A world map appears in the display.


- Use the Left and Right navigation keys to display the time zone and city that you wish to view. The following time zones/cities are supported:

EST/EDT: Detroit Washington D.C New York Montreal Boston Cape Verde	Caracas	Brasilia	Mid Atlantic
Moscow	London	Paris Rome Berlin	Athens Helsinki Jerusalem
Alma-ata	Baku Abu Dhabi	Tashkent	
Guam Sydney Okhotsk	Bangkok Jakarta	Hong Kong Beijing	Seoul Tokyo
AKST/AKDT: Alaska	Wellington	Samoa Midway	HAST/HADT: Honolulu Hawaii
	PST/PDT: Seattle San Francisco Los Angeles	MST/MDT: Denver Arizona	CST/CDT: Dallas Chicago Houston Mexico City



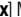


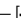




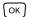
- Press the **Options** (right) soft key () select to display (**DST On**) or not display (**DST Off**) Daylight Savings Time (DST) for the selected time zone.
- Do one of the following:
 - Press the  key to set the selected time zone as the home time zone for your phone.
 - Press the  key to return to the Tools menu.


Calculator


You can perform calculations, including addition, subtraction, multiplication, and division using your phone.

- At the **Tools** menu, press  for **Calculator**. The **Calculator** appears in the display.
- Enter the first number in your equation using the keypad (numbers can be up to nine digits long).

Stop Watch


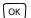


- Press  to enter a decimal point. (Calculator only accepts 2 digits after a decimal point.)
 - Press  to change the sign for a number to a negative.
3. Use the navigation keys to set the type of calculation that you wish to perform. Your choices are as follows:
 - **Up** navigation key —  Multiplication
 - **Left** navigation key —  Subtraction
 - **OK** key —  Equals/Total
 - **Right** navigation key —  Addition
 - **Down** navigation key —  Division
- For nested operations [such as $(1.81 + 9.34) / 5.22$] and to calculate powers (such as 3^2), press the **Operator** (right) soft key (). The following options appear in the display:
-  — Beginning of nested operation
 -  — Ending of nested operation
 - **Power** — Raise the current number to the power of your next entry
4. Use the keypad to enter the second number into your equation.
 5. Repeat steps 3 and 4 as needed.
 6. Press the  key to perform the calculation and view the result.

To clear your last operation or number entry, press the  key.

To clear all of your entries, press the **Clear** (left) soft key ().

Stop Watch

You can use this menu to set a stop watch.

1. At the **Tools** menu, press  for **Stop Watch**.
2. Press the  key to start, stop, and resume the stopwatch count.
3. Press the **Record** (left) soft key () at the start of each succeeding event/lap to record the completion time for the previous event/lap.
4. Press the **Reset** (right) soft key () to erase all stop watch (lap) times recorded.


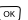



Converter

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature







To convert a currency, length, weight, volume, area, or temperature, do the following:

1. At the **Tools** menu, press  for **Converter**.
2. Use the navigation keys to highlight the conversion feature you wish to use, then press the  key.
3. Use the navigation keys to select the units to be converted **From** and **To**.
4. Enter the quantity you want converted in the **From** field. The converted quantity appears in the **To** field.

Note: To include a decimal point, press the  key.

Currency — Reviewing|Editing Exchange Rates





The Currency Converter includes long-term average exchange rates as default values. To review and/or change a default exchange rate to the current exchange rate, do the following:


1. At the **Tools** menu, press  (for **Converter**), and  for **Currency**.
2. Use the navigation keys to select the currency to be converted **From**.
3. Press the **Rate** (left) soft key (). The **Exchange Rate** list for the **From** currency appears in the display.
4. Press the  key to edit the exchange rate.
5. Use the Up and Down navigation keys to highlight the currency to be converted **To**, then change the current exchange rate.
6. Press the  key to save the changed exchange rate.
7. Press the  key to return to the Currency Converter screen.

Currency — Adding Exchange Rates

You can use the Currency Converter to convert from and to obscure currencies by adding exchange rates for these currencies. To add a currency and its exchange rate to the Currency Converter, do the following:

Tip Calculator

1. At the **Tools** menu, press  (for **Converter**), and  for **Currency**.
2. Press the **Rate** (left) soft key (). The **Exchange Rate** list for the **From** currency appears in the display.
3. Press the **Add** (left) soft key (). The **Add Exchange Rate** screen appears in the display with the **Base** field highlighted.
4. Use the Left and Right navigation keys to select the **Base** currency to be converted from.
5. Press the Down navigation key to highlight the **Currency** field.
6. Enter an identifier of up to 5 characters for the new currency using the keypad. (See “*Entering Text*” on page 44 for more information.)
7. Press the Down navigation key to highlight the **Exchange Rate** field.
8. Enter a decimal exchange rate for the new currency using the keypad.







Note: Press the  key to enter the decimal point.

The **Exchange Rate** field only accepts up to 5 digits after the decimal point.

9. Press the  key to save the new exchange rate.

Currency — Erasing Exchange Rates

You cannot erase the preloaded currencies from the Exchange Rate list. You can erase a currency that you have added to the list by doing the following:

1. At the **Tools** menu, press  (for **Converter**), and  for **Currency**.
2. Press the **Rate** (left) soft key (). The **Exchange Rate** list for the **From** currency appears in the display.
3. Use the Up and Down navigation keys to highlight the currency exchange rate to be erased.
4. Press the **Erase** (right) soft key (). You are prompted to confirm the erasure.
5. Press the **Yes** (left) soft key () to erase the selected exchange rate or press the **No** (right) soft key () to return to the Exchange Rate list.

Tip Calculator

Tip Calculator automatically calculates the following amounts:

- Gratuity (tip)
- Individual payment (for groups)

Calculations are based on the total amount of the check, a selected percentage, and the number of people paying.

1. At the **Tools** menu, press (**0.00**) for **Tip Calculator**. The Tip Calculator screen appears in the display with the **Bill** field highlighted.
2. Use the keypad to enter the total amount of the bill.

Note: To include a decimal point, press the **0.00** key.

3. If needed, press the Down navigation key to highlight the **Tip** field.
4. Use the keypad to enter a tip percentage.
5. If needed, press the Down navigation key to highlight the **# Paying** field.
6. Use the keypad to enter the number of persons paying.
7. The amount of the Tip, the bill Total, and the amount each person should pay appear in the lower half of the screen.

Section 14: Changing Your Settings

Topics Covered

- Accessing Your Settings
 - Location
 - Call Settings
 - Phone Settings
 - Memory Info
 - Phone Info
-

This section explains how to customize your phone to suit your needs and preferences.

Accessing Your Settings

1. In standby mode, press the **MENU** key () , then press  for **Settings**.

Tip: To launch the **Settings** menu using a voice command — In standby mode, press and hold  until the phone prompts, “Say a command.” Say “Go to Settings” into the microphone.


The **Settings** menu appears in the display showing the following options:

- **Location** — Set your phone to send location data continually or only when you dial 911.
 - **Call Settings** — Set how your phone handles voice and data calls.
 - **Phone Settings** — Set your phone’s safety, network, and security options.
 - **Memory Info** — Select where photos and videos are stored, manage your phone’s memory, and format and manage Memory Card storage.
 - **Phone Info** — Access information about your phone, such as your phone number, meanings of phone status icons, hardware and software versions, and more. (Some of this information is valuable to you if you need to call for customer support.)
2. Use the Up or Down navigation keys to highlight the desired sub-menu, then press the  key to access your selection.


Location

This function identifies your location to the network via the Global Positioning System (GPS). You can set this function for continuous operation or to operate only in the event that you dial 911.

Note: Contact U.S. Cellular to determine whether, when, or where location-based services are available.

1. At the **Settings** menu, press  for **Location**.

The following options appear in the display:

- **Location On** — GPS location setting is on whenever you make or receive a call, wherever the feature is available.
 - **911 Only** — GPS location setting is on only when you dial 911.
2. Use the navigation keys to highlight the option you want.
 3. Press the  key to select the desired Location setting. You're returned to the **Settings** menu.







Call Settings

The Call Settings options let you select how your phone handles voice and data calls.

Call Answer

You can select a specific answer mode when you receive an incoming call. Your phone can be preset to answer when you do any of the following:

- Press any key
- Press the Send key
- Open the slide

1. At the **Settings** menu, press  (for **Call Settings**) and  for **Call Answer**. The **Call Answer** sub-menu with the following options appears in the display:
 - **Any Key** — Press any key except the , , or left soft key () to answer an incoming call.
 - **Send Key** — Press  to answer an incoming call.
 - **Slide Up** — Slide the phone open to answer an incoming call.

Tip: You can set your phone to answer calls automatically, without any input from you. (See "Auto Answer" on page 144 for more information.)

2. Use the navigation keys to highlight the method you wish to use for answering calls, then press the  key.

Auto Answer

Auto Answer enables your phone to automatically answer calls after a period of time that you specify.

1. At the **Settings** menu, press **2** sec (for **Call Settings**) and **2** sec for **Auto Answer**. The following options appear in the display:
 - **Off** — Disables automatic answering of calls
 - **After 1 Second** — Phone automatically answers calls after 1 second
 - **After 3 Seconds** — Phone automatically answers calls after 3 seconds
 - **After 5 Seconds** — Phone automatically answers calls after 5 seconds
2. Use the navigation keys to highlight the desired setting, then press the **OK** key.

Auto Retry

Auto Retry automatically re-dials a number if the connection fails. Depending upon your location, the number of times your phone automatically dials the number may vary.





1. At the **Settings** menu, press **2** sec (for **Call Settings**) and **3** sec for **Auto Retry**. The **Auto Retry** sub-menu with the following options appears in the display:
 - **Off** — Disables automatic redialing of numbers
 - **Every 10 Seconds** — Phone automatically redials a number every 10 seconds
 - **Every 30 Seconds** — Phone automatically redials a number every 30 seconds
 - **Every 60 Seconds** — Phone automatically redials a number every 60 seconds
2. Use the navigation keys to highlight the desired setting, then press the **OK** key.


TTY Mode

Your phone is fully TTY compatible. TTY equipment is connected to your phone through the headset connector on the left side of the phone. TTY must be enabled before you can use your phone with a TTY device.

1. At the **Settings** menu, press **2** sec (for **Call Settings**) and **4** sec for **TTY Mode**. You are prompted to confirm you want to change the current TTY Mode setting.




Note: The "Enabling TTY may impair headset use and non-TTY accessory performance" message pops up when you select **TTY Mode**.

2. Press the **Yes** (left) soft key () to access the TTY Mode options or press the **No** (right) soft key () to return to the **Call Settings** sub-menu.
3. If you press the **Yes** (left) soft key (), the following options appear in the display:
 - **TTY Full** — Enables TTY mode and disables microphone and earpiece
 - **TTY + Talk (VCO)** — Enables TTY mode and microphone
 - **TTY + Hear (HCO)** — Enables TTY mode and earpiece
 - **TTY Off** — Disables TTY mode
4. Use the navigation keys to highlight your selection and press the  key to save your selection.

Note: The TTY icon () appears in the top of the display when the phone is in standby mode.




Voice Privacy

Voice Privacy when enabled (that is, set to **Enhanced**, turns on advanced voice encryption.

1. At the **Settings** menu, press  (for **Call Settings**) and  for **Voice Privacy**. The following options appear in the display:
 - **Standard** — Voice privacy is disabled
 - **Enhanced** — Voice privacy is enabled
2. Use the **Up** and **Down** navigation keys to highlight the Voice Privacy option of your choice, then press . Your settings are saved.

Data Settings

Use the **Data Settings** menu to configure data connection settings.

1. At the **Settings** menu, press  (for **Call Settings**) and  for **Data Settings**.
2. The following options appear in the display:
 - **Data Off** — No incoming data calls accepted.
 - **Data For Next Call** — Wait for data call for the next 10 minutes.
 - **Data Until Powered Off** — Data calls only, no voice calls accepted, until you power the phone off and on again.
3. Use the **Up** and **Down** navigation keys to highlight the data setting of your choice, then press . Your setting is saved.

International Dialing

Use this option to select a frequently-dialed country code for dialing by the **International Dialing** shortcut. (For more information on using the International Dialing shortcut, see “*Dialing International Numbers*” on page 22)

1. In the **Settings** menu, press **2** (for **Call Settings**), and **7** for **International Dialing**. A list of country codes appears in the display.
2. Use the Navigation key to highlight the country code of your choice, then press **OK**. Your new International Dialing shortcut setting is saved.

Phone Settings

Airplane Mode

When set to **On**, Airplane Mode disables all radio functions of your phone. This prevents you from receiving or making calls (except emergency calls), but allows you to use other features (such as the camera and the Tools) safely in sensitive environments, such as on board an aircraft.

1. At the **Settings** menu, press **3** (for **Phone Settings**) and **1** for **Airplane Mode**. The following options appear in the display:
 - **Off** — Enables the radio transmitter and receiver in your phone
 - **On** — Disables the radio transmitter and receiver in your phone
2. Use the navigation keys to highlight the desired option, then press the **OK** key to save your setting.

Shortcut Key

Shortcut Key lets you set which feature, function, or application launches when you press the Up navigation key while in standby mode.

1. At the **Settings** menu, press **3** (for **Phone Settings**) and **2** for **Shortcut Key**. The following options appear in the display:
 - **My Images**
 - **My Ringtones**
 - **My Sounds**
 - **Inbox**
 - **Tools**
 - **Calculator**
 - **Tip Calculator**
 - **Converter**
 - **Calendar**
 - **Alarm Clock**

- **Stop Watch**

2. Use the navigation keys to highlight the desired option, then press the **OK** key to save your setting.

Language

The language option on your phone can change the language of voice prompts, menus, and key-input.

1. At the **Settings** menu, press **3** (for **Phone Settings**) and **3** for **Language**. The following options appear in the display:
 - **English**
 - **Español**
2. Use the navigation keys to highlight your language preference, then press the **OK** key.

Security

Use the Security menu to lock your phone, set up emergency numbers, enable or disable voice privacy, set restrictions, as well as other security options.

Lock Phone

Locking the phone limits all outgoing calls except calls to 911 emergency and the three user-programmable emergency numbers. You can lock the phone manually during use, or set the phone to lock automatically when it is turned on. With the phone in lock mode, you can answer incoming calls, but you must unlock the phone to place outgoing calls (except to emergency and secret numbers).

1. At the **Settings** menu, press **3** (for **Phone Settings**) and **4** for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Press **1** for **Lock Phone**. The following Device Lock Mode options appear in the display:
 - **Lock** — Locks the phone immediately (The phone stays locked until you enter the lock code.)
 - **Unlock** — Unlocks the phone
 - **On Power up** — The phone locks automatically the next time your phone is powered on (The phone stays locked until you enter the lock code.)
3. Use the navigation keys to highlight the Device Lock Mode option of your choice.
4. Press the **OK** key to perform the function for the highlighted option.

Change Lock

The default lock code for your phone is generally the last four digits of your phone number. It is advisable to change the default lock code to a secret code for security purposes.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**) and **4th** for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Press **2nd** for **Change Lock**. You're prompted to enter the new lock code.
3. Enter the new lock code. You're prompted to re-enter the new lock code for verification.
4. Enter the new lock code again. Your changes are stored.

Note: Your phone does not allow you to view the lock code for obvious security reasons. If you change the lock code, be sure to write down or memorize the new code.

Emergency

Your phone provides the option of storing three emergency numbers. Each number can be up to 32 digits in length. All emergency numbers can be manually called at any time, even when your phone is locked or restricted. This can be a useful feature for controlling outgoing calls from your phone.

Note: Emergency number 911 is hard-coded into your phone. You can dial this number any time, even when the phone is locked or restricted. If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

Important!: Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

Important!: DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.


- **Store Emergency Numbers**

1. At the **Settings** menu, press **3rd** (for **Phone Settings**) and **4th** for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Enter the lock code, then press **3rd** for **Emergency #**.
3. Press **1st**, **2nd**, or **3rd** to select from the three emergency number entries.
4. Enter an emergency number (up to 32 digits in length).
5. Press the **OK** key to save the number that you entered.

- **Call Emergency Numbers in Lock Mode**



1. In standby mode, enter the emergency number.
2. Press the  key to place the call.

Resetting Your Phone

Reset Phone returns all setup options to their factory default.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**) and **4th** for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Enter the lock code, then press **4th** for **Reset Phone**. A prompt appears in the display asking if you wish to restore default settings (except for the Contacts and Voice Dial).
3. Press the **Yes** (left) soft key () to restore default settings or press the **No** (right) soft key () to return to the **Security** sub-menu.

Erase All Entries

Erase All Entries erases all information from your Contacts list.

Note: To completely remove any personal information stored on your device, see "Precautions for Transfer and Disposal" on page 179.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**) and **4th** for **Security**.
The "**Enter code**" prompt appears in the display.
2. Enter the four-digit lock code using the keypad.



Note: The default lock code is the last four digits of your mobile phone number.

The “**Enter Code**” prompt disappears and the **Security** menu appears in the display.

3. Press **5** for **Erase All Entry**. The “**Enter code**” prompt appears in the display.
 4. Enter the four-digit lock code using the keypad.
-

Note: The default lock code is the last four digits of your mobile phone number.

The “**Erase All Entries?**” prompt appears in the display.

5. Press the **Yes** (left) soft key () to erase all Contacts list entries. Press the **No** (right) soft key () to keep the current Contacts list entries.

Restriction

Restriction lets you limit the use of your phone to make outgoing calls and/or to receive incoming calls to any numbers, to no numbers, or to calls from/to your Contacts.


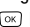
1. At the **Settings** menu, press **3** (for **Phone Settings**) and **4** for **Security**.

The “**Enter code**” prompt appears in the display.

2. Enter the four-digit lock code using the keypad.
-

Note: The default lock code is the last four digits of your mobile phone number.

The “**Enter Code**” prompt disappears and the **Security** menu appears in the display.

3. Press **6** for **Restriction**.
4. Use the navigation keys to select **Outgoing** or **Incoming**.
5. Press the  key.
6. Use the navigation keys to highlight **Allow All**, **Allow None**, or **Allow Contacts**, then press the  key.

NAM Selection

The **Network** menu allows you to select **NAM** (Number Assignment Module) settings for your phone. You can store two **NAM** settings, which are essentially telephone numbers, for your phone.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**), and **5th** for **NAM Selection**. The following options appear in the display:
 - **NAM1** — Your service contract has one phone line.
 - **NAM2** — Your service contract has two phone lines.
2. Use the navigation keys to highlight the desired option, then press the **OK** key to save your setting.

The phone powers itself off and back on.

System Select

The **System Select** menu allows you to select the roaming setting for your phone.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**), and **6th** for **System Select**. The following roaming options appear in the display:
 - **Home only** — Your phone is available for normal operation only within your designated coverage area.
 - **Automatic** — The Preferred Roaming List (PRL) is used to acquire service. If no preferred systems are found, any digital system is acquired.
2. Use the navigation keys to highlight the desired roaming option, then press the **OK** key to save your setting.

Set Time

Use the **Set Time** option to set the current date and time.

Note: In digital service mode, the **Set Time** feature is disabled. The network adjusts time and date automatically.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**), and **7th** for **Set Time**. The following options appear in the display:
 - **Set Date**
 - **Set Time**
2. Use the navigation keys to highlight the desired option, then press the **OK** key.
 - For **Set Date**, the **Set Date** screen appears in the display.
 - For **Set Time**, the **Set Time** screen appears in the display.
 - Enter the current time using your keypad.
The hour and minute must be entered using two digits each and in 12-hour format.
 - Use the **Left** and **Right** navigation keys to select **am** or **pm**.
 - Press **OK** to save the your time setting.

- Enter the current date using your keypad.
The month and day must be entered using two digits each. The year must be entered using all four digits.
- Press **OK** to save your date setting.

Quick Search

Quick Search is an easy way to locate Menu items and Contacts.

1. At the **Settings** menu, press **3** (for **Phone Settings**), and **8** for **Quick Search**. The following options appear in the display:
 - **On** — Quick Search is enabled
 - **Off** — Quick Search is disabled
2. Use the navigation keys to highlight the desired Quick Search option, then press the **OK** key to save your setting.

Searching for a Menu Item

1. In standby mode, press the first few numeric keys that correspond to the letters of the Menu item name.
For example, to search for “Inbox” you would enter:






 I N B O X

2. Press the **Down** navigation key. The **Menu List** screen appears in the display with the first menu item matching your entry highlighted.
3. Press the **OK** key to access the content of the menu item.


Searching for a Contact

1. In standby mode, press the first few numeric keys that correspond to the letters of the contacts name.
For example, to search for “Sally” you would enter:






 S A L L Y

2. Press the **Up** navigation key. The Find screen appears in the display with the first contact name matching your entry highlighted.
3. Press the  key to call the contact.

PC Connection

PC Connection allows you to select how you want to connect your phone to your personal computer.

Tip: For more information on using **PC Connection**, contact U.S. Cellular.

1. At the **Settings** menu, press **3rd** (for **Phone Settings**), and **9th** for **PC Connection**. The following options appear in the display:
 - **USB** — Enable a Universal Serial Bus connection
 - **Bluetooth** — Enable a Bluetooth wireless connection
 - **No Connection** — Disable PC Connection
2. Use the navigation keys to highlight the desired PC Connection option, then press the **OK** key to save your setting.

Memory Info

Memory Info lets you review your phone's available memory to help you manage your files stored there.

1. At the **Settings** menu, press **4th** for **Memory Info**. The **Memory Info** screen appears in the display showing the following information:
 - **Save Options**
 - **Images** (Phone Memory/Card Memory)
 - **Videos** (Phone Memory/Card Memory)
 - **Phone Memory**
 - **Memory Usage** (Total Used memory, Available unused memory, My Images memory usage, My Videos memory usage, My Ringtones memory usage, My Sounds memory usage, Applications memory usage)
 - **My Images**
 - **My Videos**
 - **My Ringtones**
 - **My Sounds**
 - **Card Memory**
 - **Memory Usage** (Total Used memory, Available unused memory, My Images memory usage, My Videos memory usage, My Ringtones memory usage, My Sounds memory usage, Applications memory usage)
 - **My Images**
 - **My Videos**
 - **My Music**
 - **Format Card**

2. Press the **OK** key to return to the **Phone Memory** menu.

Phone Info

The Phone Info options show you the hardware and software versions of your phone, definitions of the icons that appear at the tops of the phone displays, and the phone number assigned to your phone.

Phone Number

This option causes the Phone Number screen to appear in the display and show the ten-digit number assigned to your phone by U.S. Cellular.

1. At the **Settings** menu, press **5** **PH** (for **Phone Info**) and **1** **NUM** for **Phone Number**. The phone number assigned by U.S. Cellular appears in the display.
2. Press **OK** to return to the **Phone Info** menu.

Icon Glossary

This option causes the Icon Glossary list to appear in the display and show the icons that can appear in the display and the names of the icons.

1. At the **Settings** menu, press **5** **PH** (for **Phone Info**) and **2** **ICN** for **Icon Glossary**. A list of the icons that can appear on the top line of the display shows in the display.
2. Press **OK** to return to the **Phone Info** menu.

Version

You can view both the software and hardware version of your phone using this feature. This feature is helpful if you need to contact Customer Service.

1. At the **Settings** menu, press **5** **PH** (for **Phone Info**) and **3** **VER** for **Version**. Your phone's software (S/W), preferred roaming list (PRL), **easyedge**SM (Easyedge), and hardware (H/W) information appears in the display.
2. Press **OK** to return to the **Phone Info** menu.

Section 15: Health and Safety Information

Topics Covered

- Health and Safety Information
 - Samsung Mobile Products and Recycling
 - UL Certified Travel Adapter
 - Consumer Information on Wireless Phones
 - Road Safety
 - Responsible Listening
 - Operating Environment
 - Using Your Phone Near Other Electronic Devices
 - Potentially Explosive Environments
 - Emergency Calls
 - FCC Notice and Cautions
 - Other Important Safety Information
 - Product Performance
 - Availability of Various Features/Ring Tones
 - Battery Standby and Talk Time
 - Battery Precautions
 - Care and Maintenance
-

This section outlines the safety precautions associated with using your phone.

These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

Health and Safety Information

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- **Part 22**
 - **Head:** 1.0 W/kg
 - **Body-worn:** 0.816 W/kg
- **Part 24**
 - **Head:** 0.545 W/kg;

– **Body-worn:** 0.703 W/kg

SAR information on this and other model phones can be viewed on-line at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <http://www.samsung.com/us/consumer/type/type.do?group=mobilephones&type=mobilephones> for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/1/2006):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/homepage.html>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>

- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.hpa.org.uk/radiation>
- US Food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com.

Important!: If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Responsible Listening

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, you noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device. Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.
- Should read and follow the directions from the manufacturer of your implantable medical device. if you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see, <http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Emergency Calls


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and

Battery Precautions

accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.

- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-Ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 16: Warranty Information

Topics Covered

- Standard Limited Warranty
-

Standard Limited Warranty

What is Covered and For How Long? SAMSUNG

TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

Standard Limited Warranty

- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE

OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important! Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Standard Limited Warranty

Samsung Telecommunications America, LLC
1301 East Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG (726-7864)

Important! If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2007 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.
Specifications and availability subject to change without notice.

Index

A

Adjust

- key beep 90
- Ringer setting 19

Alerts 89

Applications

- buying 82
- cancelling subscription 82
- disabled 83
- expired 83
- removing 83
- restoring 83

B

Backlight settings 87

Banner 87

Banner, creating 87

Battery 5

- Charging 7
- Low battery indicator 8
- Removal 6
- Travel adapter 7

Buying new applications 82

C

Call Answer mode 17

Call Functions

- Adjusting the Call Volume 28
- Answering a Call 27
- Call Log 28
- Making a Call — Number
 - Entry Dialing 21
- Making a Call — Speed
 - Dialing 23, 25

Call Options

- Auto Answer 144

- Auto Retry 144
- Call Answer 143
- Data 145
- TTY 144

Call Settings 143

- International Dialing 146

Camcorder 91

- Options 105
- Screen Icons 96
- Taking Videos 91

Camera 91

- Brightness 111
- Color Tones 101, 108
- Multi Shot 99
- My Images 111
- Options 97
- Save Pictures 97
- Screen Icons 95
- Taking Pictures 91
- Zoom 111

Camera mode 20

Camera Options

- Resolution 100

Change menu style 85

Clear key 15

Contacts List 48

- Open 49

Create messages 65

D

Dial Digits 86

Disabled applications 83

Display 84

Display screen icons 16

Display settings 84

- backlight 87
- banner 87
- menu style 85

Display sub menu 84

Draft folder 73

Draft messages 73

E

easyedgeSM 80

Help 81

Settings 81

Shopping and

downloading 80

Emergency Calls 21

End key 15

Entering Text

Entering Numbers 47

Entering Symbols 46

Using Abc Mode 46

Using T9 Mode 45

Erase messages 76

Expired applications 83

G

General message settings 78

Getting Started 4

Activating Your Phone 5

Understanding this User

Manual 4

Voicemail 8

Go back one menu 36

H

Health and Safety Information 155

I

Icon Glossary 154

Inbox folder 71

Input mode 17

International Calls 22

International Dialing 146

In-use menu 27

K

Key tone 90

L

Language 147

Left soft key 14

Lock mode 18

M

Memo Pad

Add a Memo 134

Review, edit, and erase
memos 135

Menu Navigation 36

Menu Outline 37

Menu style, changing 85

Menu, in-use options 27

Message folder

draft box 73

inbox 71

outbox 72

voice 76

voice mail 76

Message Folders

Erase messages 76

Message settings, general 78

Messages and lock mode 73

Messages, creating 65

Messages, receive in call 70

Messaging

Types of Messages 64

Mode

Call answer 17

Camera 20

Input 17

Lock 18

Silent 18

Standby 18

Talk 18

Vibrate 19
Msg setting sub menu 77
Multi shot 99
Multimedia 114
My Images 111

N

Navigation key 15
Navigation key shortcuts 37
Notes and tips 4
Notes, description 4
Number Entry Dialing 21

O

OK key 14
Outbox folder 72
Outbox, reviewing messages 72

P

Personal Organizer

Alarm Clock 135
Calculator 137
Calendar 133
Memo Pad 134
World Time 136

Phone Info 154

Icon Glossary 154
Phone Number 154
Version 154

Phone Number 154

Photos

Sending 112

Picture message settings 79

Picture messages

online viewing 71
receiving 71
Send in camera mode 66

Q

Quality, pictures 99, 107

Quick Text

Editing and Adding 78

R

Receive messages in call 70
Receive Pic. messages 71
Receive text messages 70
Record memos 119
Removing applications 83
Responsible Listening 165
Restoring applications 83
Return to last menu 36
Reviewing outbox 72
Right soft key 14
Ringer types, assigning 89
Roaming 34

S

Safe Use of your phone 157

Save pictures 97

Screen Layouts 94

Security Settings 147

Change Lock 148
Emergency # 148
Lock Phone 147
Resetting Your Phone 149
Restriction 150

Send key 15

Send Pic messages 112

Set Time 151

Settings 142

Call 143
Display 84
Picture messages 79
Security 147
Text messages 79

Setup

Location 143

Shortcut to menus 37

Shutter sound 104

Silent mode

Entering 18

Exiting 19

Sounds 88

Speed Dialing 23

One-Touch Dialing 23

Three Touch Dialing 24

Two-Touch Dialing 24

Standard Limited Warranty 176

Standby mode 18

Subscriptions, cancelling 82

T

Taking pictures and videos 91

Talk mode 18

Text entry modes 65

Text message settings 79

Text messages, receiving 70

Text Modes

changing 44

Time, set 151

Tip, description 4

Tools 125

Tools Menu 125

TTY Mode 144

U

Understanding Your Contacts 48

Adding a New Contact

Entry 49

Deleting a Contact Entry 63

Editing an Existing Contact

Entry 55

Finding a Contact Entry 52

Memory 63

Pauses 56

Understanding Your Phone 9

Closed View of Your Phone 10

Command Keys 14

Display Screen 16

Features of Your Phone 9

Open View of Your Phone 11

V

Version 154

Vibrate mode 19

Voice Dialing 25

Voice folder 76

Voice Launch 131

Voice mail

checking 76

Voice Memo

Record memos 119

Review memos 119

Voice Service 126

Voicemail 8

Listening to 8

VoiceSignal

About VoiceSignal 131

W

Warranty Information 176

